


# Viking Installation Guide

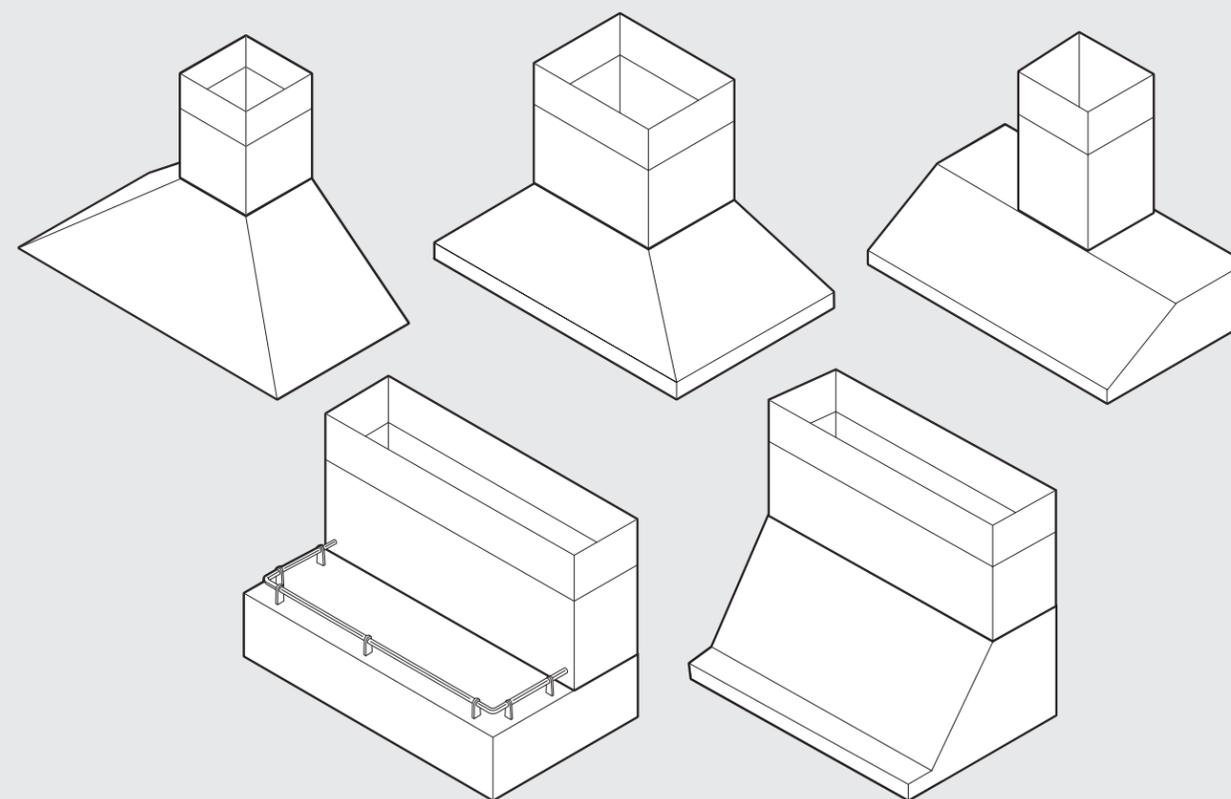

Viking Range Corporation  
111 Front Street  
Greenwood, Mississippi 38930 USA  
(662) 455-1200

For product information,  
call 1-888-VIKING1 (845-4641)  
or visit the Viking Web site at  
[vikingrange.com](http://vikingrange.com)



(062207J)

Designer Hoods

# Table of Contents

|  |     |
|--|-----|
| Warnings & Important Information   | 3-4 |
| DCH 12"H. Classic Chimney Wall Hoods w/Standard Ventilator   |     |
| Dimensions & Specifications  | 5   |
| Clearance Dimensions   | 6   |
| Interior Ventilator Dimensions   | 7   |
| DCWH/DCWN/DCWL Classic Chimney Wall Hoods—<br>Ledgeless & Ledge 30", 33", 36", 39", 42", 45", 48", & 51" |     |
| Dimensions & Specifications  | 8   |
| Clearance Dimensions   | 9   |
| Interior Ventilator Dimensions   | 10  |
| Exterior Ventilator Dimensions   | 11  |
| DCIH Classic Chimney Island Hoods 36", 42", & 54"  |     |
| Dimensions & Specifications  | 12  |
| Clearance Dimensions   | 13  |
| Interior Ventilator Dimensions   | 14  |
| Exterior Ventilator Dimensions   | 15  |
| DTWS Slim Traditional Wall Hoods 30", 36", 42", & 48"  |     |
| Dimensions & Specifications  | 16  |
| Clearance Dimensions   | 17  |
| Interior Ventilator Dimensions   | 18  |
| Exterior Ventilator Dimensions   | 19  |
| DTWL/DTWN Tall Traditional Wall Hoods—Ledgeless & Ledge 30", 36", 42", & 48"                             |     |
| Dimensions & Specifications  | 20  |
| Clearance Dimensions   | 21  |
| Interior Ventilator Dimensions   | 22  |
| Exterior Ventilator Dimensions   | 23  |
| DSWB Box Wall Hoods 30", 36", 42", & 48"   |     |
| Dimensions   | 24  |
| Clearance Dimensions   | 25  |
| Interior Ventilator Dimensions   | 26  |
| Exterior Ventilator Dimensions   | 27  |
| Planning Information   | 28  |
| Installation Procedure   |     |
| Installation (DCH 12"H. Classic Chimney Wall Hoods w/Standard Ventilator)                                | 29  |
| Duct Cover Option (DCH 12"H. Classic Chimney Wall Hoods w/Standard Ventilator)                           | 31  |
| Installation (DCH 12"H. Classic Chimney Wall Hoods w/Recirculating Kit)                                  | 32  |
| Installation (DCWH/DCWN/DCWL Classic Chimney &<br>DTWL/DTWN Tall Traditional Wall Hoods)                 | 34  |
| Duct Cover Option (DCWH/DCWN/DCWL Classic Chimney Wall Hoods)  | 35  |
| Duct Cover Option (DTWL/DTWN Tall Traditional Wall Hoods)  | 36  |
| Installation (DTWS Slim Traditional & DSWB Box Wall Hoods)   | 36  |
| Duct Cover Option (DTWS Slim Traditional Wall Hoods)   | 38  |
| Duct Cover Required (DSWB Box Wall Hoods)  | 39  |
| Installation (DCIH Classic Chimney Island Hoods)   | 40  |
| Wiring Diagram   | 42  |
| Service & Registration   | 43  |

# IMPORTANT—Please Read and Follow!

**NOTE:** If installing hood with warming shelf panel, install warming shelf panel first.

## IMPORTANT – PLEASE READ AND FOLLOW

- Before beginning, please read these instructions completely and carefully.
- Do not remove permanently affixed labels, warnings, or plates from the product. This may void the warranty.
- Please observe all local and national codes and ordinances. If no local codes are applicable, wire in accordance with the National Electrical Code, ANSI/NFPA 70-latest edition.
- Outdoor approved models should be installed in a covered non-enclosed area and should be protected from the elements as much as possible.
- The installer should leave these instructions with the consumer who should retain for local inspector's use and for future reference.
- Check with a qualified and trained installer or local codes for makeup air requirement, if any.

This hood is for residential installation only and is not designed for installation over a commercial product. Make sure power is off at the main circuit breaker or fuse box before making connections. To avoid risk of fire, electric shock, or injury to persons, turn off the electricity to the hood from the power supply before servicing or cleaning.

Viking hoods are equipped with the variable speed controls for blowers. These units will not function with a single speed ventilator. All Viking ventilator kits are designed specifically for use with Viking hoods. Use of any non-Viking ventilator kit will void the hood warranty.

## READ AND SAVE THESE INSTRUCTIONS

### ⚠ WARNING

#### TO REDUCE THE RISK OF A RANGETOP GREASE FIRE

1. Never leave surface units unattended at high setting. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
2. Always turn hood ON when cooking at high heat or when cooking flaming foods. (i.e. crepes suzette, cherries jubilee, peppercorn beef flambé).
3. Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.
4. Use proper pan size. Always use cookware appropriate for the size of the surface element.

### ⚠ WARNING

#### TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING

1. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
2. Sufficient air is needed for proper combustion and exhausting of gases through the flute (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
3. When cutting or drilling into wall or ceiling, do not damage electrical wiring or other hidden utilities.
4. Ducted fans must always be vented to the outdoors.
5. **WARNING!:** To reduce risk of fire, use only metal ductwork.
6. **CAUTION!:** To reduce risk of fire and to properly exhaust air, be sure to duct air outside. Do not vent exhaust air into spaces within walls or ceilings, or into attics, crawl spaces, or garages.
7. **CAUTION!:** To Reduce the Risk of Fire and Electric Shock, Install this rangehood only with remote blower models manufactured by Viking, model numbers – DEV900/DEV1200, VEV900/VEV1200, OR DEV1500, VEV1500 or integral blowers manufactured by Viking, model numbers – DIV300, DIV440, DIV600, DIV800, DIV1200, VIV300, VIV600, or VIV1200. NOTE – Please refer inside for specific canopy/blower combinations.

### ⚠ WARNING

#### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING

- Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.
- Before servicing or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

# IMPORTANT—Please Read and Follow!

## ⚠ WARNING

TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGETOP GREASE FIRE, OBSERVE THE FOLLOWING. (Based on "Kitchen Firesafety Tips," published by NFPA.)

1. SMOTHER FLAMES with a close fitted lid, cookie sheet, or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. If the flames do not go out immediately, EVACUATE AND CALL THE FIRE DEPARTMENT.
2. NEVER PICK UP A FLAMING PAN. You may be burned.
3. DO NOT USE WATER, including wet dishcloths or towels a violent steam explosion will result.
4. Use an extinguisher ONLY if
  - You know it is a Class ABC extinguisher, and you already know how to operate it.
  - The fire is small and contained in the area where it started.
  - The fire department is being called.
  - You can fight the fire with your back to an exit.

## ⚠ CAUTION

For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.

## ⚠ WARNING


TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY TO PERSONS

Rangehoods must be installed with the ventilators that are specified on their carton indicating suitability with this model. Other ventilators cannot be substituted.



# Dimensions & Specifications

(DCH 12"H. Classic Chimney Wall Hoods w/Standard Ventilator)

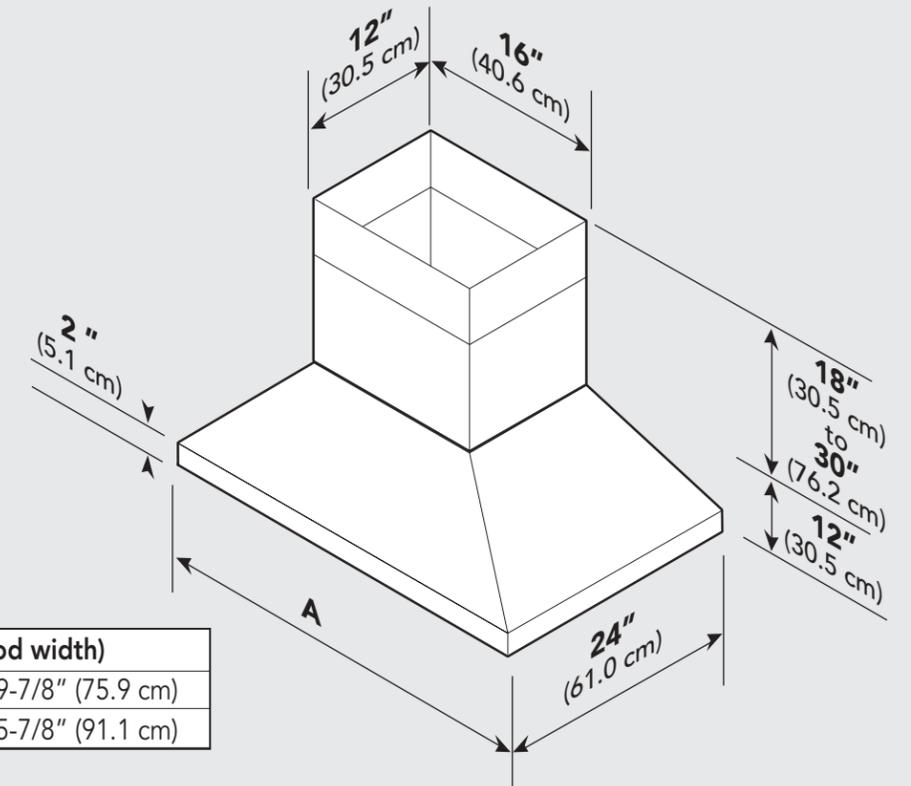

| A (Hood width) |                   |
|----------------|-------------------|
| 30"W.          | 29-7/8" (75.9 cm) |
| 36"W.          | 35-7/8" (91.1 cm) |

NOTE: Optional duct cover sold separately.


| DCH 12"H. Classic Chimney Wall Hoods w/Standard Ventilator |                                |     |
|--|--------------------------------|-----|
| Description  | 30"                            | 36" |
| Duct cover width   | 16" (40.6 cm)                  |     |
| Duct cover depth   | 12" (30.5 cm)                  |     |
| Duct cover height  | 18" (45.7 cm) to 30" (76.2 cm) |     |
| Number of lights   | 2                              |     |
| Number of filters  | 2                              |     |
| Interior ventilator kit                                    | 460 CFM                        |     |
| Interior duct size*  | 7" (17.8 cm)                   |     |
| Interior—Maximum amps                                      | 5.6                            |     |

\* Disregard when using recirculating kits. 460 CFM blower is shipped with hood.

NOTE: All products must be hard wired with 2-wire with ground.


# Clearance Dimensions

(DCH 12"H. Classic Chimney Wall Hoods w/Standard Ventilator)

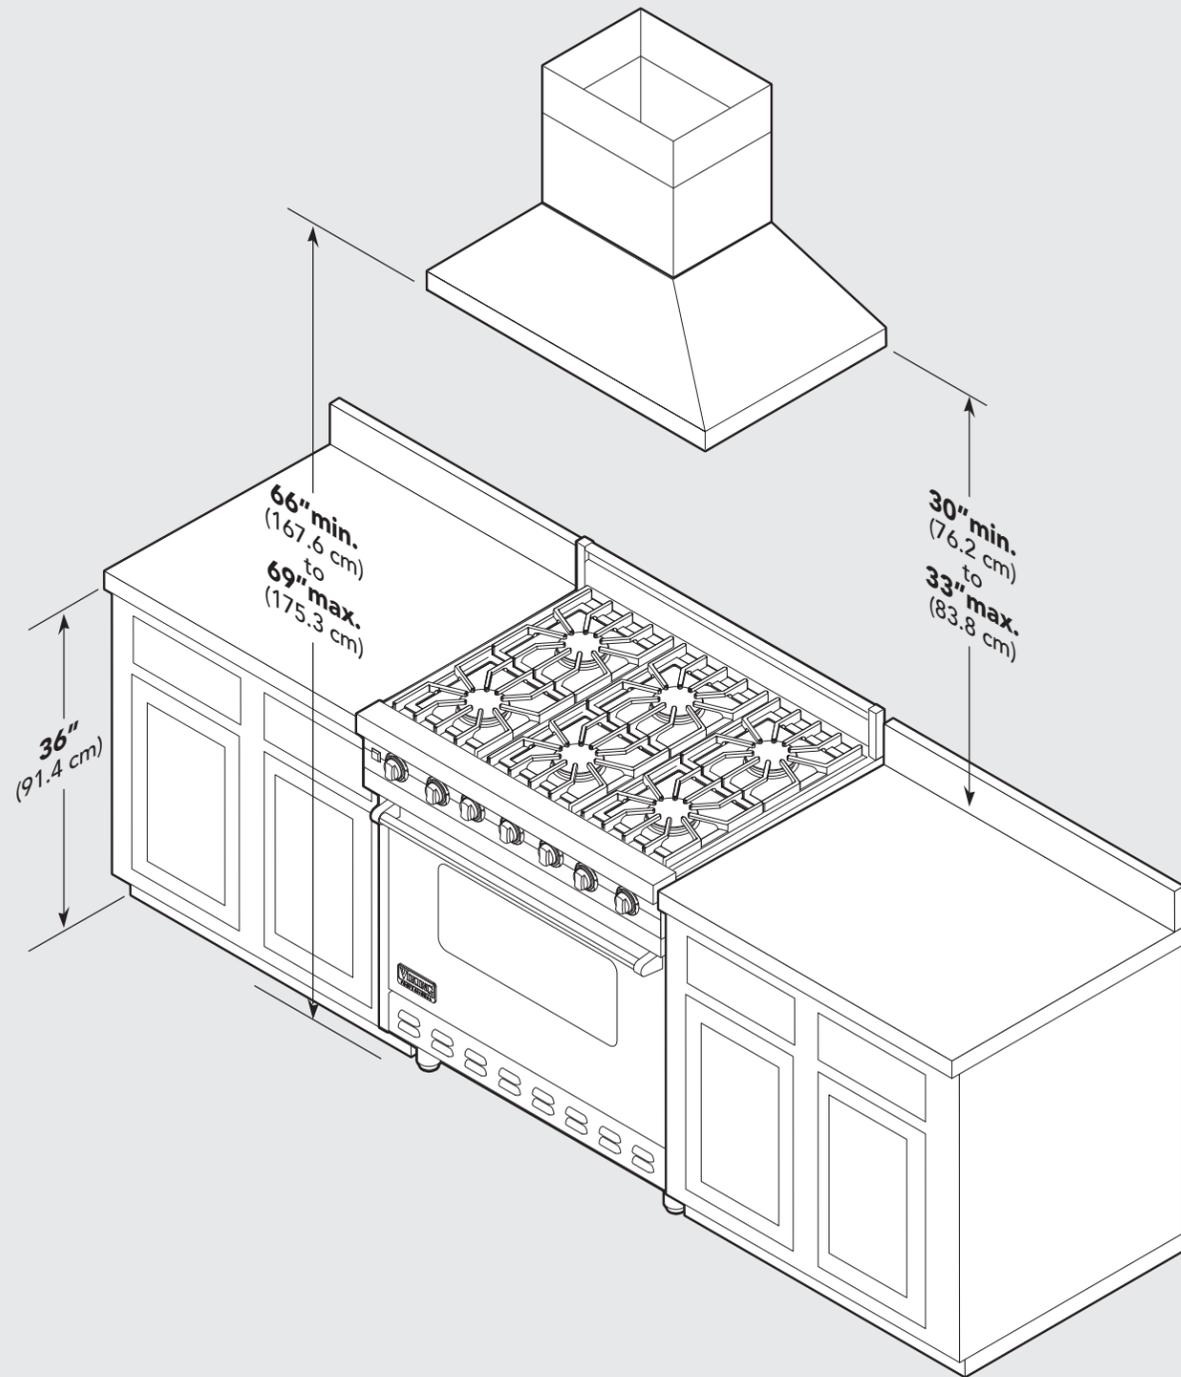

# Interior Ventilator Dimensions

(DCH 12"H. Classic Chimney Wall Hoods w/Standard Ventilator)

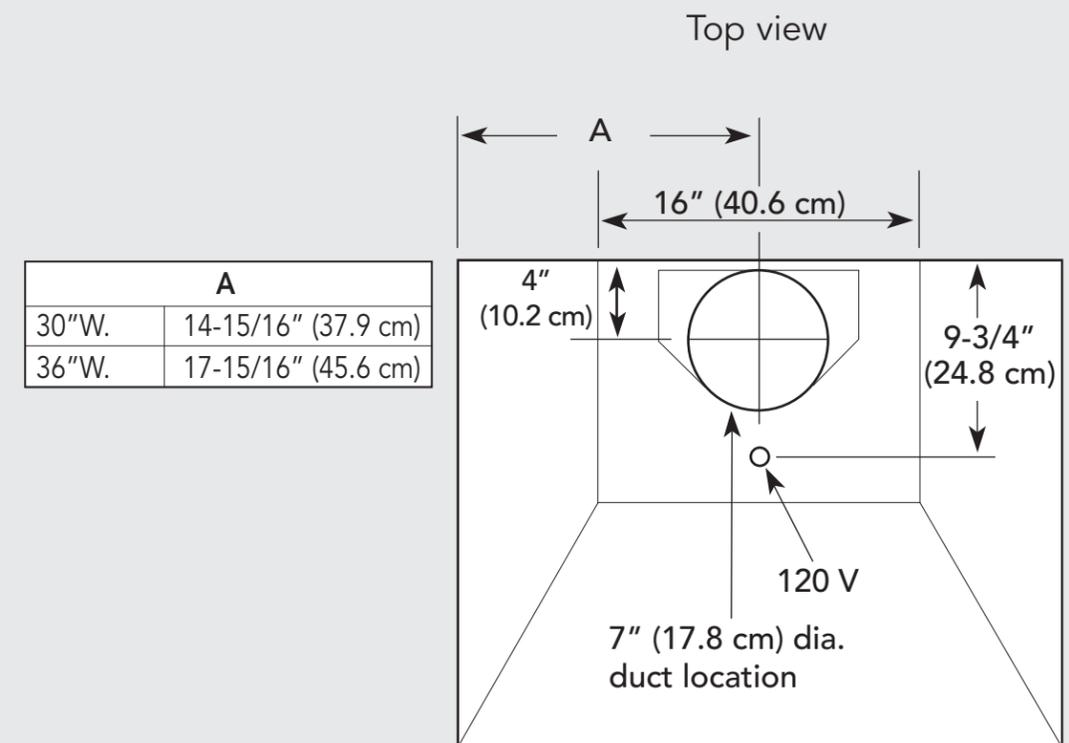

460 CFM Interior Ventilator Installation

# Dimensions & Specifications

(DCWH Classic Chimney Wall Hoods 30", 36", 42", & 48")


(DCWN Ledgeless models 30", 36", 42", & 48")

(DCWL Ledge models 33", 39", 45", & 51")

| A (Duct cover width) |               |
|----------------------|---------------|
| 30"W.                | 10" (25.4 cm) |
| 33"W.                | 10" (25.4 cm) |
| 36"W.                | 12" (30.5 cm) |
| 39"W.                | 12" (30.5 cm) |
| 42"W.                | 12" (30.5 cm) |
| 45"W.                | 12" (30.5 cm) |
| 48"W.                | 18" (45.7 cm) |
| 51"W.                | 18" (45.7 cm) |

| B (Hood width) |                    |
|----------------|--------------------|
| 30"W.          | 29-7/8" (75.9 cm)  |
| 36"W.          | 35-7/8" (91.1 cm)  |
| 42"W.          | 41-7/8" (106.4 cm) |
| 48"W.          | 47-7/8" (121.6 cm) |

| C (Hood width—Ledge models) |                    |
|-----------------------------|--------------------|
| 33"W.                       | 32-7/8" (83.5 cm)  |
| 39"W.                       | 38-7/8" (98.4 cm)  |
| 45"W.                       | 44-7/8" (114.0 cm) |
| 51"W.                       | 50-7/8" (129.2 cm) |

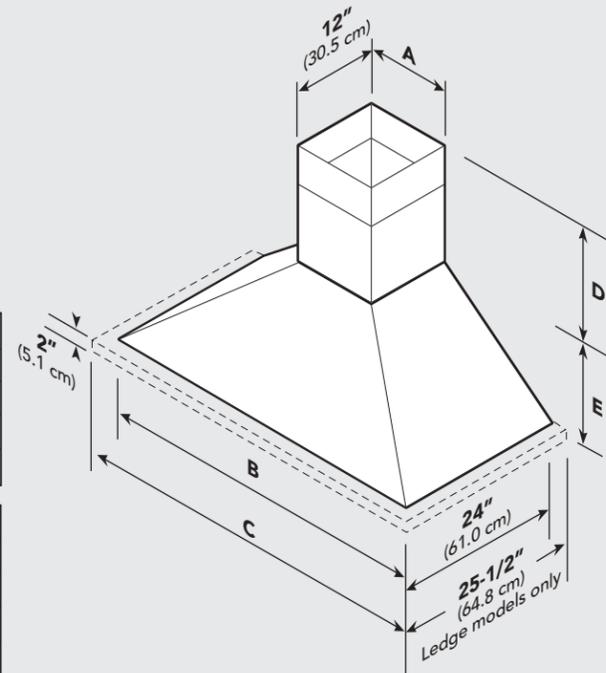

| D (Duct height) |                                |
|-----------------|--------------------------------|
| 30"/33"W.       | 18" (45.7 cm) to 30" (76.2 cm) |
| 36"/39"W.       | 16" (40.6 cm) to 28" (71.1 cm) |
| 42"/45"W.       |                                |
| 48"/51"W.       |                                |

| E (Hood height) |               |
|-----------------|---------------|
| 30"W.           | 12" (30.5 cm) |
| 33"W.           | 12" (30.5 cm) |
| 36"W.           | 14" (35.6 cm) |
| 39"W.           | 14" (35.6 cm) |
| 42"W.           | 14" (35.6 cm) |
| 45"W.           | 14" (35.6 cm) |
| 48"W.           | 14" (35.6 cm) |
| 51"W.           | 14" (35.6 cm) |

## DCWH/DCWN/DCWL Classic Chimney Wall Hoods—Ledgeless & Ledge

| Description              | 30"/33"                        | 36"/39"                        | 42"/45"                        | 48"/51"                        |
|--------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|
| Duct cover width         | 10" (25.4 cm)                  | 12" (30.5 cm)                  | 12" (30.5 cm)                  | 18" (45.7 cm)                  |
| Duct cover depth         | 12" (30.5 cm)                  |                                |                                |                                |
| Duct cover height        | 18" (45.7 cm) to 30" (76.2 cm) | 16" (40.6 cm) to 28" (71.1 cm) | 16" (40.6 cm) to 28" (71.1 cm) | 16" (40.6 cm) to 28" (71.1 cm) |
| Number of lights         | 2                              | 2                              | 2                              | 3                              |
| Number of filters        | 2                              | 2                              | 3                              | 3                              |
| Interior ventilator kits | DIV300/<br>DIV440              | DIV300/<br>DIV600              | DIV600                         | DIV1200*                       |
| Exterior ventilator kits | DEV900/<br>DEV1200*            | DEV900/<br>DEV1200*            | DEV900/<br>DEV1200*            | DEV1200*/<br>DEV1500**         |
| Interior duct size       | 7" (17.8 cm)                   | 7" (17.8 cm)                   | 7" (17.8 cm)                   | 10" (25.4 cm)                  |
| Exterior duct size       | 10" (25.4 cm)                  |                                |                                |                                |
| Interior—Maximum amps    | 1.7/3.2                        | 1.7/3.9                        | 3.9                            | 7.3                            |
| Exterior—Maximum amps    | 6.6/3.9                        | 6.6/3.9                        | 6.6/3.9                        | 4.3/5.1                        |


\* A 1,200 CFM interior- or exterior-power ventilator should be used when installed over range/rangetop with gas char-grill. Max duct run is 50 ft.

\*\* It is recommended that the 1,500 CFM ventilator be used with longer duct runs. Max duct run is 75 ft.

**NOTE:** Maximum amp rating for hoods includes recommended ventilator kit rating; All products must be hard wired with 2-wire with ground. An interior- or exterior-power ventilator kit must be purchased for installation with all Designer hoods.

# Clearance Dimensions


(DCWH/DCWN/DCWL Classic Chimney Wall Hoods)

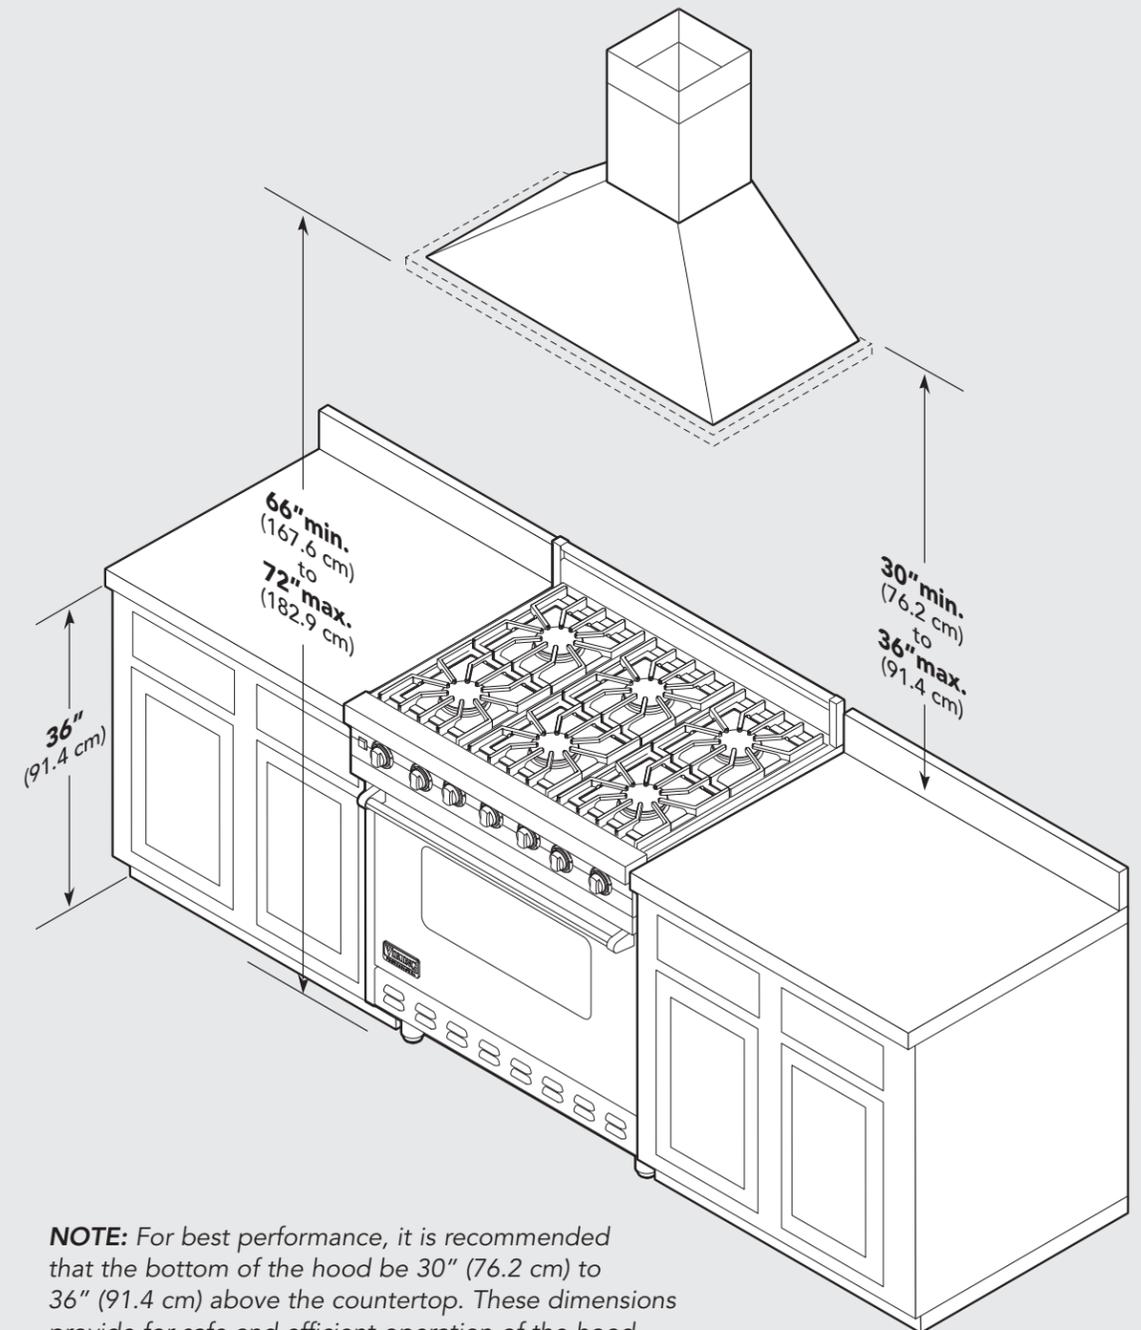

**NOTE:** For best performance, it is recommended that the bottom of the hood be 30" (76.2 cm) to 36" (91.4 cm) above the countertop. These dimensions provide for safe and efficient operation of the hood.

# Interior Ventilator Dimensions


(DCWH/DCWN/DCWL Classic Chimney Wall Hoods)

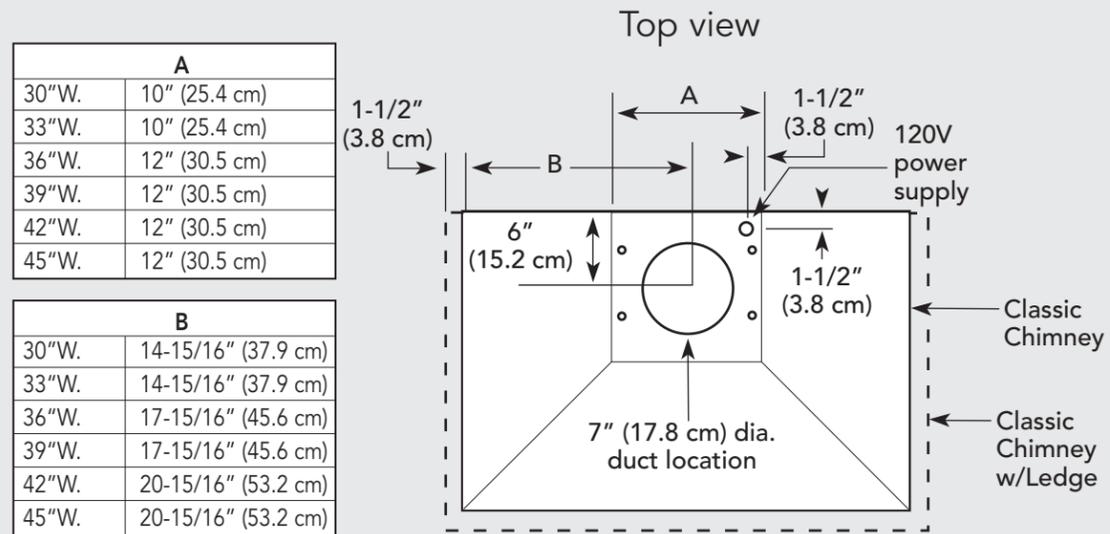


300, 440 or 600 CFM Interior Ventilator Installation for 30", 33", 36", 39", 42", & 45" models

# Exterior Ventilator Dimensions


(DCWH/DCWN/DCWL Classic Chimney Wall Hoods)

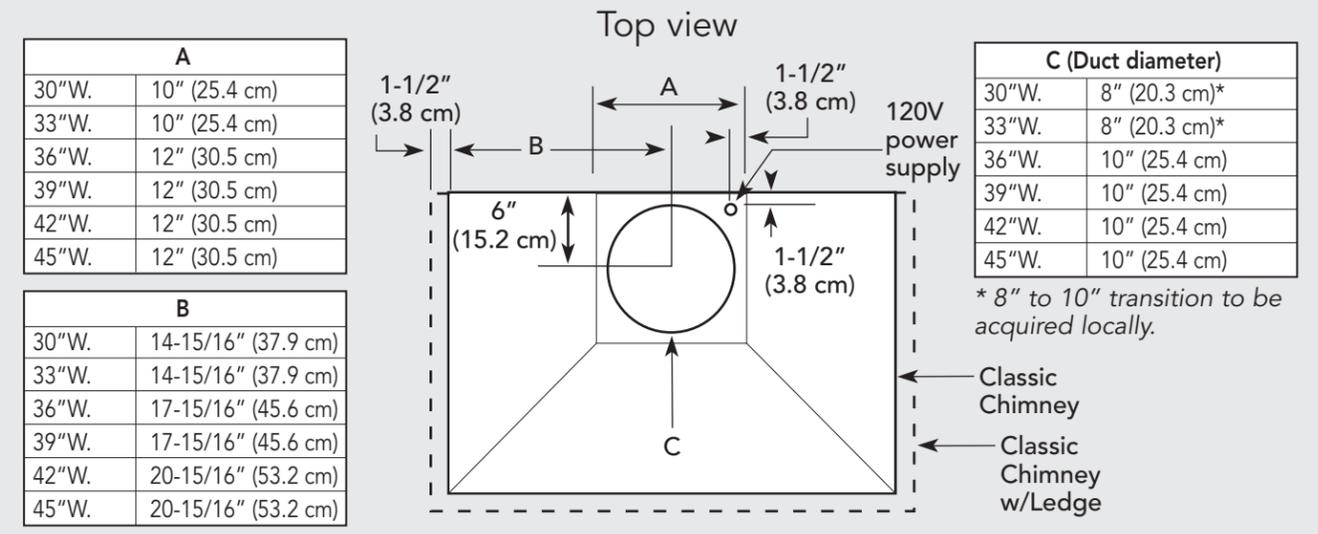

900 or 1200 CFM Exterior Ventilator Installation for 30", 33", 36", 39", 42", & 45" models

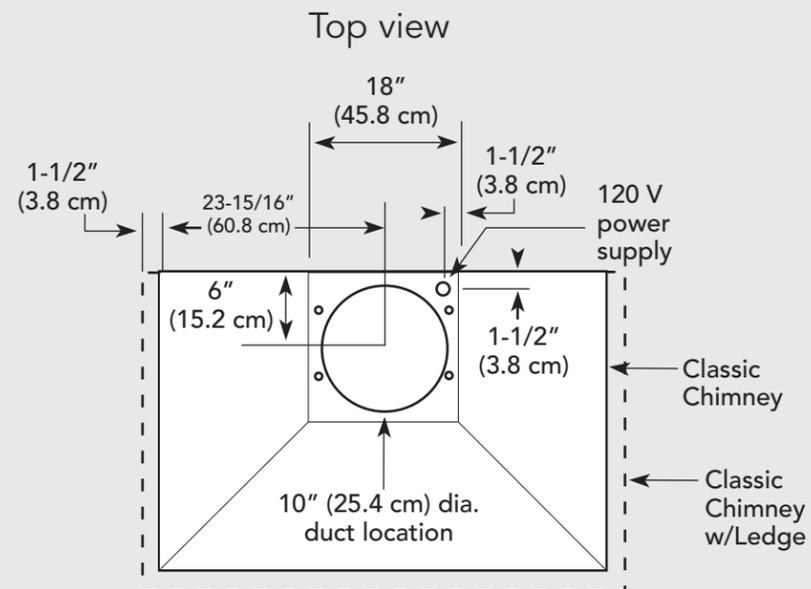

1200 CFM Interior Ventilator Installation for 48" & 51" models

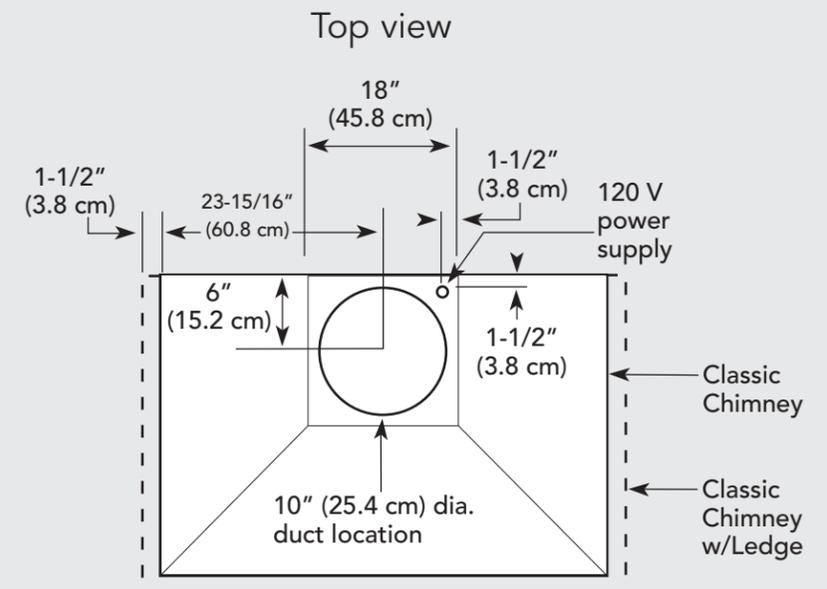


1200 or 1500 CFM Exterior Ventilator Installation for 48" & 51" models

# Dimensions & Specifications

(DCIH Classic Chimney Island Hoods 36", 42", & 54")

| A (Duct cover width) |               |
|----------------------|---------------|
| 36"W.                | 12" (30.5 cm) |
| 42"W.                | 12" (30.5 cm) |
| 54"W.                | 18" (45.7 cm) |

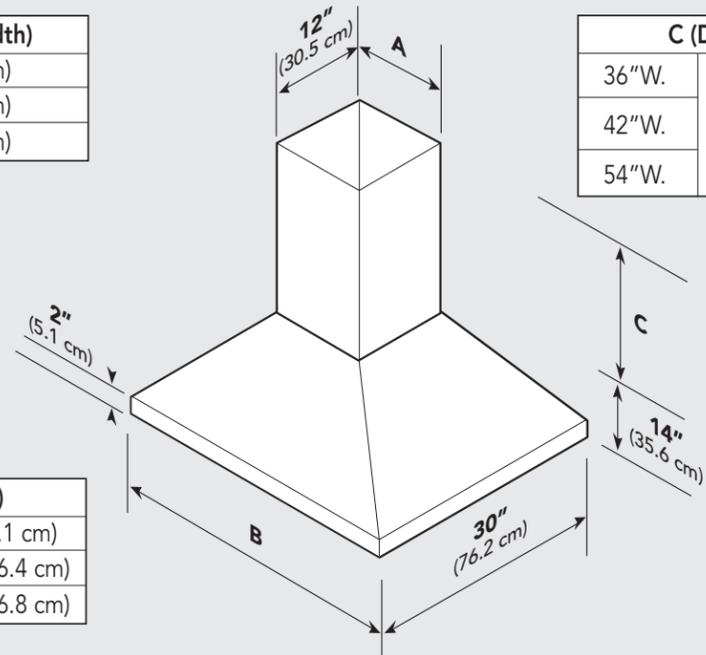

| C (Duct height) |                     |
|-----------------|---------------------|
| 36"W.           | 16" (40.6 cm)<br>or |
| 42"W.           | 28" (71.1 cm)<br>or |
| 54"W.           | 40" (101.6 cm)      |

| B (Hood width) |                    |
|----------------|--------------------|
| 36"W.          | 35-7/8" (91.1 cm)  |
| 42"W.          | 41-7/8" (106.4 cm) |
| 54"W.          | 53-7/8" (136.8 cm) |

NOTE: Optional duct cover sold separately.

| DCIH Classic Chimney Island Hoods |  |                               |                        |
|-----------------------------------|--|-------------------------------|------------------------|
| Description                       | 36"  | 42"                           | 54"                    |
| Duct cover width                  | 12" (30.5 cm)                                    | 12" (30.5 cm)                 | 18" (45.7 cm)          |
| Duct cover depth                  | 12" (30.5 cm)                                    |                               |                        |
| Duct cover height                 | 16" (40.6 cm) or 28" (71.1 cm) or 40" (101.6 cm) |                               |                        |
| Number of lights                  | 4  | 4                             | 6                      |
| Number of filters                 | 2  | 3                             | 3                      |
| Interior ventilator kits          | DIV600   | DIV600                        | DIV1200*               |
| Exterior ventilator kits          | DEV900/<br>DEV1200*                              | DEV900/<br>DEV1200*/DEV1500** | DEV1200*/<br>DEV1500** |
| Interior duct size                | 7" (17.8 cm)                                     | 7" (17.8 cm)                  | 10" (25.4 cm)          |
| Exterior duct size                | 10" (25.4 cm)                                    |                               |                        |
| Interior—Maximum amps             | 3.9  | 4.7                           | 8.6                    |
| Exterior—Maximum amps             | 6.6./3.9   | 7.4/4.7/5.5                   | 5.6/6.4                |


\* A 1,200 CFM interior- or exterior-power ventilator should be used when installed over range/range/hood with gas char-grill. Max duct run is 50 ft.

\*\* It is recommended that the 1,500 CFM ventilator be used with longer duct runs. Max duct run is 75 ft.

NOTE: Maximum amp rating for hoods includes recommended ventilator kit rating; All products must be hard wired with 2-wire with ground. An interior- or exterior-power ventilator kit must be purchased for installation with all Designer hoods.

# Clearance Dimensions


(DCIH Classic Chimney Island Hoods)

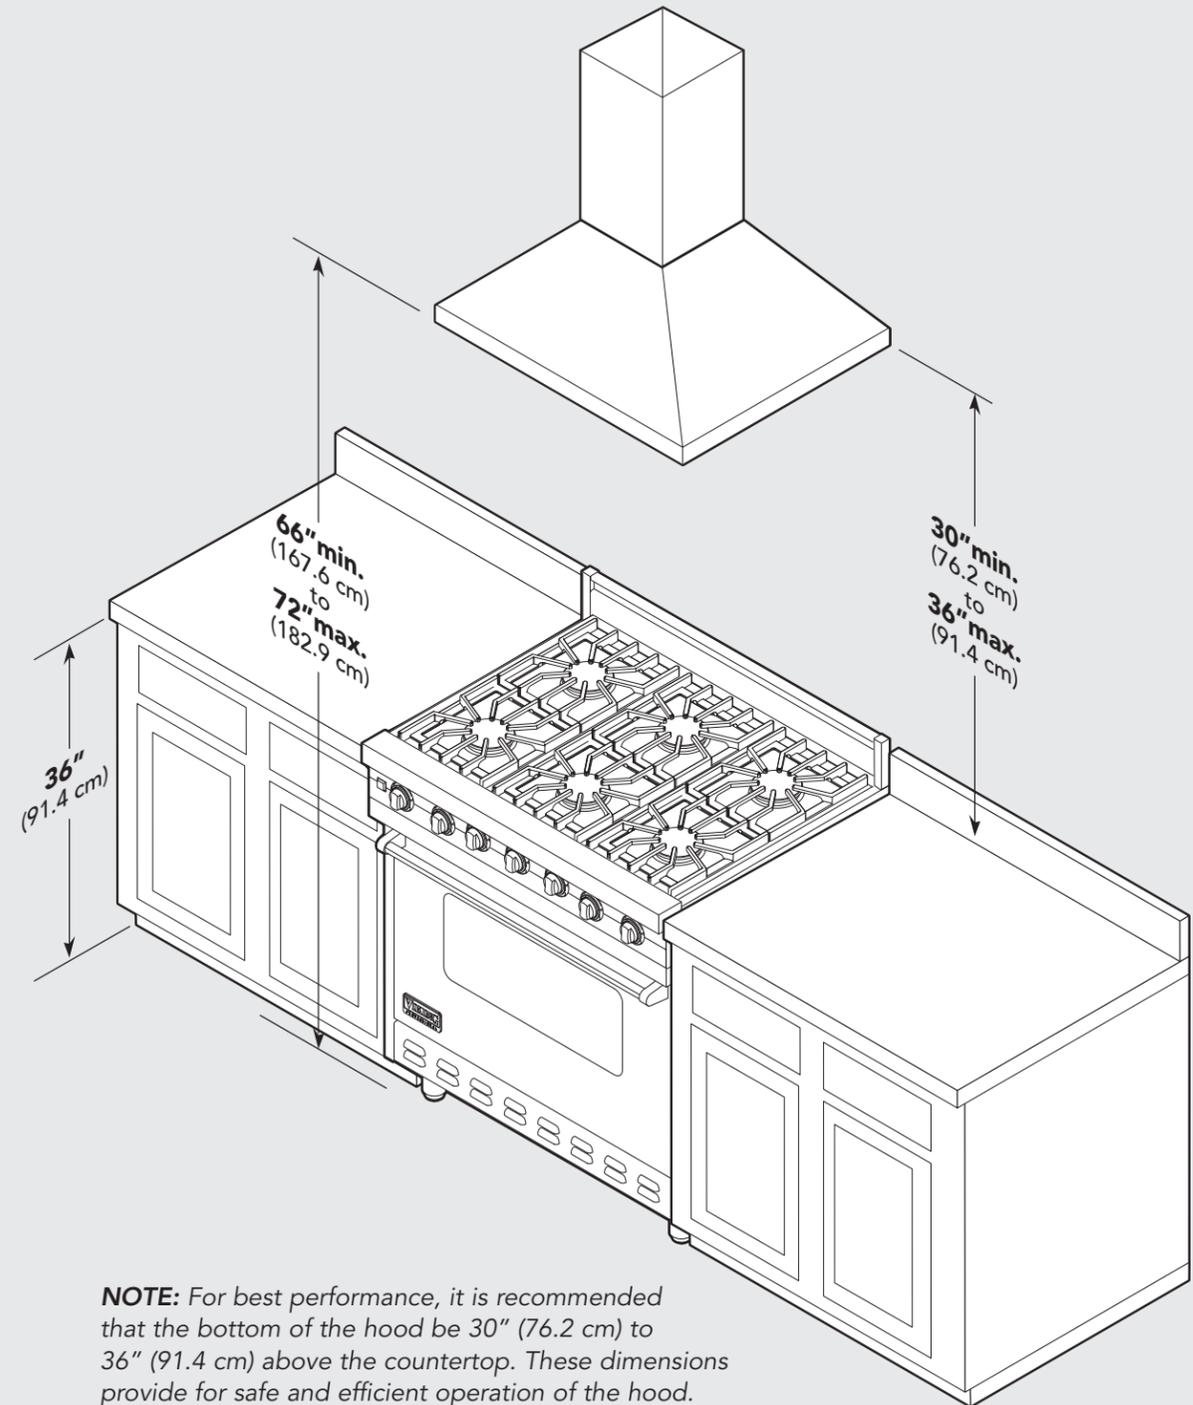

NOTE: For best performance, it is recommended that the bottom of the hood be 30" (76.2 cm) to 36" (91.4 cm) above the countertop. These dimensions provide for safe and efficient operation of the hood.

# Interior Ventilator Dimensions


(DCIH Classic Chimney Island Hoods)

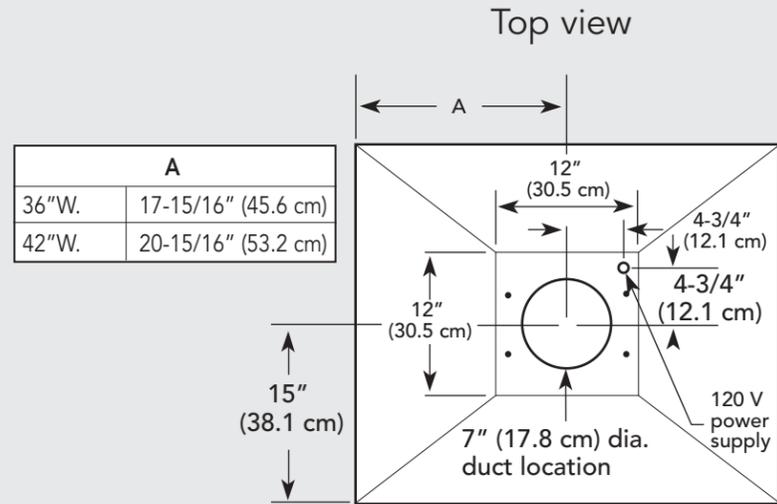


600 CFM Interior Ventilator Installation for 36" & 42" models

# Exterior Ventilator Dimensions


(DCIH Classic Chimney Island Hoods)

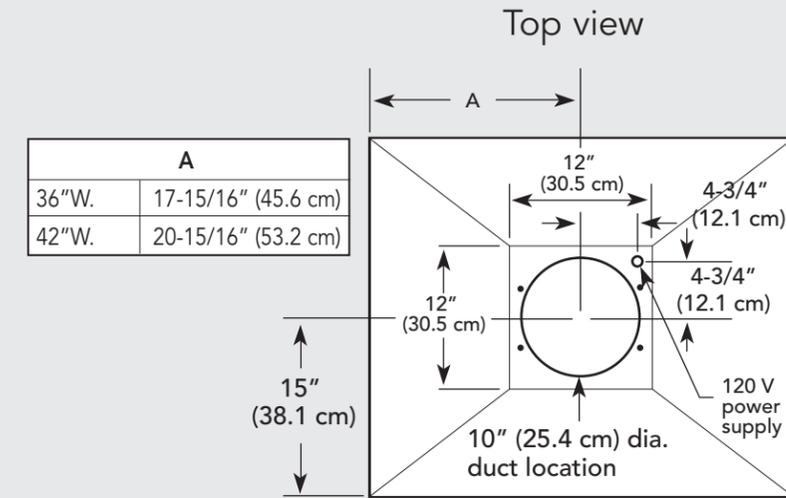

900 or 1200 CFM Exterior Ventilator Installation for 36" & 42" models

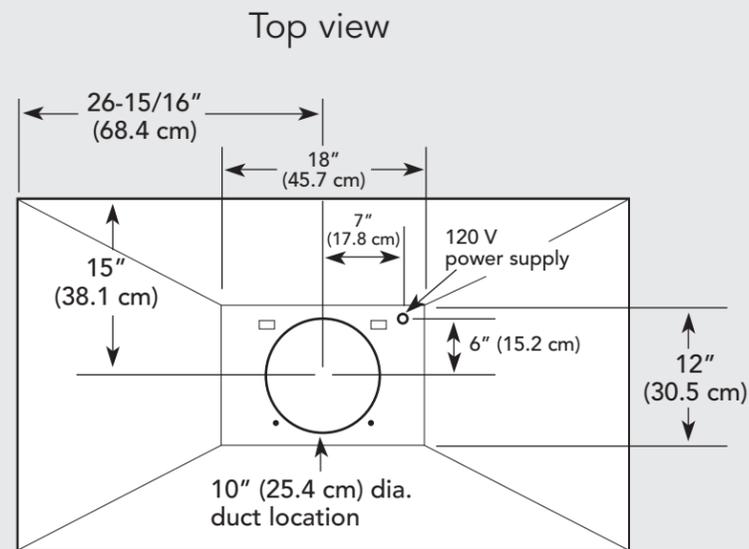

1200 CFM Interior Ventilator Installation for 54" models

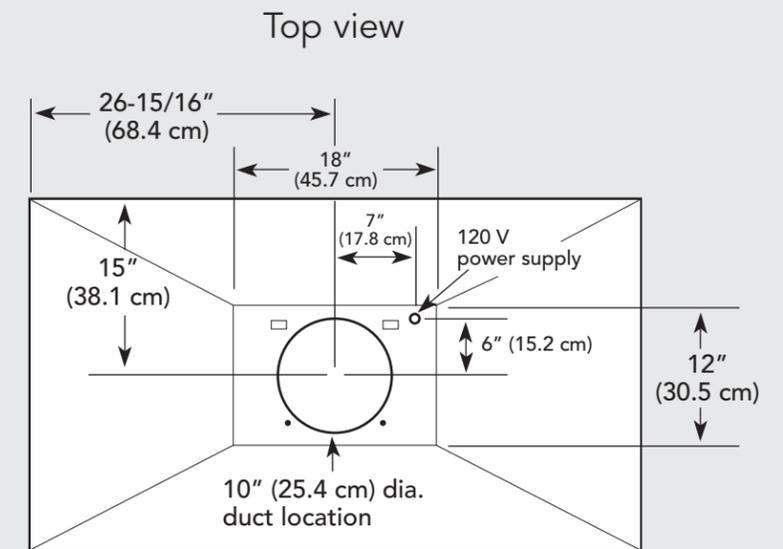


1200 or 1500 CFM Exterior Ventilator Installation for 54" models

# Dimensions & Specifications

(DTWS Slim Traditional Wall Hoods 30", 36", 42", & 48")

| A (Duct cover width) |               |
|----------------------|---------------|
| 30"W.                | 12" (30.5 cm) |
| 36"W.                | 12" (30.5 cm) |
| 42"W.                | 12" (30.5 cm) |
| 48"W.                | 20" (50.8 cm) |

| B (Hood width) |                    |
|----------------|--------------------|
| 30"W.          | 29-7/8" (75.9 cm)  |
| 36"W.          | 35-7/8" (91.1 cm)  |
| 42"W.          | 41-7/8" (106.4 cm) |
| 48"W.          | 47-7/8" (121.6 cm) |

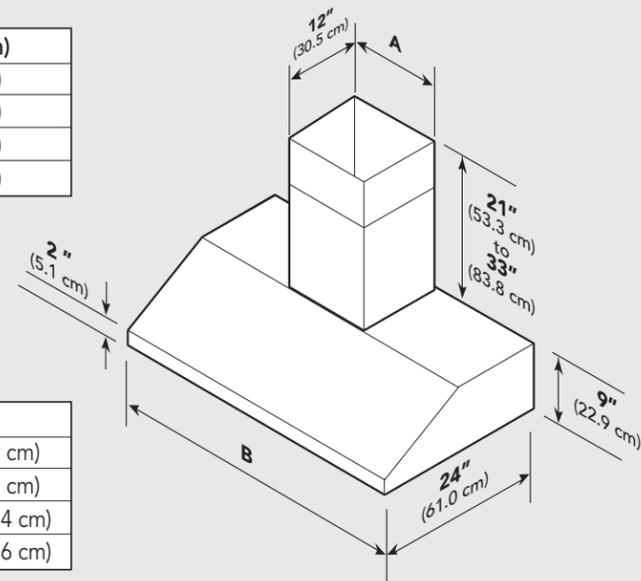

| DTWS Slim Traditional Wall Hoods |                                |                   |                 |                        |
|----------------------------------|--------------------------------|-------------------|-----------------|------------------------|
| Description                      | 30"                            | 36"               | 42"             | 48"                    |
| Duct cover width                 | 12" (30.5 cm)                  | 12" (30.5 cm)     | 12" (30.5 cm)   | 20" (50.8 cm)          |
| Duct cover depth                 | 12" (30.5 cm)                  |                   |                 |                        |
| Duct cover height                | 21" (53.3 cm) to 33" (83.8 cm) |                   |                 |                        |
| Number of lights                 | 2                              | 2                 | 2               | 3                      |
| Number of filters                | 2                              | 2                 | 3               | 3                      |
| Interior ventilator kits         | DIV300/<br>DIV440              | DIV300/<br>DIV440 | DIV440          | DIV880                 |
| Exterior ventilator kits         | DEV900                         | DEV900            | DEV900          | DEV1200*/<br>DEV1500** |
| Interior duct size               | 7"<br>(17.8 cm)                | 7"<br>(17.8 cm)   | 7"<br>(17.8 cm) | 10"<br>(25.4 cm)       |
| Exterior duct size               | 10" (25.4 cm)                  |                   |                 |                        |
| Interior—Maximum amps            | 1.7/3.2                        | 1.7/3.2           | 3.2             | 5.6                    |
| Exterior—Maximum amps            | 6.6                            | 6.6               | 6.6             | 4.3/5.1                |


\* A 1,200 CFM interior- or exterior-power ventilator should be used when installed over range/rangetop with gas char-grill. Max duct run is 50 ft.

\*\* It is recommended that the 1,500 CFM ventilator be used with longer duct runs. Max duct run is 75 ft.

**NOTE:** Maximum amp rating for hoods includes recommended ventilator kit rating; All products must be hard wired with 2-wire with ground. An interior- or exterior-power ventilator kit must be purchased for installation with all Designer hoods.

# Clearance Dimensions


(DTWS Slim Traditional Wall Hoods)

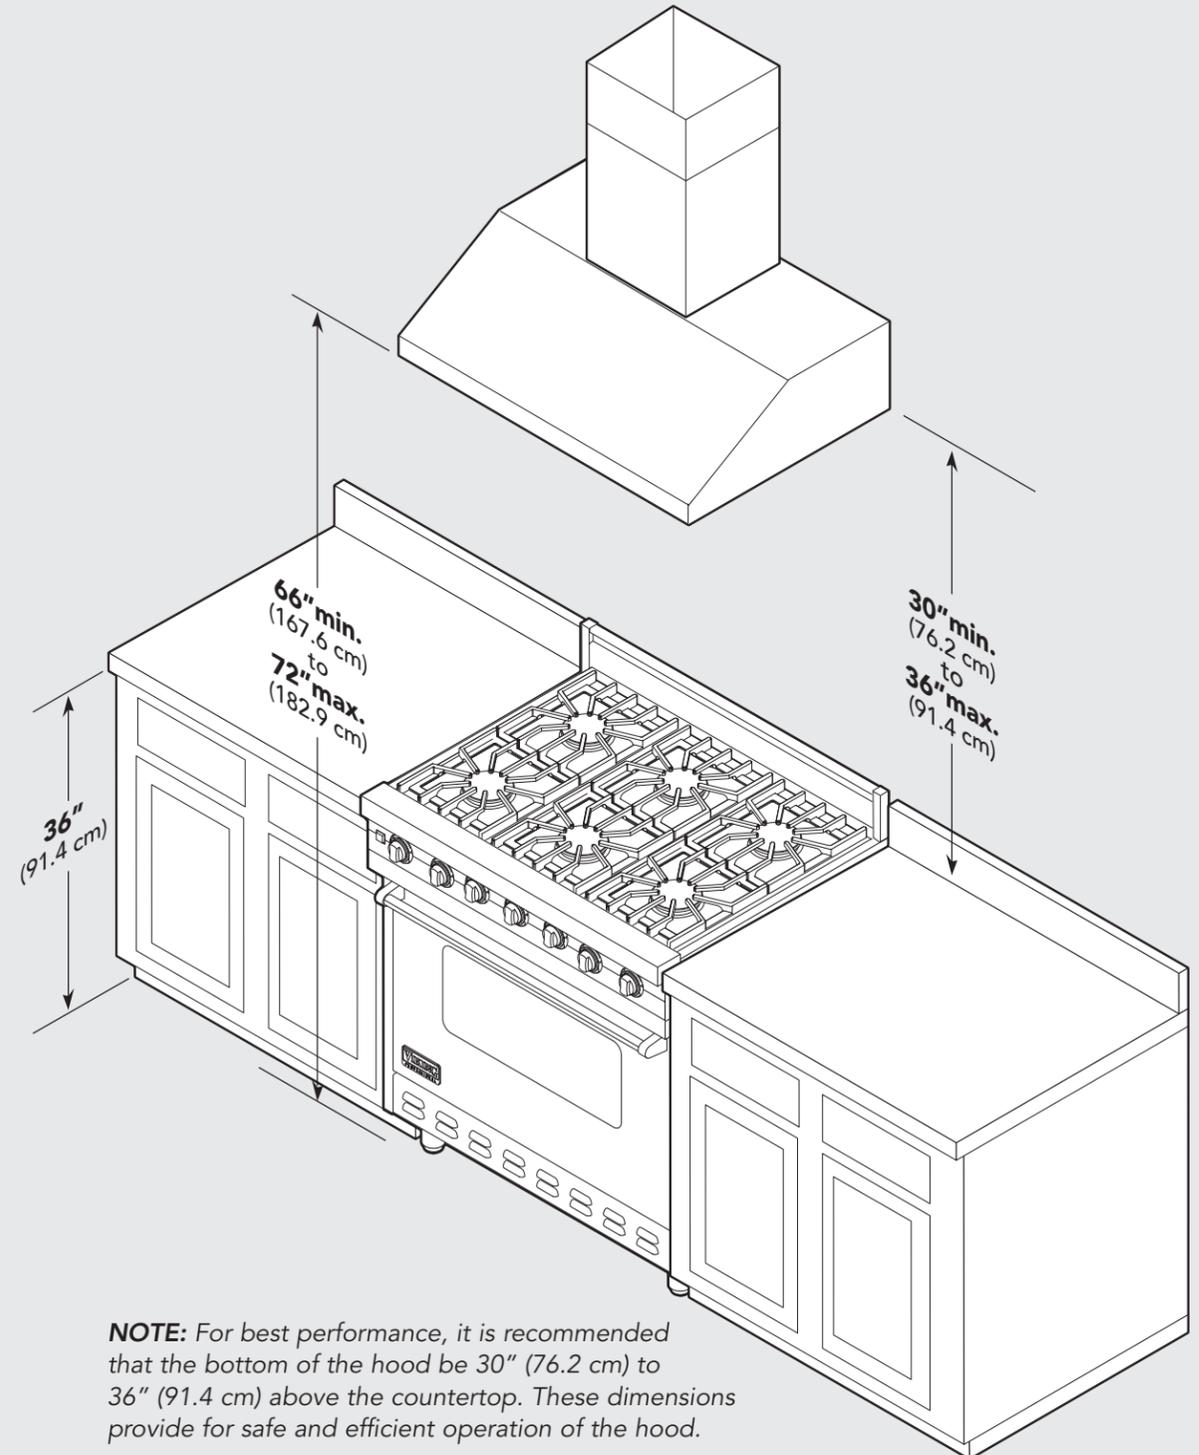

**NOTE:** For best performance, it is recommended that the bottom of the hood be 30" (76.2 cm) to 36" (91.4 cm) above the countertop. These dimensions provide for safe and efficient operation of the hood.

# Interior Ventilator Dimensions


(DTWS Slim Traditional Wall Hoods)

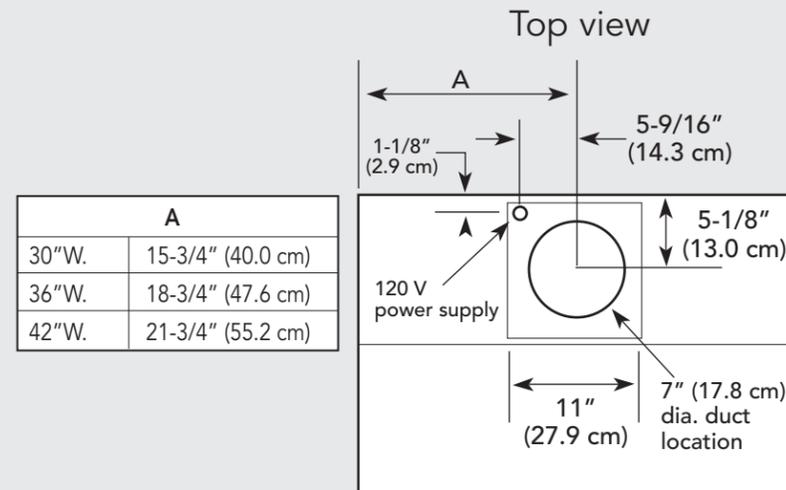


300 or 440 CFM Interior Ventilator Installation for 30", 36", & 42" models

# Exterior Ventilator Dimensions


(DTWS Slim Traditional Wall Hoods)

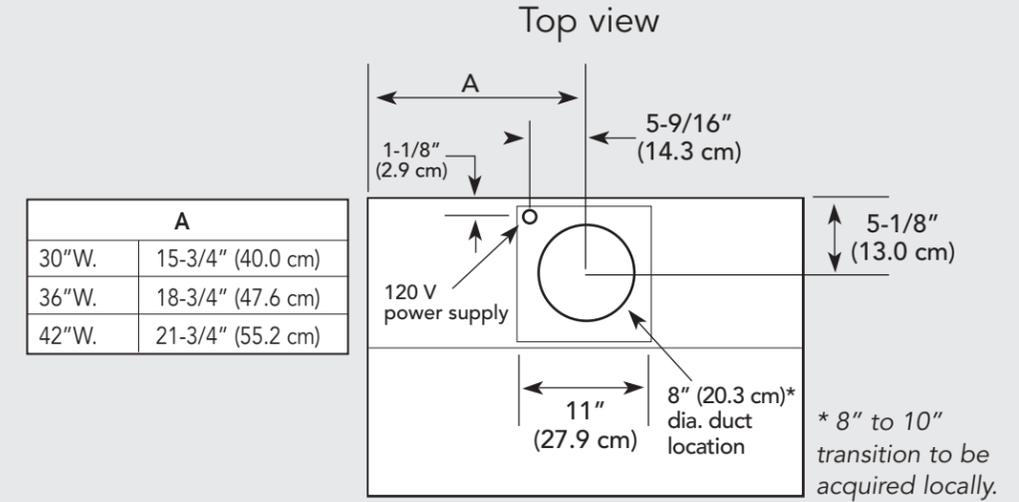

900 or 1200 CFM Exterior Ventilator Installation for 30", 36" & 42" models

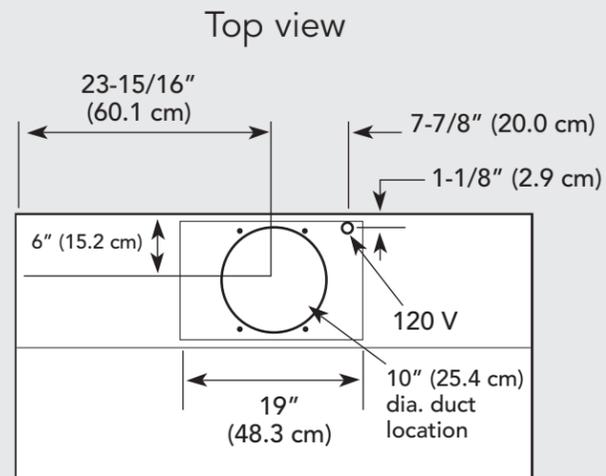

880 CFM Interior Ventilator Installation for 48" models

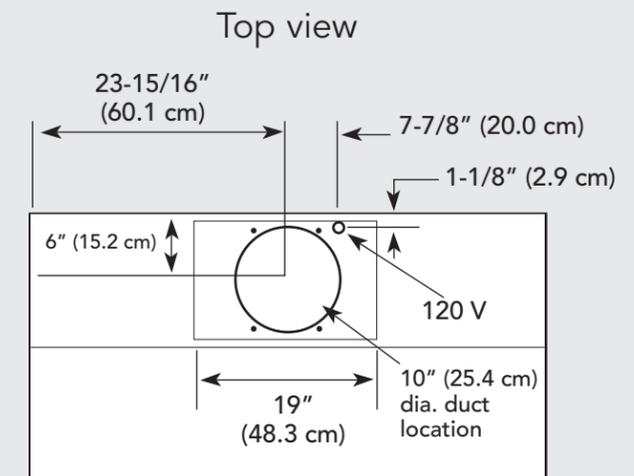


1200 or 1500 CFM Exterior Ventilator Installation for 48" models

# Dimensions & Specifications

(DTWL/DTWN Tall Traditional Wall Hoods—  
Ledgeless & Ledge 30", 36", 42", & 48")

| A (Duct cover width) |                    |
|----------------------|--------------------|
| 30"W.                | 29-7/8" (75.9 cm)  |
| 36"W.                | 35-7/8" (91.1 cm)  |
| 42"W.                | 41-7/8" (106.4 cm) |
| 48"W.                | 47-7/8" (121.6 cm) |

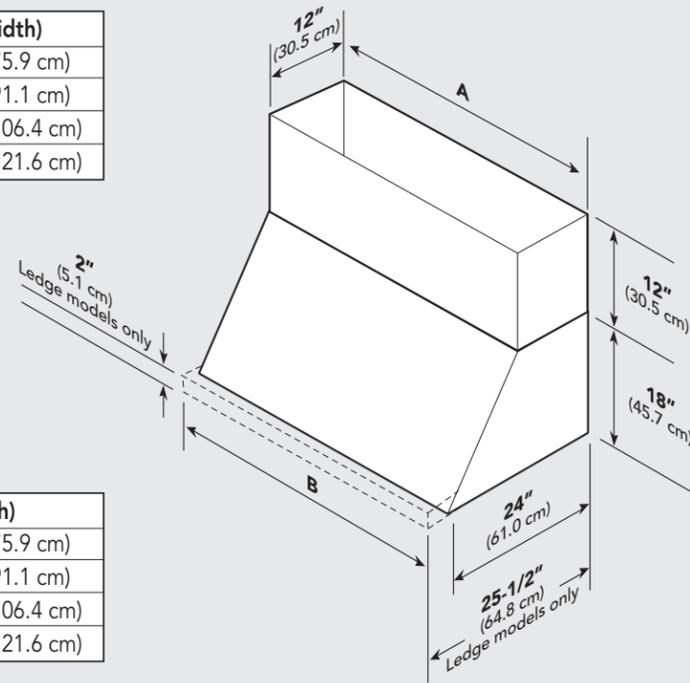

| B (Hood width) |                    |
|----------------|--------------------|
| 30"W.          | 29-7/8" (75.9 cm)  |
| 36"W.          | 35-7/8" (91.1 cm)  |
| 42"W.          | 41-7/8" (106.4 cm) |
| 48"W.          | 47-7/8" (121.6 cm) |


**NOTE:** Optional duct cover sold separately.

| DTWL/DTWN Tall Traditional Wall Hoods—Ledgeless & Ledge |                            |                            |                     |                    |
|---|----------------------------|----------------------------|---------------------|--------------------|
| Description   | 30"                        | 36"                        | 42"                 | 48"                |
| Duct cover width  | 29-7/8" (75.9 cm)          | 35-7/8" (91.1 cm)          | 41-7/8" (106.4 cm)  | 47-7/8" (121.6 cm) |
| Duct cover depth  | 12" (30.5 cm)              |                            |                     |                    |
| Duct cover height                                       | 12" (30.5 cm)              |                            |                     |                    |
| Number of lights  | 2                          | 2                          | 2                   | 3                  |
| Number of filters                                       | 2                          | 2                          | 3                   | 3                  |
| Interior ventilator kits                                | VIV300/<br>VIV600/VIV1200* | VIV300/<br>VIV600/VIV1200* | VIV600/<br>VIV1200* | VIV1200*           |
| Exterior ventilator kits                                | VEV900/1200*               | VEV900/1200*               | VEV900/1200*        | VEV1200*/1500**    |
| Interior duct size                                      | 7" (17.8 cm)               | 7" (17.8 cm)               | 7" (17.8 cm)        | 10" (25.4 cm)      |
| Exterior duct size                                      | 10" (25.4 cm)              |                            |                     |                    |
| Interior—Maximum amps                                   | 2.4/4.6/6.6                | 2.4/4.6/6.6                | 4.6/6.6             | 7.0                |
| Exterior—Maximum amps                                   | 6.6/3.9                    | 6.6/3.9                    | 6.6/3.9             | 4.3/5.1            |

\* A 1,200 CFM interior- or exterior-power ventilator should be used when installed over range/rangetop with gas char-grill. Max duct run is 50 ft.  
 \*\* It is recommended that the 1,500 CFM ventilator be used with longer duct runs. Max duct run is 75 ft.  
**NOTE:** Maximum amp rating for hoods includes recommended ventilator kit rating; All products must be hard wired with 2-wire with ground. An interior- or exterior-power ventilator kit must be purchased for installation with all Designer hoods.

# Clearance Dimensions


(DTWL/DTWN Tall Traditional Wall Hoods)

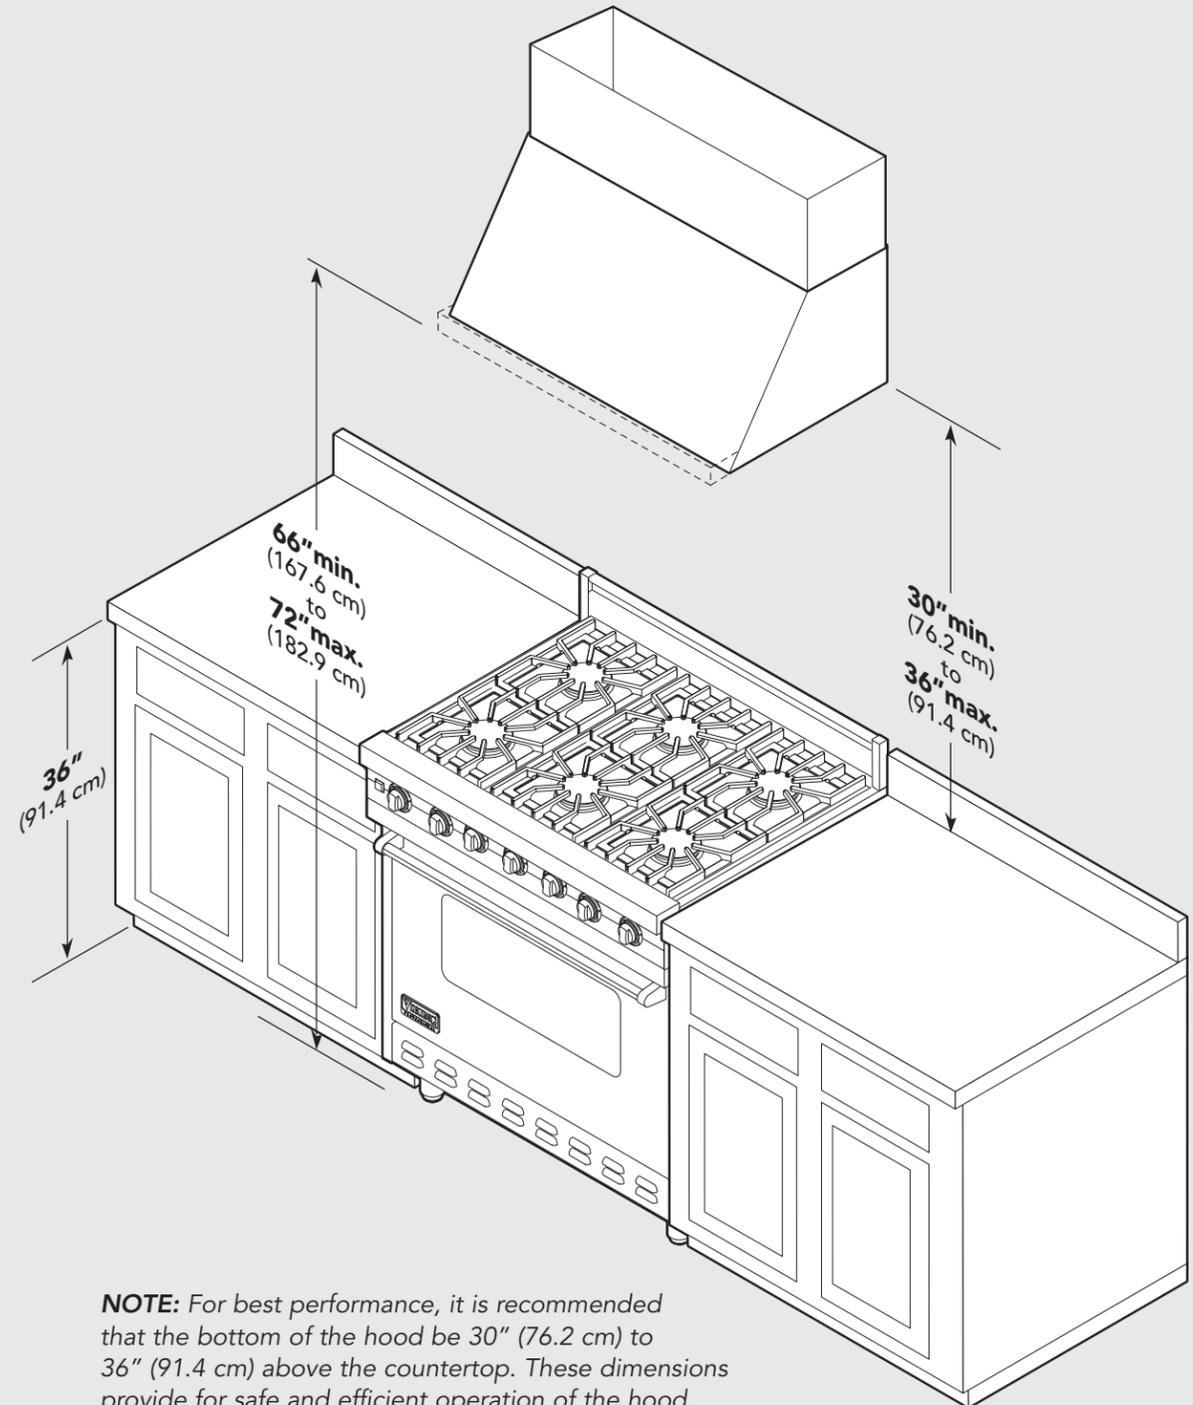

**NOTE:** For best performance, it is recommended that the bottom of the hood be 30" (76.2 cm) to 36" (91.4 cm) above the countertop. These dimensions provide for safe and efficient operation of the hood.

# Interior Ventilator Dimensions


(DTWL/DTWN Tall Traditional Wall Hoods)

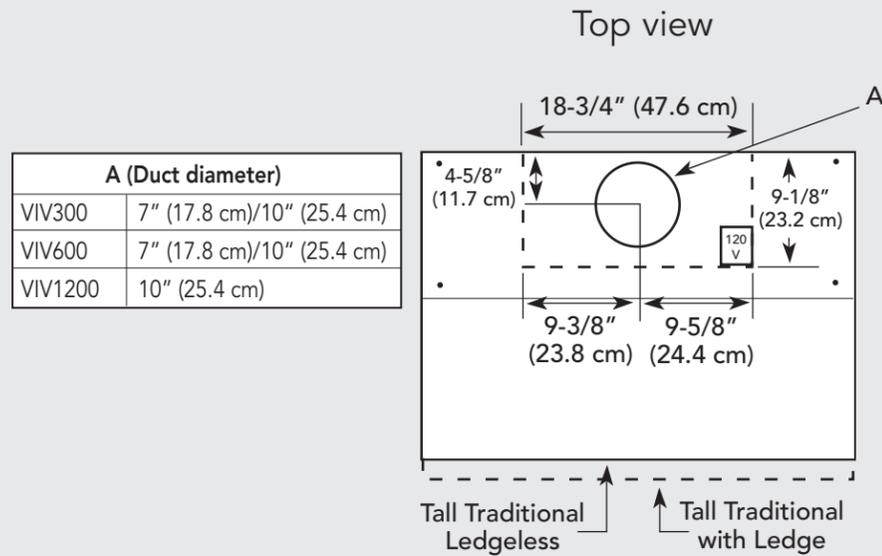


300, 600, or 1200 CFM Interior Ventilator Installation for 30", 36", & 42" models

# Exterior Ventilator Dimensions


(DTWL/DTWN Tall Traditional Wall Hoods)

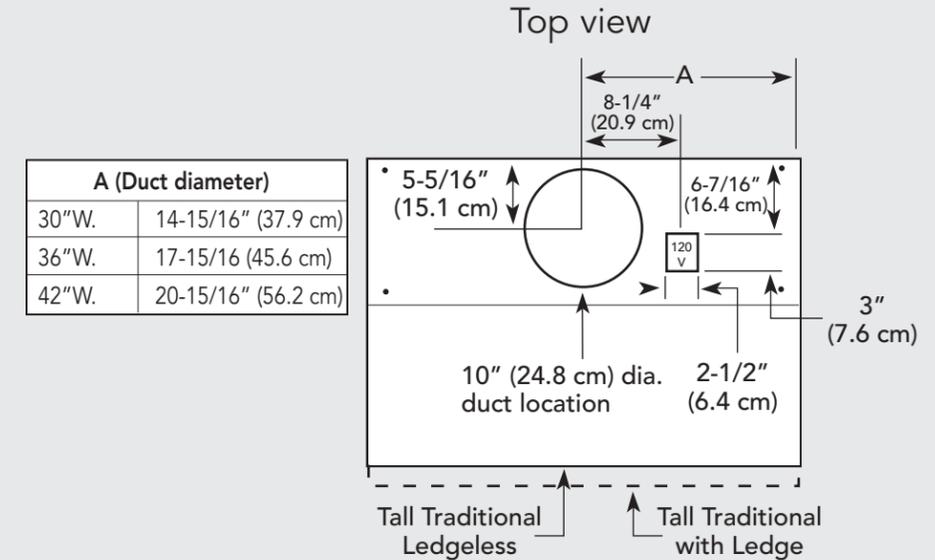

900 or 1200 CFM Exterior Ventilator Installation for 30", 36", & 42" models

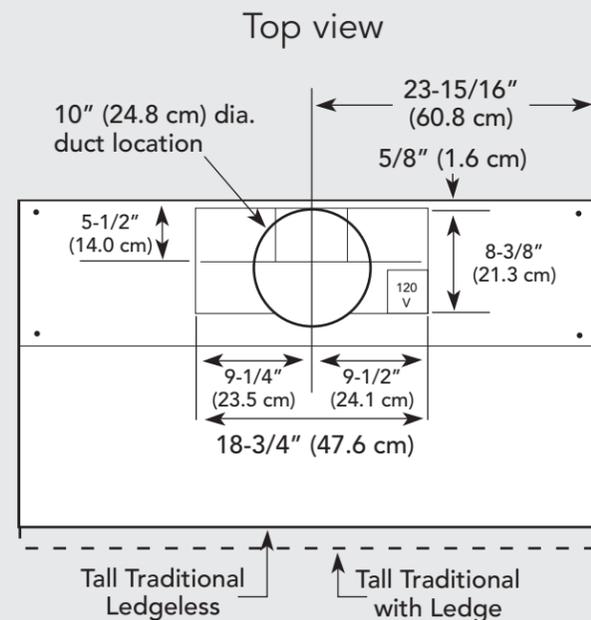

1200 CFM Interior Ventilator Installation for 48" models

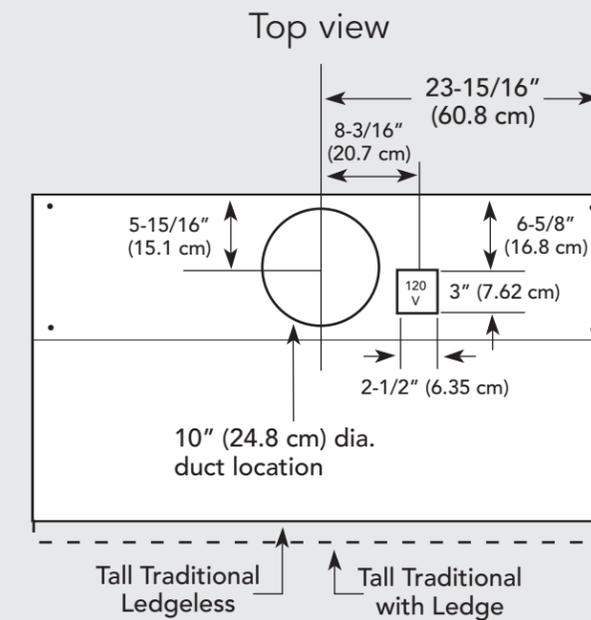

1200 or 1500 CFM Exterior Ventilator Installation for 48" models


# Dimensions & Specifications

(DSWB Box Wall Hoods 30", 36", 42", & 48")

| A (Duct cover width) |                    |
|----------------------|--------------------|
| 30"W.                | 29-7/8" (75.9 cm)  |
| 36"W.                | 35-7/8" (91.1 cm)  |
| 42"W.                | 41-7/8" (106.4 cm) |
| 48"W.                | 47-7/8" (121.6 cm) |

| C (Duct height) |                |
|-----------------|----------------|
| 30"W.           | 21" (53.3 cm)  |
| 36"W.           | or             |
| 42"W.           | 33" (83.8 cm)  |
| 42"W.           | or             |
| 48"W.           | 44" (111.8 cm) |

| B (Hood width) |                    |
|----------------|--------------------|
| 30"W.          | 29-7/8" (75.9 cm)  |
| 36"W.          | 35-7/8" (91.1 cm)  |
| 42"W.          | 41-7/8" (106.4 cm) |
| 48"W.          | 47-7/8" (121.6 cm) |

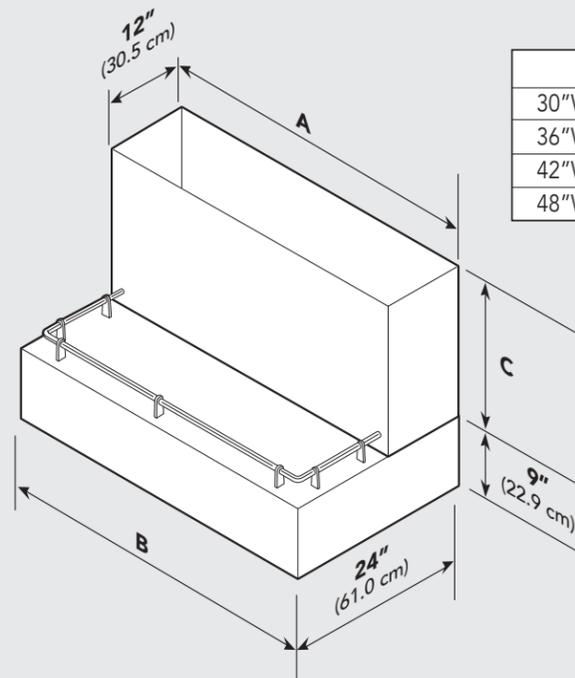

**NOTE:** Duct cover sold separately—Required for Installation.

| DSWB Box Wall Hoods      |  |                   |                    |                    |
|--------------------------|--|-------------------|--------------------|--------------------|
| Description              | 30"  | 36"               | 42"                | 48"                |
| Duct cover width         | 29-7/8" (75.9 cm)                                | 35-7/8" (91.1 cm) | 41-7/8" (106.4 cm) | 47-7/8" (121.6 cm) |
| Duct cover depth         | 12" (30.5 cm)                                    |                   |                    |                    |
| Duct cover height        | 21" (53.3 cm) or 33" (83.8 cm) or 44" (111.8 cm) |                   |                    |                    |
| Number of lights         | 2  | 2                 | 2                  | 3                  |
| Number of filters        | 2  | 2                 | 3                  | 3                  |
| Interior ventilator kits | DIV300/440                                       | DIV300/440        | DIV440             | DIV880             |
| Exterior ventilator kits | DEV900   | DEV900            | DEV900             | DEV1200*/1500**    |
| Interior duct size       | 7" (17.8 cm)                                     | 7" (17.8 cm)      | 7" (17.8 cm)       | 10" (25.4 cm)      |
| Exterior duct size       | 10" (25.4 cm)                                    |                   |                    |                    |
| Interior—maximum amps    | 1.7/3.2  | 1.7/3.2           | 3.2                | 5.6                |
| Exterior—maximum amps    | 6.6  | 6.6               | 6.6                | 4.3/5.1            |


\* A 1,200 CFM interior- or exterior-power ventilator should be used when installed over range/rangetop with gas char-grill. Max duct run is 50 ft.

\*\* It is recommended that the 1,500 CFM ventilator be used with longer duct runs. Max duct run is 75 ft.

**NOTE:** Maximum amp rating for hoods includes recommended ventilator kit rating; All products must be hard wired with 2-wire with ground. An interior- or exterior-power ventilator kit must be purchased for installation with all Designer high hoods.

# Clearance Dimensions


(DSWB Box Wall Hoods)

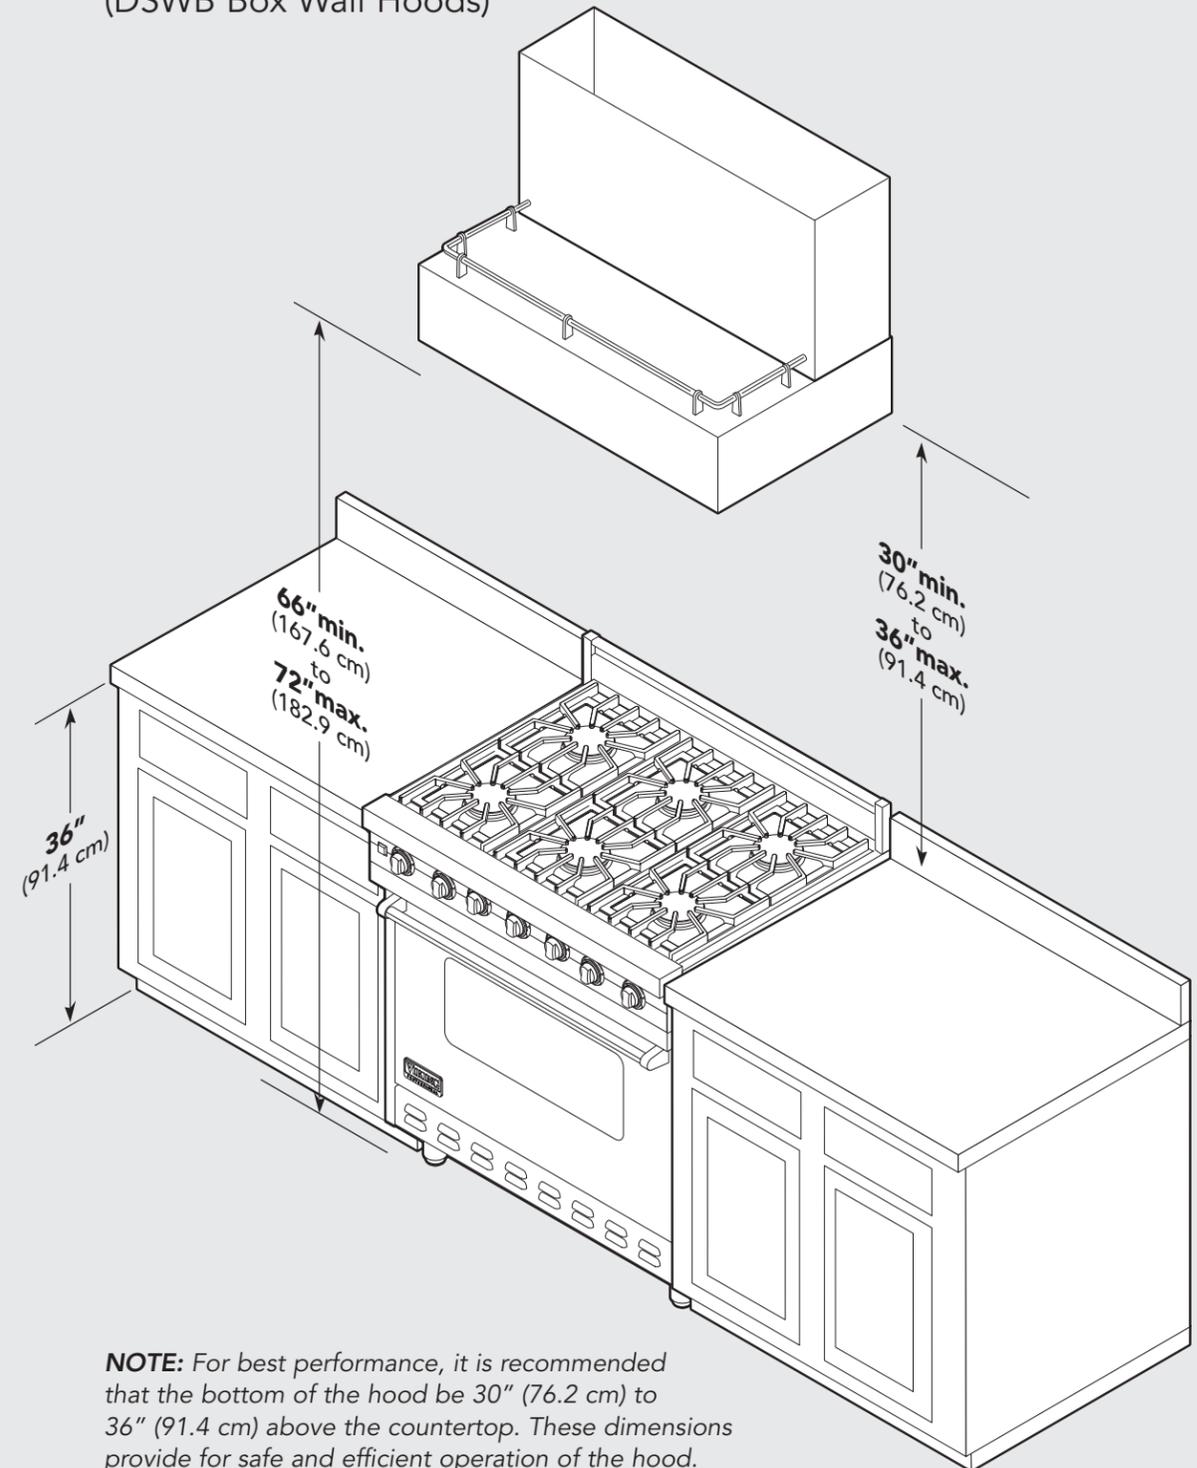

**NOTE:** For best performance, it is recommended that the bottom of the hood be 30" (76.2 cm) to 36" (91.4 cm) above the countertop. These dimensions provide for safe and efficient operation of the hood.

# Interior Ventilator Dimensions


(DSWB Box Wall Hoods)

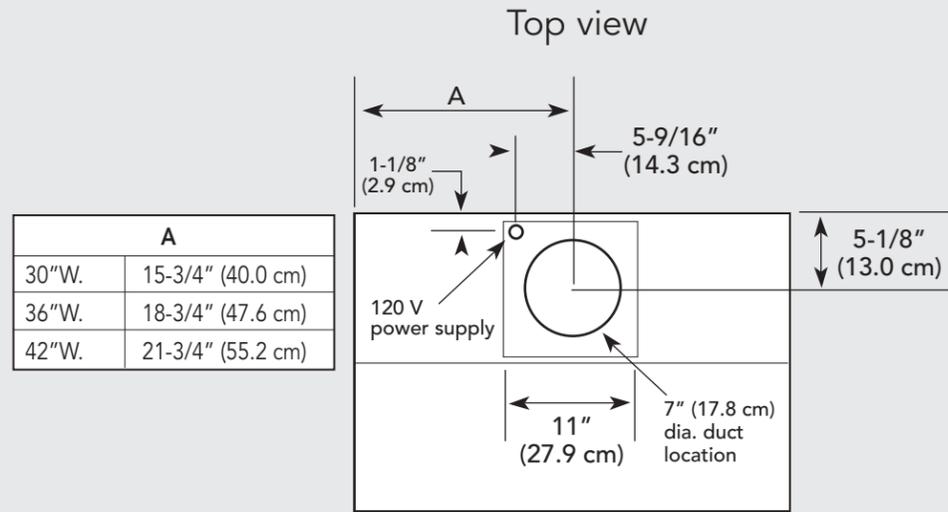


300, 440 CFM Interior Ventilator Installation for 30", 36", & 42" models

# Exterior Ventilator Dimensions


(DSWB Box Wall Hoods)

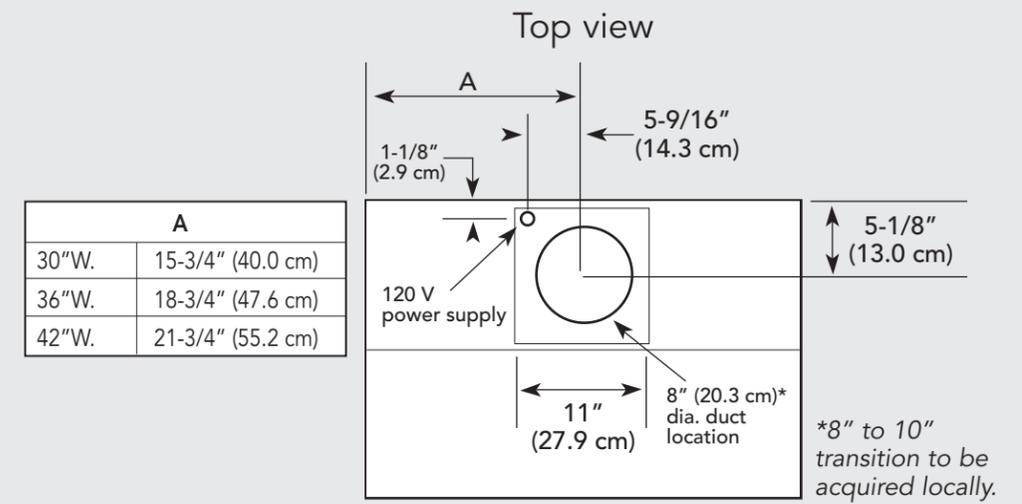

900 or 1200 CFM Exterior Ventilator Installation for 30", 36", & 42" models

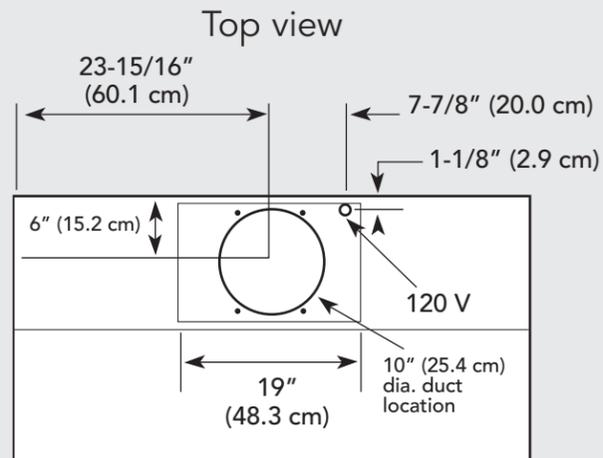

880 CFM Interior Ventilator Installation for 48" models

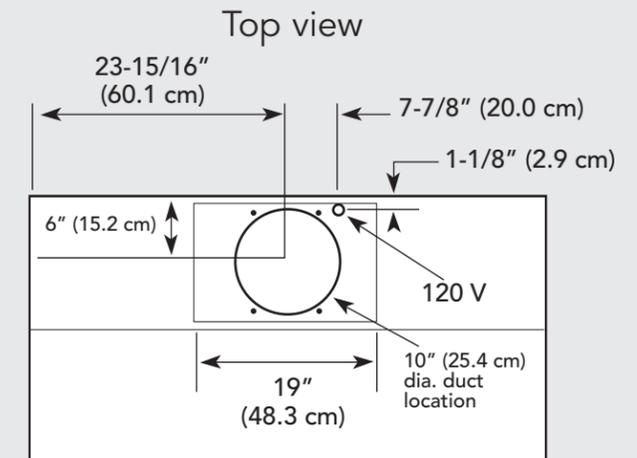

1200 or 1500 CFM Exterior Ventilator Installation for 48" models


# Planning Information

Plan where the duct work will be located. Install proper-sized duct work, roof, or wall cap for the type of blower you are using. Adjust your measurements for various heights of ceilings, soffits, cabinets, or ranges/rangetops.


**Proper installation of ducting is extremely important to ensure maximum performance from any ventilation product.**

- All CFMs are based on tests at 0.1 static pressure: without applying static pressure, CFM would be greatly overstated.
- Straight runs and gradual turns are best; for example, each 90° elbow is equivalent to 5-10 feet (1.52-3.05 cm) of straight run.
- Never use flexible duct; it creates back pressure/air turbulence and greatly reduces performance.
- Proper performance is dependent on proper ducting; make sure that a qualified and trained installer is used.
- Check with a qualified and trained installer or local codes for makeup air requirement, if any.
- Max. amp rating for hoods includes recommended ventilator kit rating; all products must be hard wired direct with 2-wire with ground.

## Check Framing

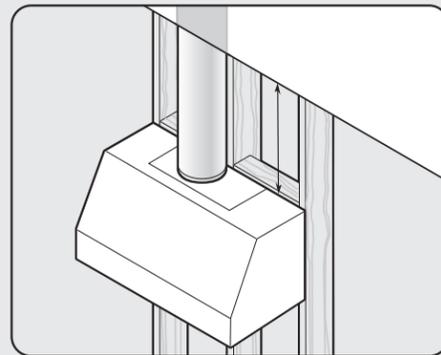

**NOTE:** Because of the weight of the hood make sure that the mounting screws are driven into the framing and not just the drywall. It may be necessary to drill additional holes in the canopy for proper alignment. Some hoods require a locally supplied wood strip for mounting. Check installation procedure of your hood on page 34 to determine if a wood strip is required.

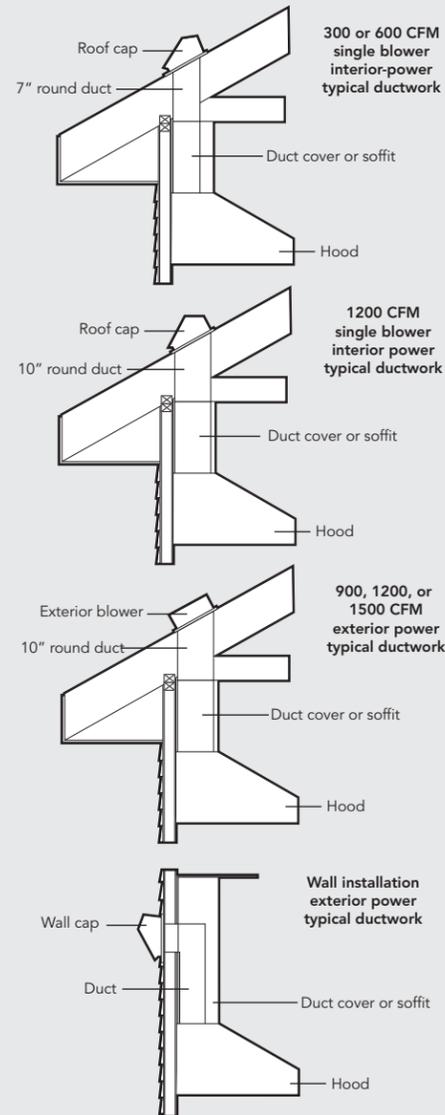


**NOTE:** Wall exhaust must be a minimum of 24" (61.0 cm) from ground. This may vary depending on local codes and geographic location.


## Electrical Supply

Run 120 VAC electrical wiring from service panel to installation location. See specification pages for the maximum amp requirements.


# Installation (DCH 12"H. Classic Chimney Wall Hoods w/Standard Ventilator)

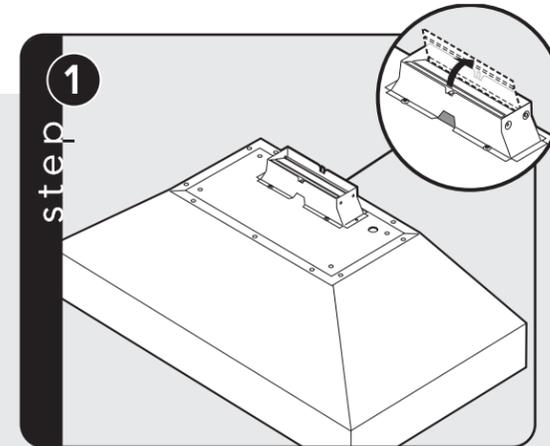


Check damper for unrestricted movement, adjust if necessary.

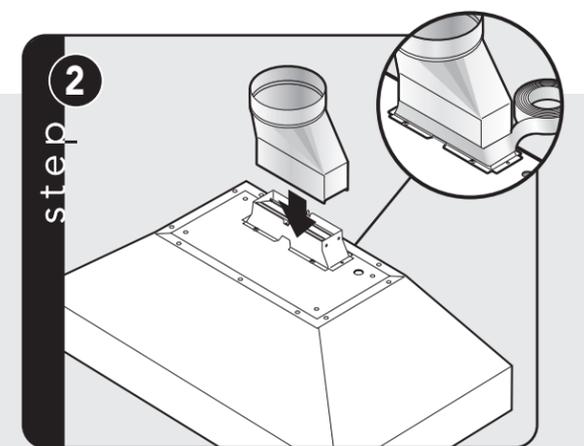


Attach transition to damper. Seal with aluminum tape.

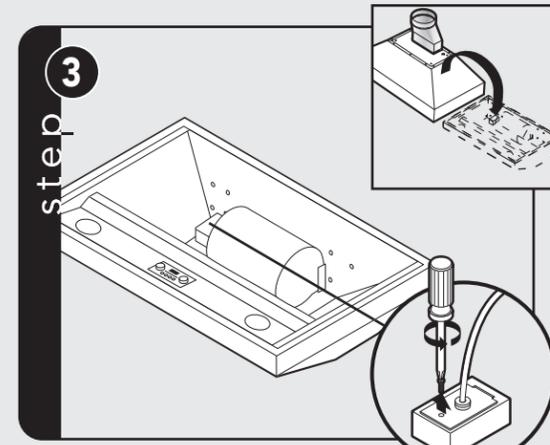

Flip hood over and remove electrical box cover.

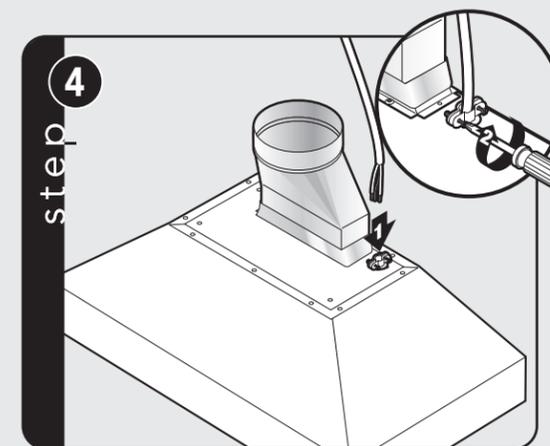

Insert 6" of electrical wiring through the top of vent hood and secure using wiring restraint. Refer to local codes.

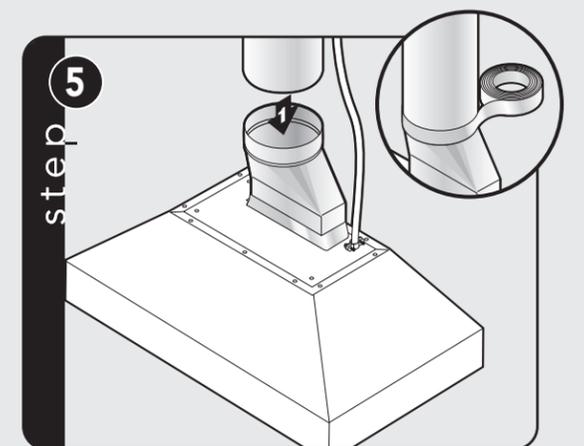


Slide duct over transition and tape around joint.


## ⚠ WARNING

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING**


- Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.
- Before servicing or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

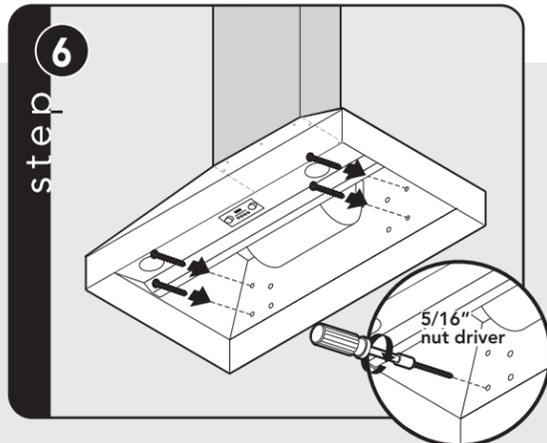


**CAUTION:** Secure vent hood to wall using screws provided. Use additional mounting screws and wall anchors, if necessary.

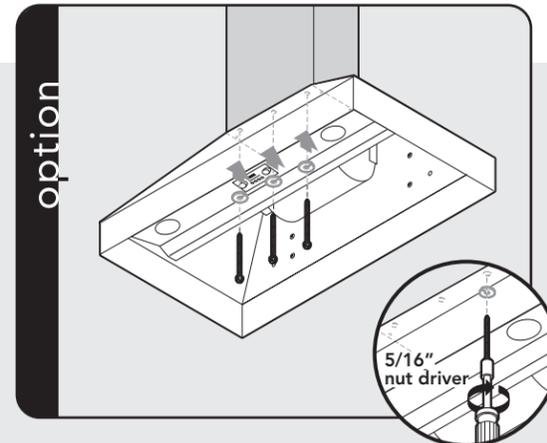


**CAUTION:** If not using a duct cover, using screws provided make sure top mounting screws are secured into soffit or cabinet frame. Use additional mounting screws, if necessary.

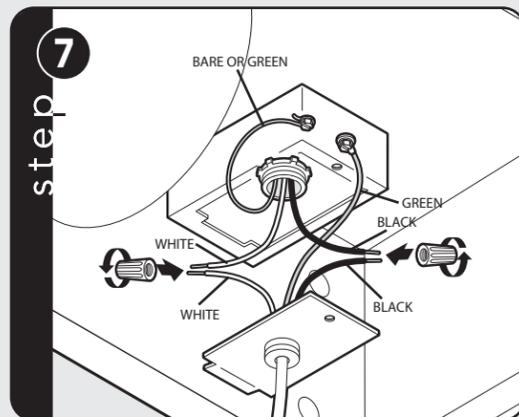


Connect black to black, white to white, and the green/bare wire under the green screw.  
**NOTE:** Housing wiring must be properly installed for wiring to be correct when wiring unit.

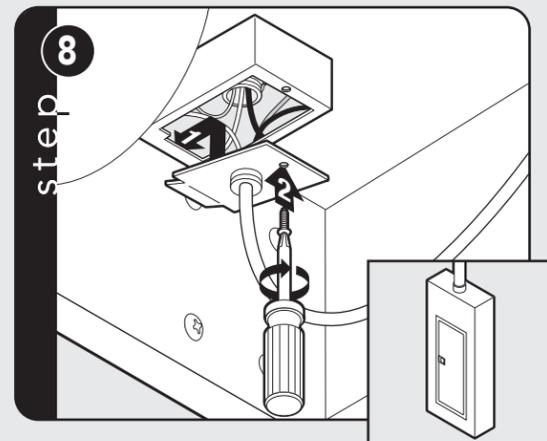


Replace electrical box cover. Make connection to breaker box.

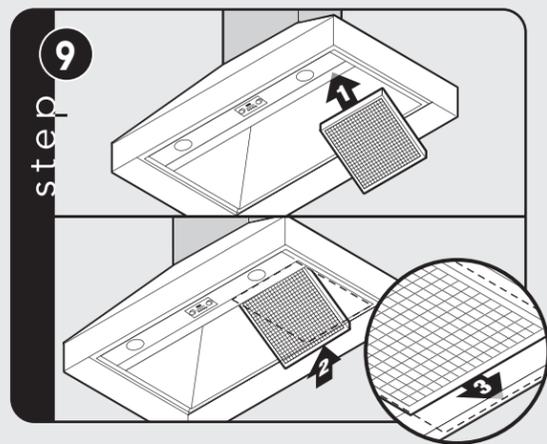

Slide filter front over front lip. Push filter rear up, then slide back over rear lip.

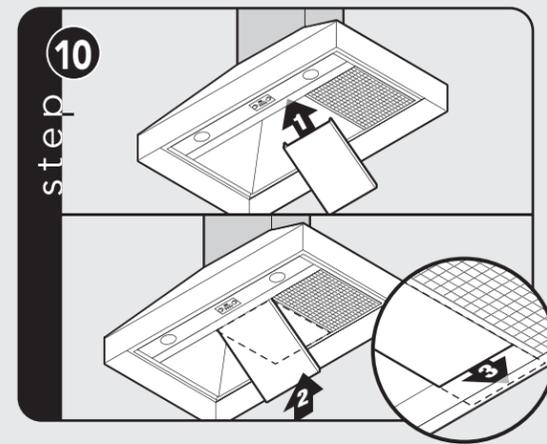


Slide spacer front over front lip. Push spacer rear up, then slide back over rear lip.

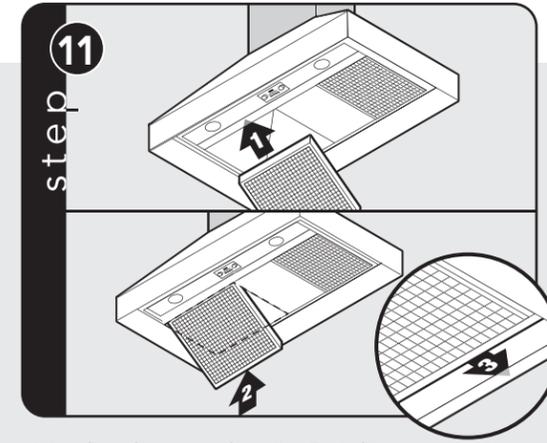


Slide filter front over front lip. Push filter rear up, then slide back over rear lip.


### Duct Cover Option (DCH 12"H. Classic Chimney Wall Hoods w/Standard Ventilator)

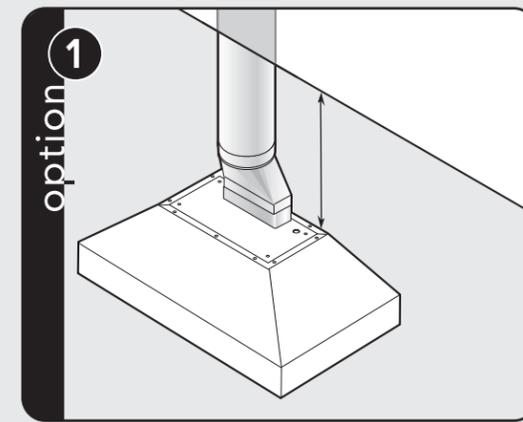


Measure distance from ceiling to canopy.

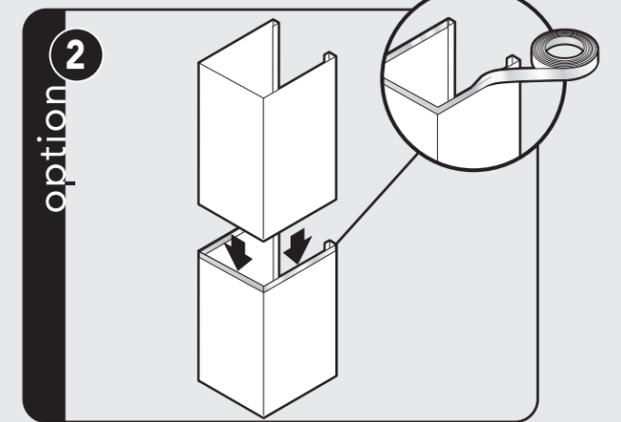

Tape to avoid scratching.

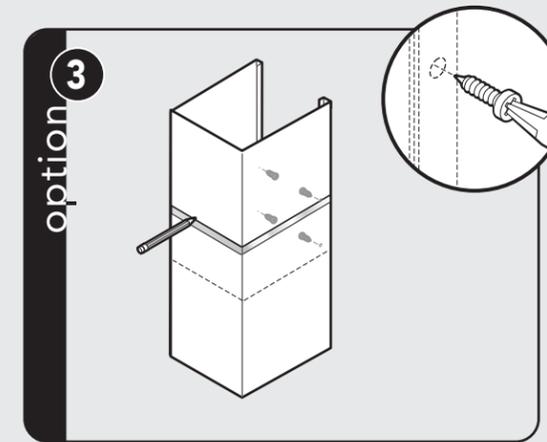


Place duct cover top inside duct cover base and lower until desired height is found. Mark height. Use the retaining nuts and bolts to fasten in place from the inside and remove tape.

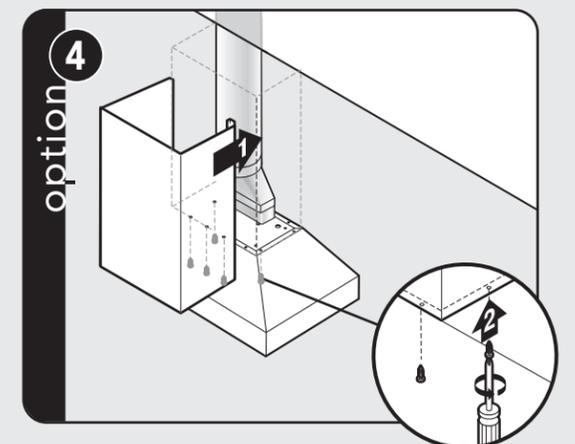


Slide duct cover in place and fasten from inside canopy using the sheet metal screws provided.


# Installation (DCH 12"H. Classic Chimney Wall Hoods w/Recirculating Kit)

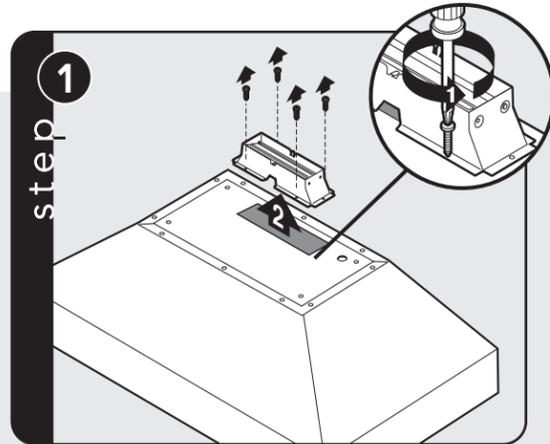


Remove damper and discard with transition.

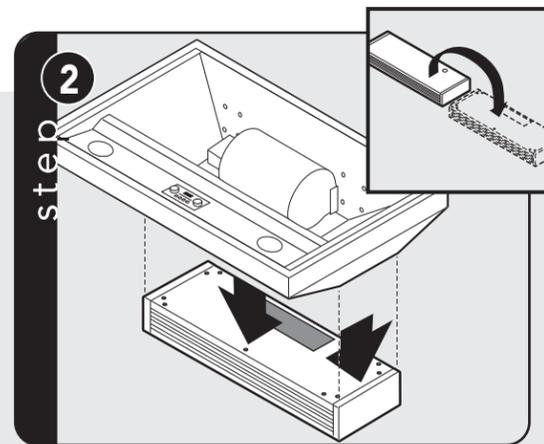


Turn recirculating unit upside down. Place vent hood upside down on recirculating unit.

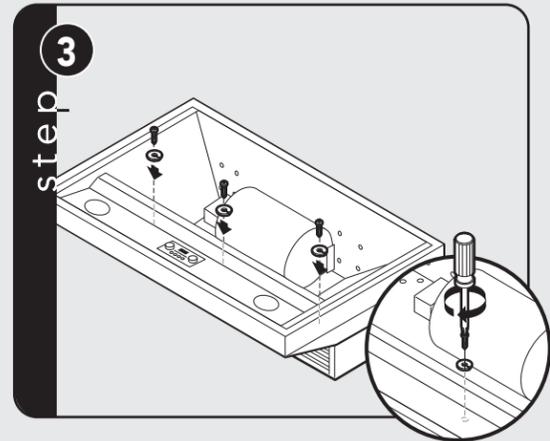

Attach with screws and lock washers provided.

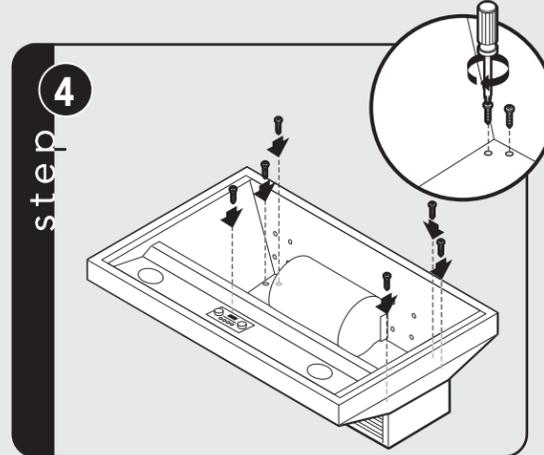

Attach with screws.

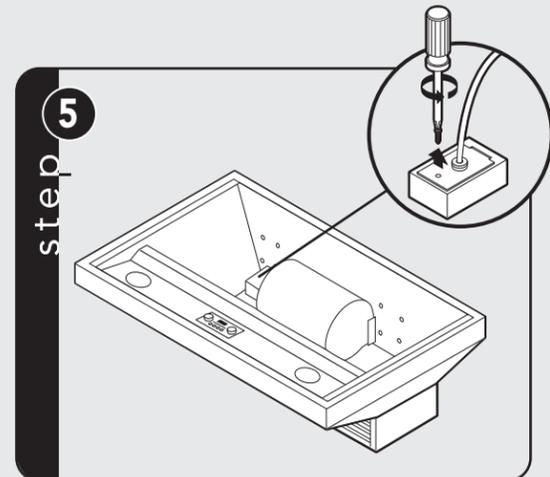


Remove electrical box cover.


**⚠ WARNING**

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING**


- Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.
- Before servicing or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

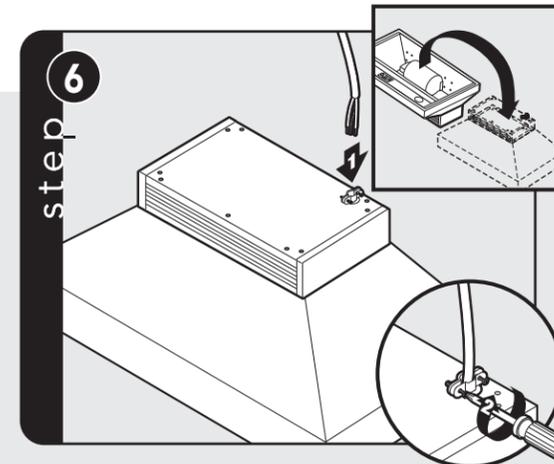


Flip hood over. Insert 6" of electrical wiring through the top of vent hood and secure using wiring restraint. Refer to local codes.

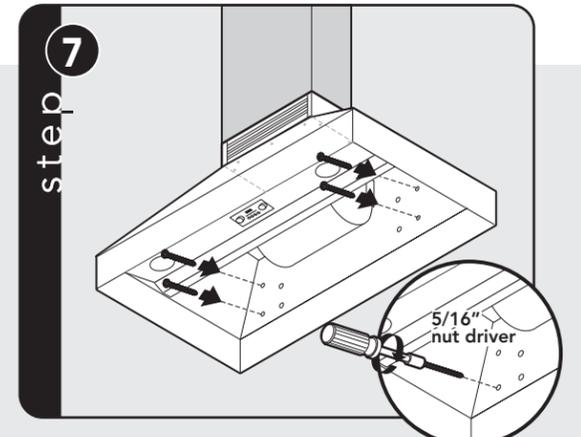


**CAUTION:** Secure vent hood. Make sure mounting screws are secured into framing using additional mounting screws and wall anchors, if necessary.

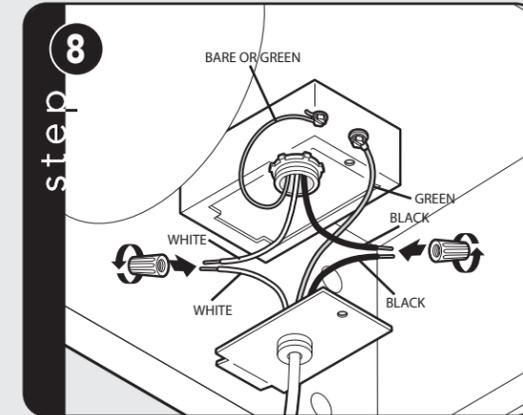


Connect black to black, white to white, and the green/bare wire under the green screw.  
**NOTE:** Housing wiring must be properly installed for wiring to be correct when wiring unit.

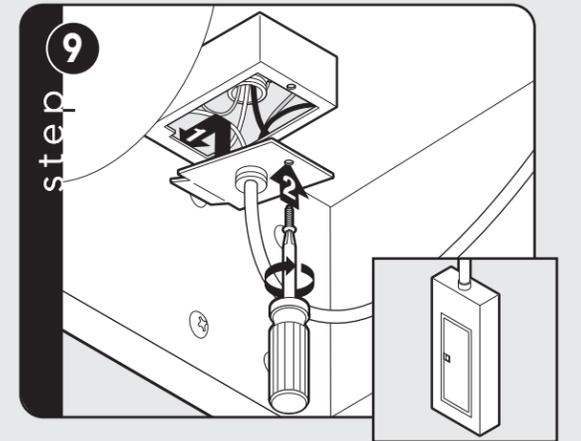


Replace electrical box cover. Make connection to breaker box.

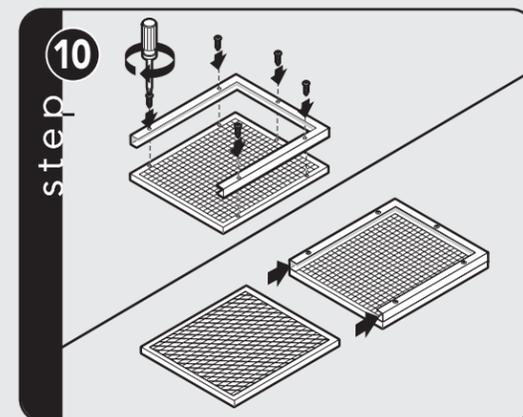


Assemble brackets to mesh filters and insert charcoal filters.

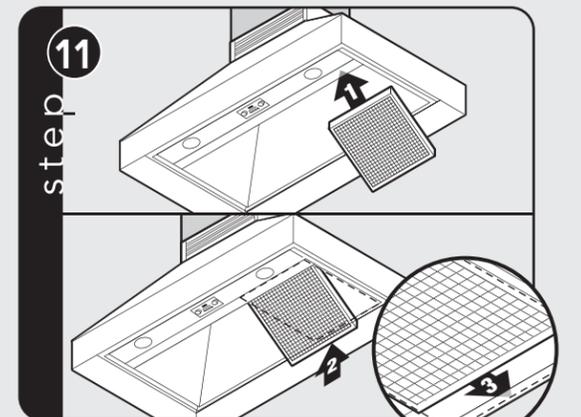

Slide filter front over front lip. Push filter rear up, then slide back over rear lip.

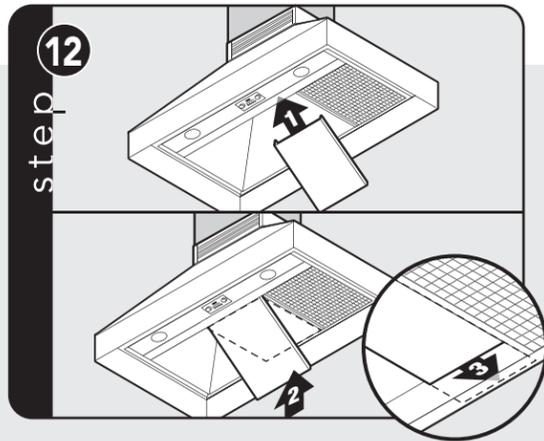


Slide spacer front over front lip. Push spacer rear up, then slide back over rear lip.

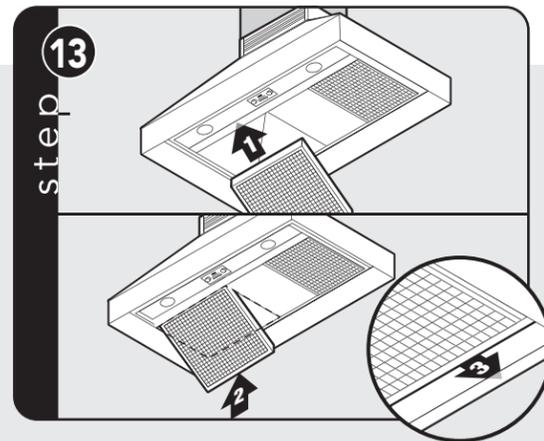


Slide filter front over front lip. Push filter rear up, then slide back over rear lip.


**Installation (DCWH/DCWN/DCWL Classic Chimney & DTWL/DTWN Tall Traditional Wall Hoods)**

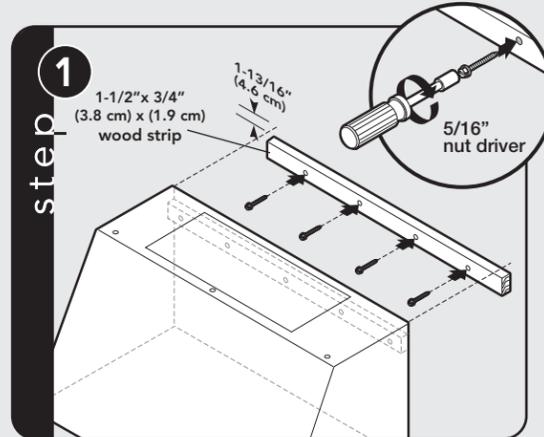


Measure down 1-13/16 (4.6 cm) from desired height of hood and secure 1-1/2" x 3/4" wood strip (not included) to wall using screws provided.

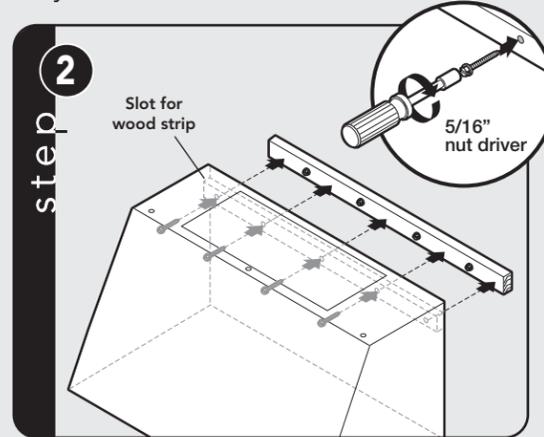

Use additional mounting screws to secure hood to wood strip.

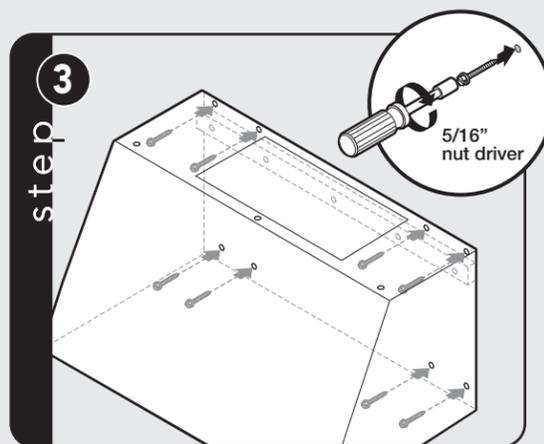


**CAUTION:** Secure vent hood to wall using screws provided. Make sure mounting screws are secured into frame. Use additional mounting screws and wall anchors, if necessary.

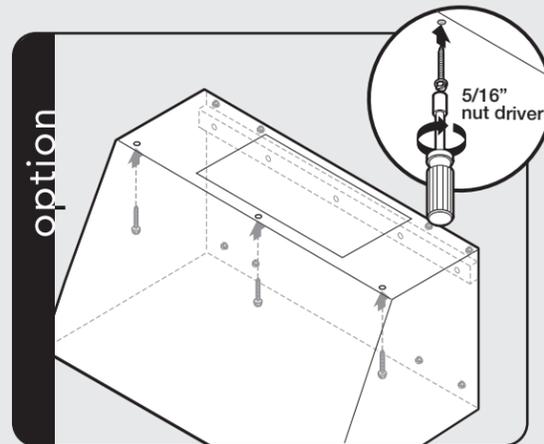


**CAUTION:** If not using a duct cover, using screws provided make sure top mounting screws are secured into soffit or cabinet frame. Use additional mounting screws, if necessary.


To install ventilation kit refer to ventilation kit installation instructions.

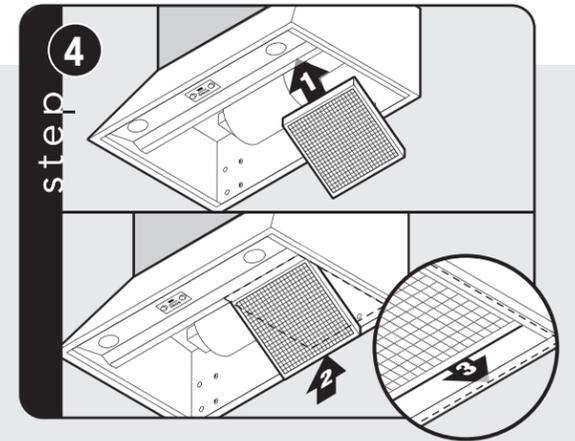

Slide filter front over front lip. Push filter rear up, then slide back over rear lip.

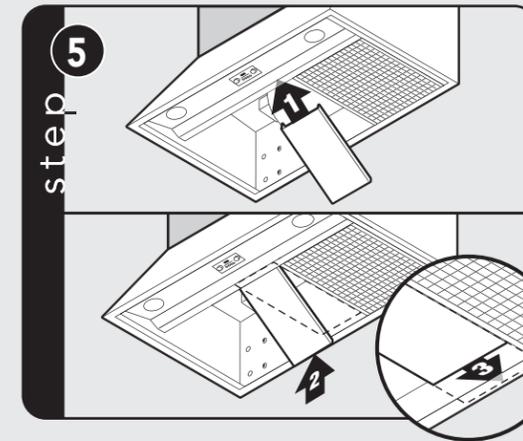


Slide spacer front over front lip. Push spacer rear up, then slide back over rear lip.

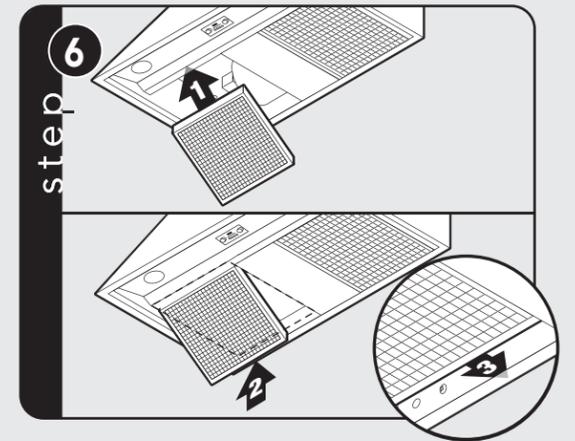


Slide filter front over front lip. Push filter rear up, then slide back over rear lip.


**Duct Cover Option (DCWH/DCWN/DCWL Classic Chimney Wall Hoods)**

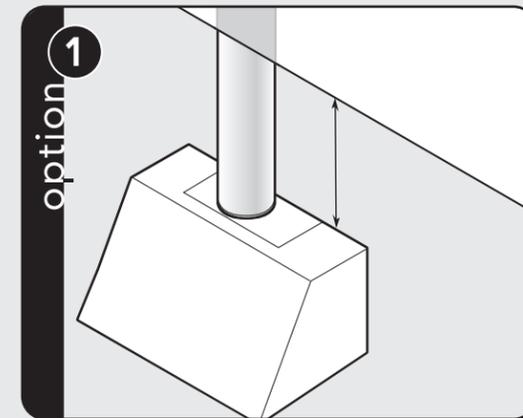


Measure distance from ceiling to canopy.

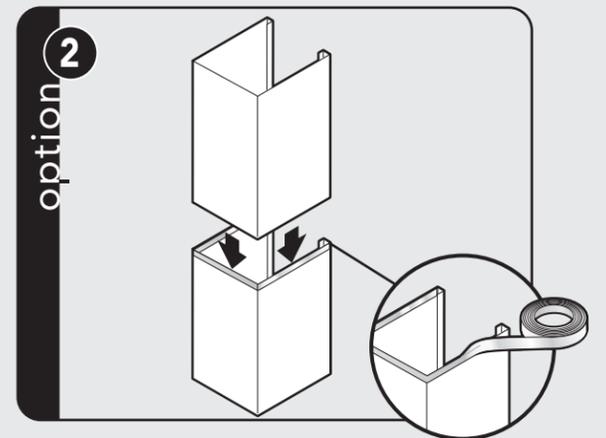


Tape to avoid scratching.

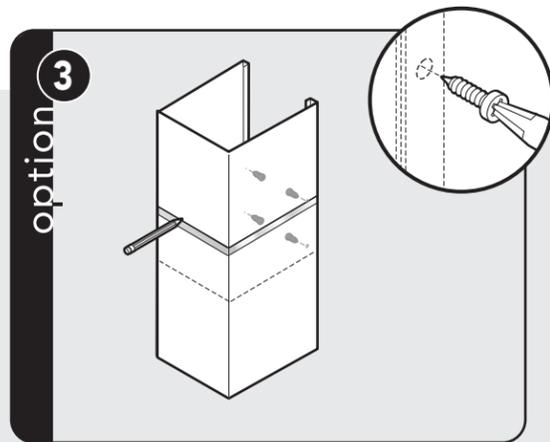


Place duct cover top inside duct cover base and lower until desired height is found. Mark height. Use the retaining nuts and bolts to fasten in place and remove tape.

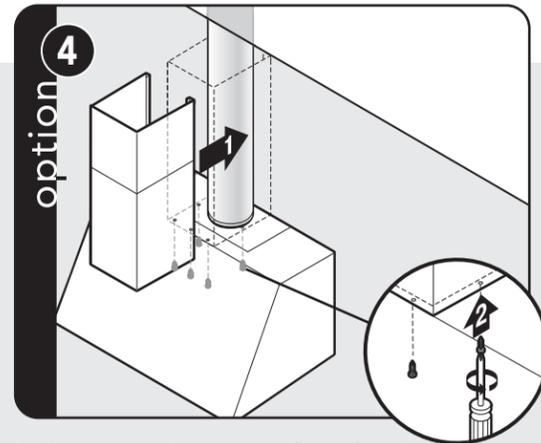

Slide duct cover in place and fasten from inside canopy using the sheet metal screws provided.

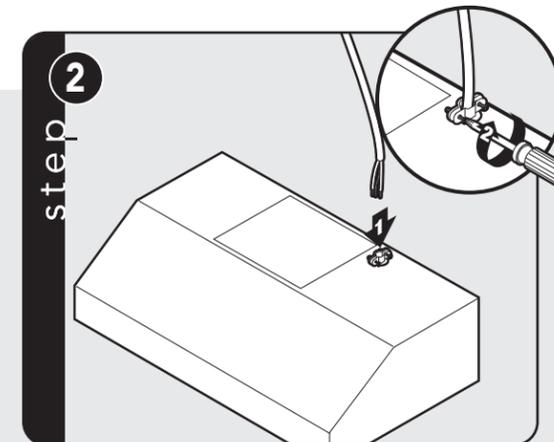


Insert 6" of electrical wiring through the top of vent hood and secure using wiring restraint. Refer to local codes.

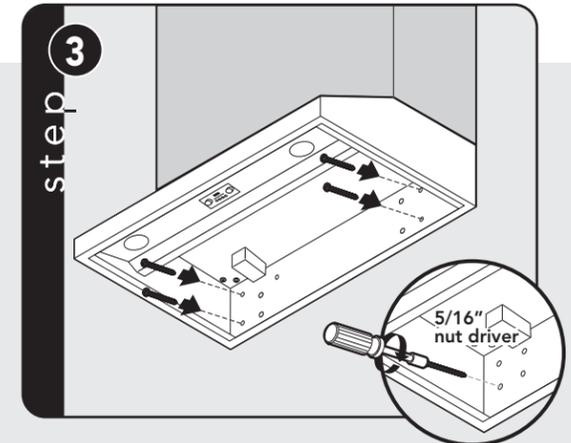


**CAUTION:** Using screws provided secure vent hood to wall. Make sure mounting screws are secured into frame. Use additional mounting screws and wall anchors, if necessary.


### Duct Cover Option (DTWL/DTWN Tall Traditional Wall Hoods)

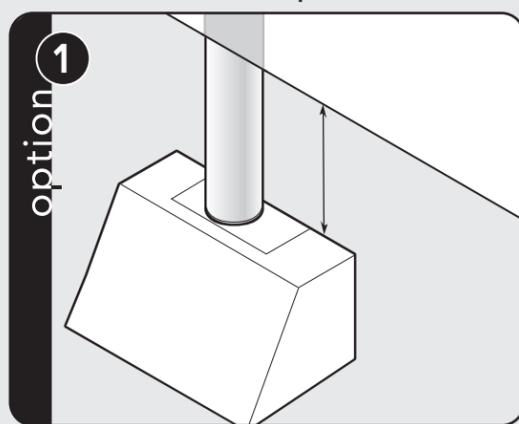


Measure distance from ceiling to canopy.

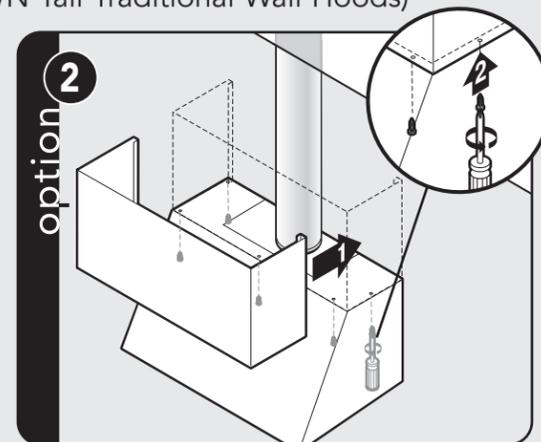

Slide duct cover in place and fasten from inside canopy using the sheet metal screws provided.

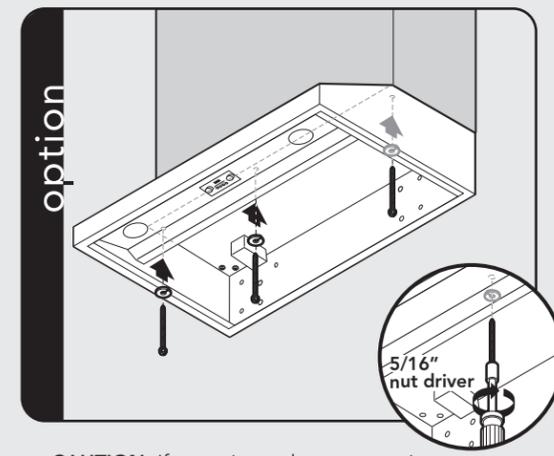


**CAUTION:** If not using a duct cover, using screws provided make sure top mounting screws are secured into soffit or cabinet frame. Use additional mounting screws, if necessary.

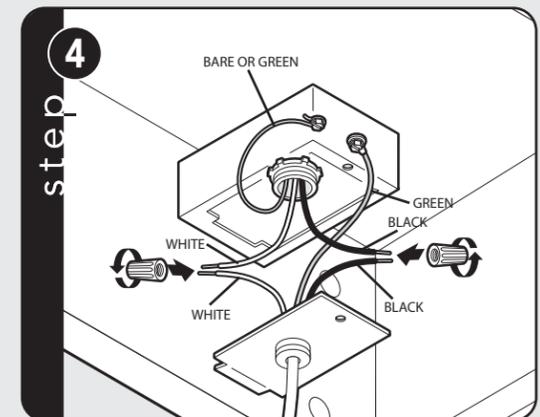

Connect black to black, white to white, and the green/bare wire under the green screw.  
**NOTE:** Housing wiring must be properly installed for wiring to be correct when wiring unit.

### Installation (DTWS Slim Traditional & DSWB Box Wall Hoods)

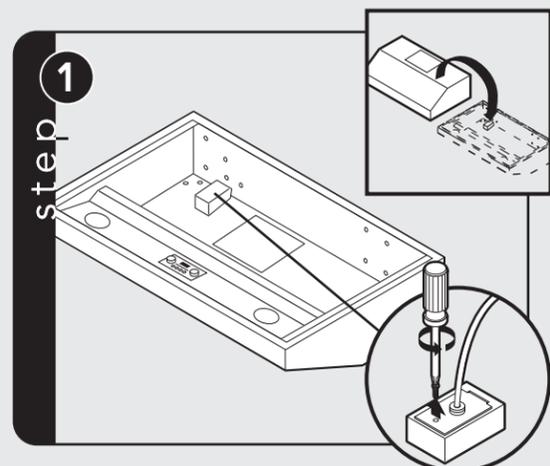


Flip hood over. Remove electrical box cover.

**⚠ WARNING**


**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING**

- Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.
- Before servicing or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

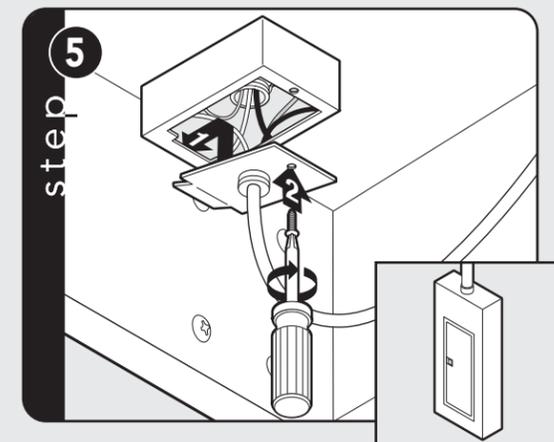


Replace electrical box cover. Make connection to breaker box.


To install ventilation kit refer to ventilation kit installation instructions.

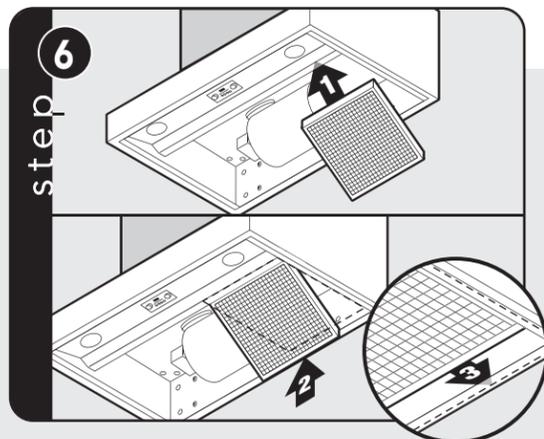

Slide filter front over front lip. Push filter rear up, then slide back over rear lip.

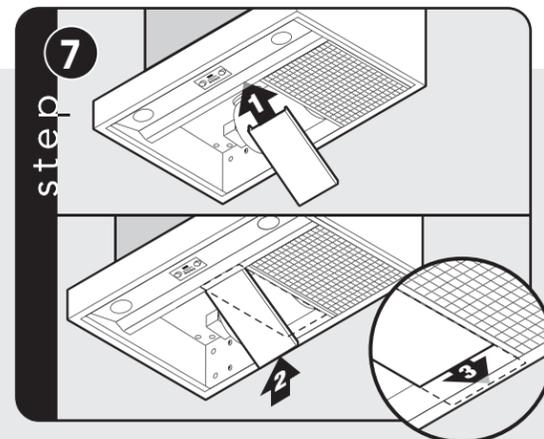


Slide spacer front over front lip. Push spacer rear up, then slide back over rear lip. **NOTE:** Number of spacers and baffles may vary by model.

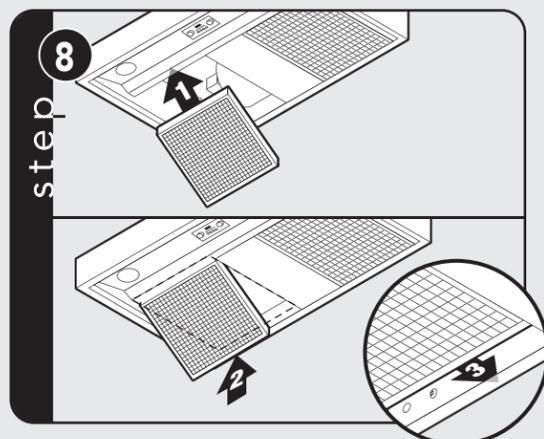


Slide filter front over front lip. Push filter rear up, then slide back over rear lip.


### Duct Cover Option (DTWS Slim Traditional Wall Hoods)

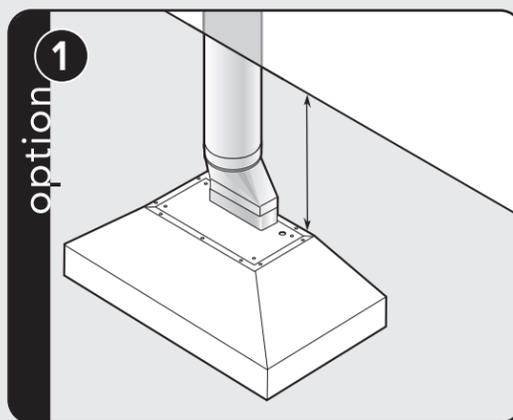


Measure distance from ceiling to canopy.

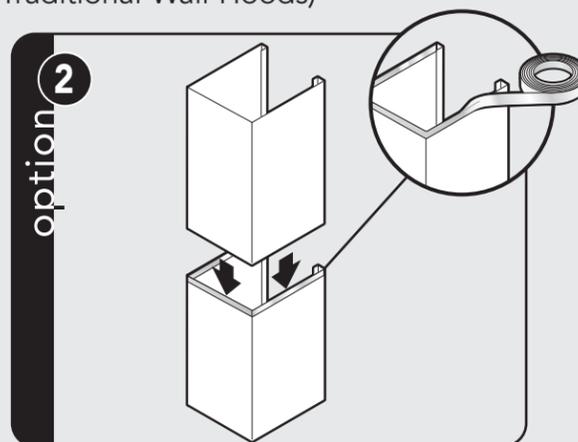

Tape to avoid scratching.

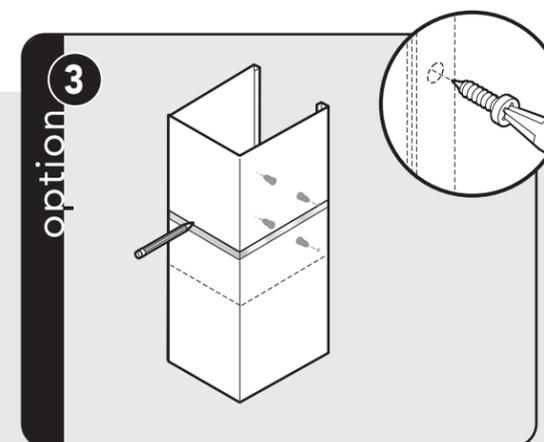


Place duct cover top inside duct cover base and lower until desired height is found. Mark height. Use the retaining nuts and bolts to fasten in place from inside and remove tape.

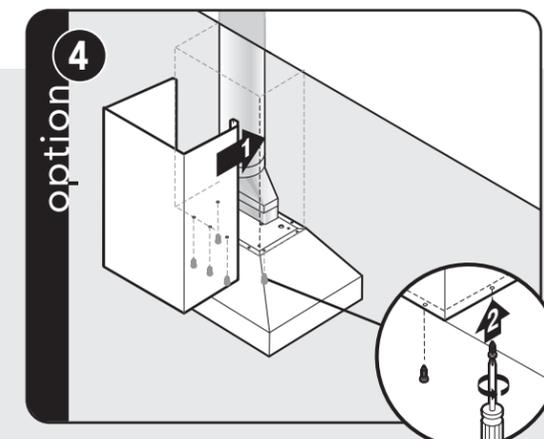


Slide duct cover in place and fasten from inside canopy using the sheet metal screws provided.


### Duct Cover Required (DSWB Box Wall Hoods Only)

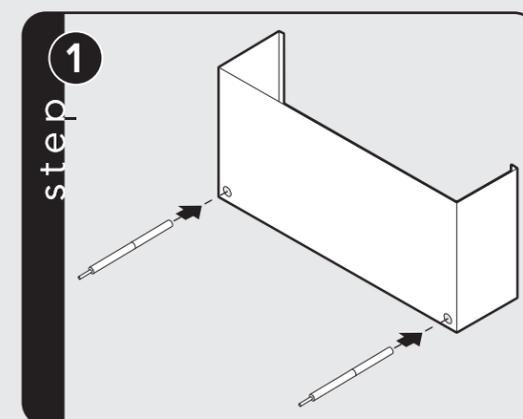


Slide rails into openings in duct cover.

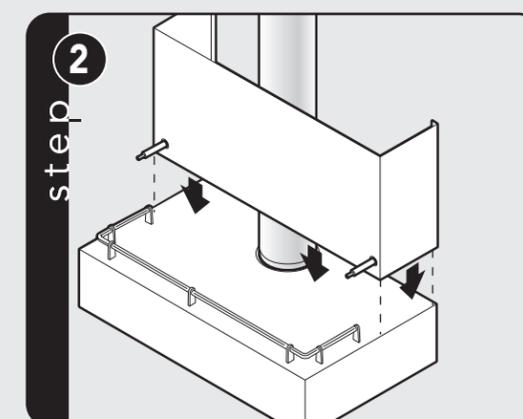

Lower duct cover into position on canopy.

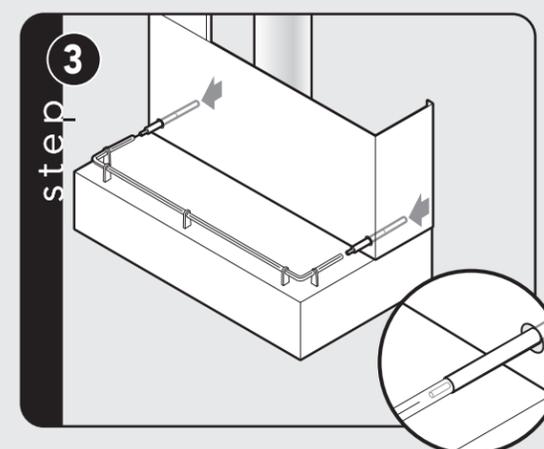


Slide rails out and position in elbows.

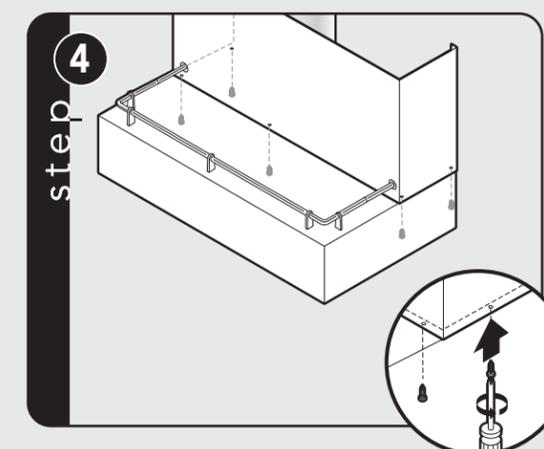


Fasten duct cover to canopy with screws provided.


# Installation (DCIH Classic Chimney Island Hoods)

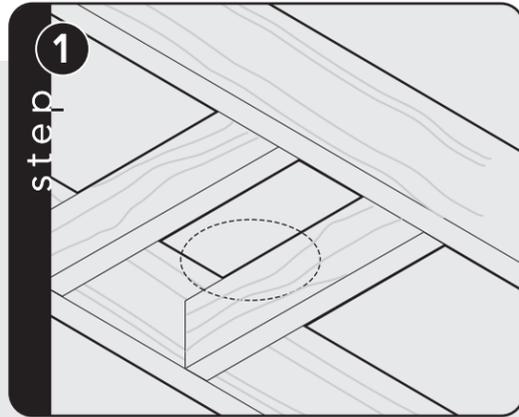


Check framing where cutout will be.  
**NOTE:** 200 lb. limit.

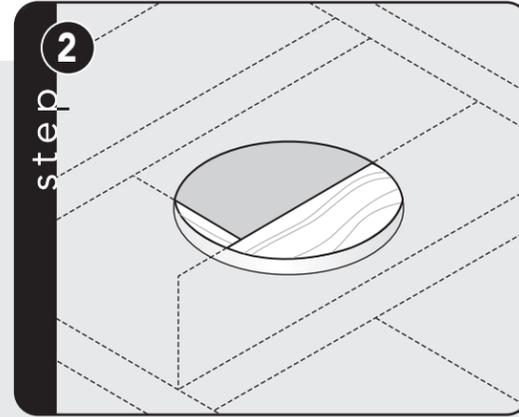

Cut appropriate size hole in ceiling. Either 7" or 10" depending on your specific unit and ventilator kit.

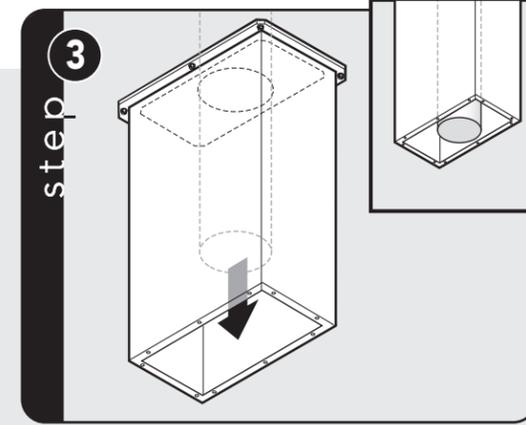

Run duct work down to bottom edge of duct cover/soffit and secure in place. Make sure the duct does not stick down past the cover.

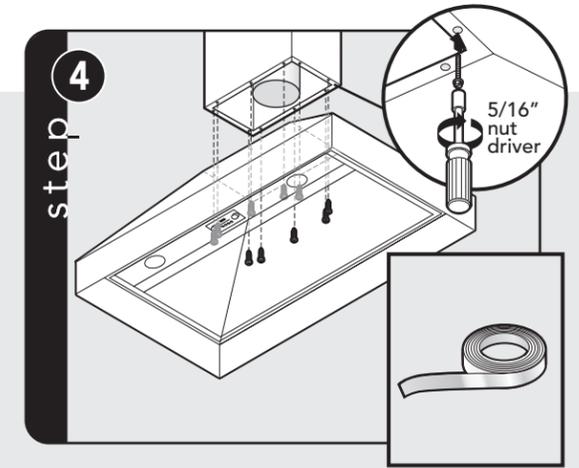


Attach canopy to duct cover/soffit. From inside of hood, seal top of hood to duct with aluminum tape.

**Mounting options:**


- Using duct cover with ceiling mounting bracket. (Option A)
- Using threaded rod for additional support. (Option B)
- Attaching hood to directly to soffit. (Skip to step 3)

**NOTE:** It is recommended to follow option A or B, however both aren't necessary.

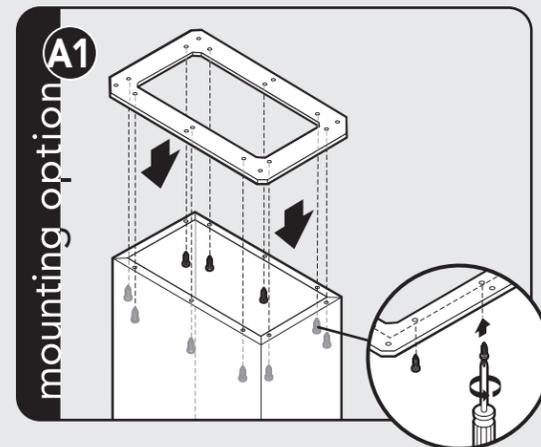


Attach duct cover to optional ceiling mounting bracket.


To install ventilation kit refer to ventilation kit installation instructions.

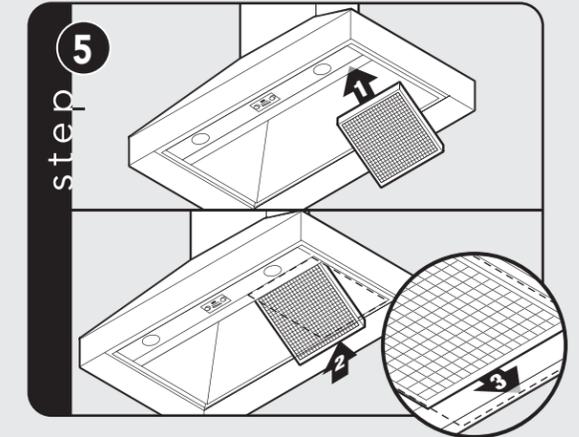


Slide filter front over front lip. Push filter rear up, then slide back over rear lip.

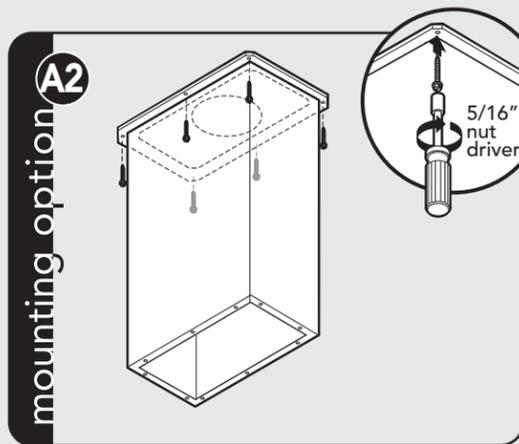


Attach duct cover to ceiling. The ceiling bracket can be hidden by using a locally supplied trim.

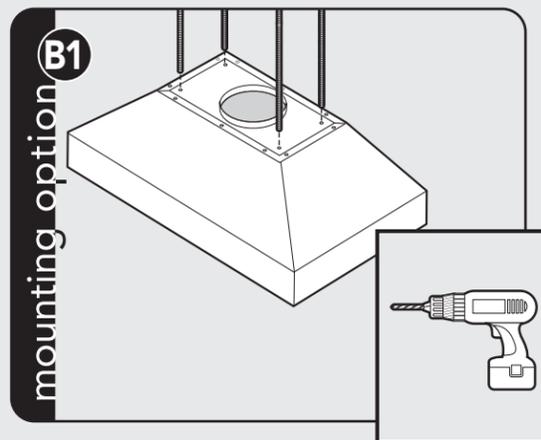

Additional support option. Drill holes in all four corners for threaded rod and run rods from hood to ceiling.

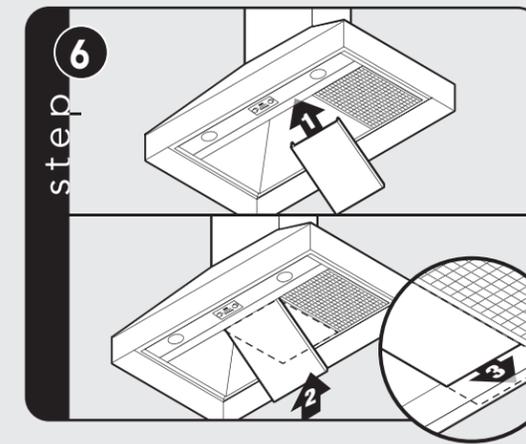


Slide spacer front over front lip. Push spacer rear up, then slide back over rear lip. **NOTE:** Number of spacers and baffles may vary by model.

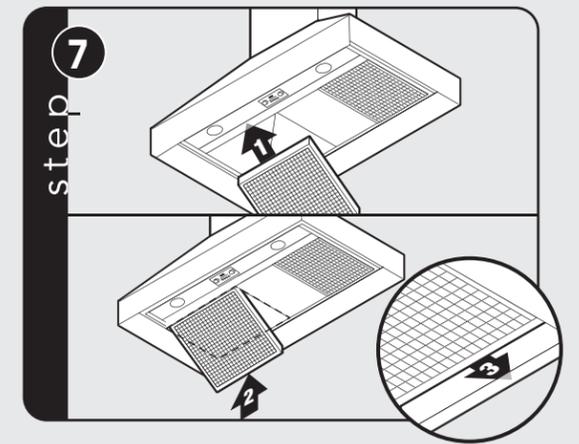

Slide filter front over front lip. Push filter rear up, then slide back over rear lip.

# Wiring Diagram

Refer only to features equipped with this unit

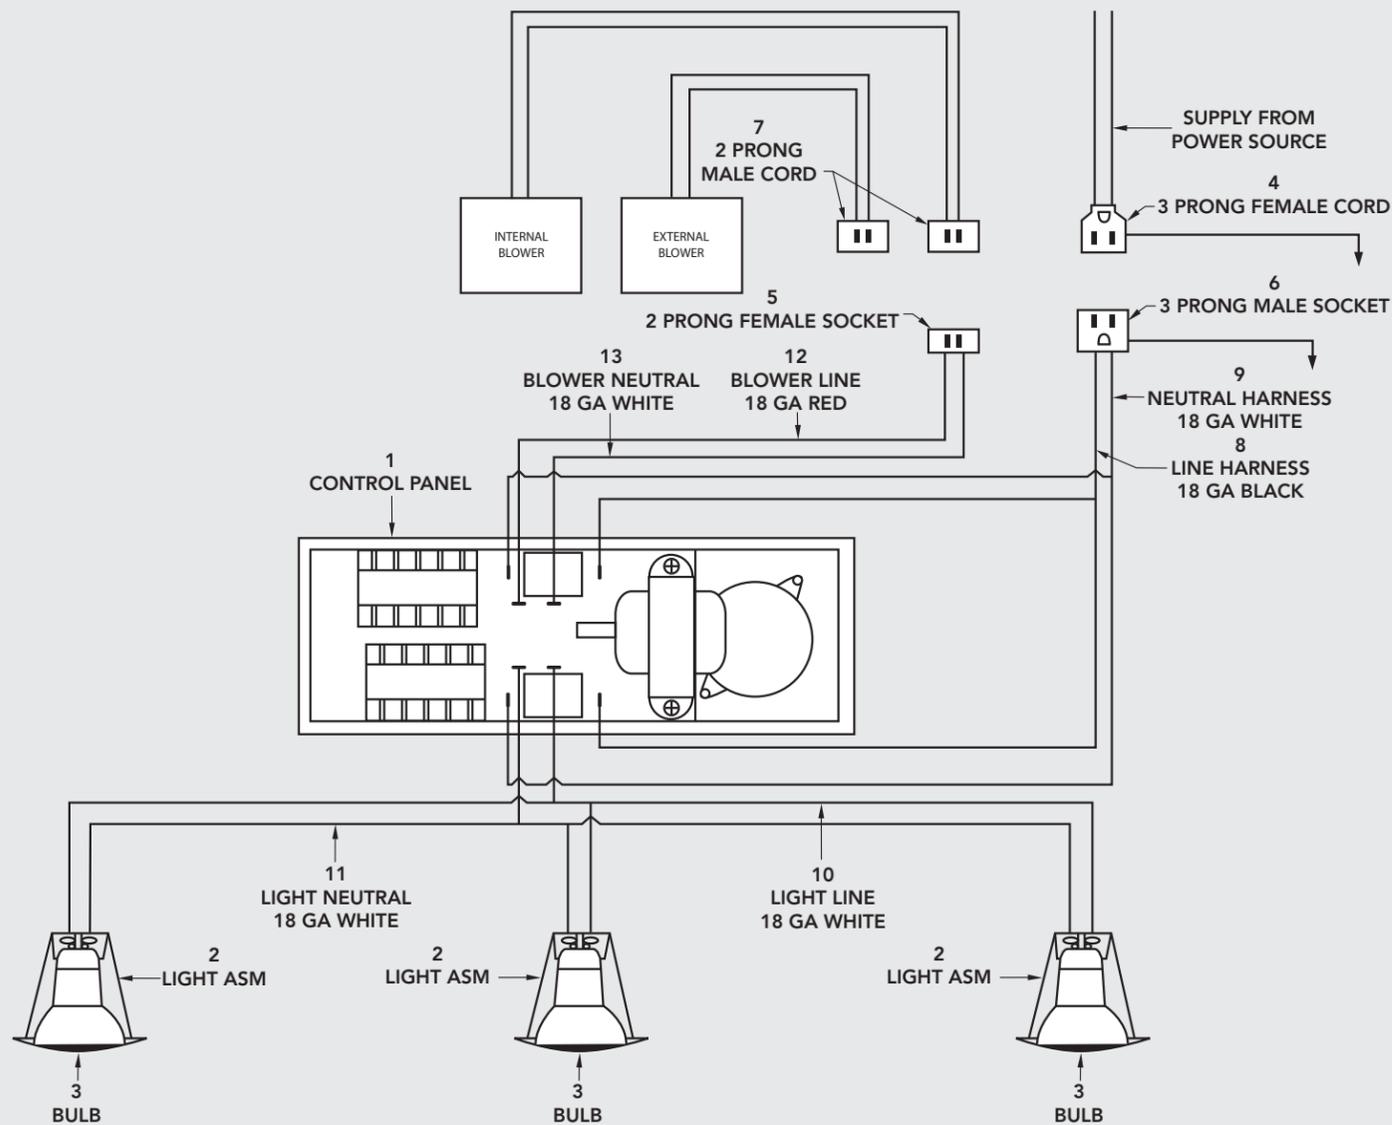

# Service & Registration

## Service & Parts

Only authorized replacement parts may be used in performing service on the appliance. Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be referred to a qualified technician.

Record the following information indicated below. You will need it if service is ever required. The serial number and model number for your appliance are located on the identification plate mounted on the inside of the hood canopy.

Model number

\_\_\_\_\_

Serial number

\_\_\_\_\_

Date of purchase

\_\_\_\_\_

Date installed

\_\_\_\_\_

Dealer's name

\_\_\_\_\_

Address

\_\_\_\_\_