

4 Easy Steps to Clean Dishes

PUSH CANCEL DRAIN TO INTERRUPT OR END A CYCLE.

DISHWASHER QUICK REFERENCE GUIDE


1

Load Dishwasher

Depending on Model



TOP/ BOTTOM RACK

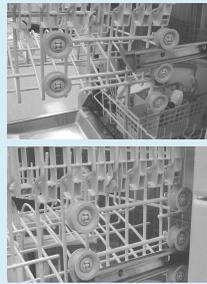

Adjust TOP RACK



RACKMATIC ADJUSTMENT

Push in handles simultaneously while pulling up or pushing down, depending on height desired.

2

Fill with Detergent



OPEN LID



FILL DISPENSER



CLOSE DISPENSER
Push down on base of arrow to lock while sliding cover closed.

With soft water, use less detergent

3

Fill with Rinse Aid



OPEN LID



FILL DISPENSER
Dispenser holds 3.5 oz. of rinse agent.




CLOSE DISPENSER

If dishes do not dry properly, check to make sure rinse agent dispenser is full and set for appropriate water hardness.

4

Start Program

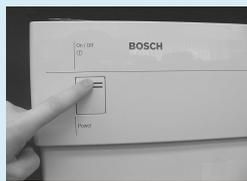

TURN ON



SELECT CYCLE




SELECT SPECIAL FEATURE (Optional)

After selecting a program cycle, you can also choose a special feature cycle.

HOW MUCH DETERGENT?

RINSE AID DIAL

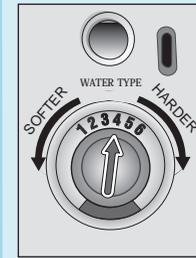

| Water Type | Types of Wash Cycles | | |
|------------|----------------------|--------------|---------------------|
| | Heavier Wash Cycles | Regular Wash | Lighter Wash Cycles |
| Hard | ← more | 25-45 ml | less → |
| Medium | ← more | 25 ml | less → |
| Soft | ← more | 15-25 ml | less → |

* If you are not sure of the hardness of your water, ask your local water company .

Items NOT RECOMMENDED to Put in Your Dishwasher

- Acrylic
- Adhesive Joined Items
- Bone Handled Utensils
- Iron
- Non-Dishware Items
- Pewter, Brass & Bronze
- Sterling Silver & Silverplate
- Tin
- Wood

See "Materials Chart" in Use & Care Manual for details.

If you are not sure an item is dishwasher safe, inquire through the manufacturer of the item.

WHY DOES THE WASH CYCLE TAKE SO LONG?

Run time can vary depending on cycle selected, amount of soil and temperature of incoming water.

WHEN ARE MY DISHES CLEAN?

1. When CLEAN LIGHT INDICATOR is illuminated
2. If LED displays: CL or O
3. If CYCLE COMPLETION SIGNAL beeps.

(To disable the beeper see "Special Features" section in Use & Care Manual.)

CUSTOMER SERVICE

If you cannot correct the problem yourself, contact a customer service representative at the Customer Service Number listed on the ID Label on the right side of Dishwasher door, or in the Use & Care Manual.

TROUBLESHOOTING

PROBLEMS

Unsatisfactory Washing Results

No Power or No water

White Deposits

Streaks on Dishes

Residual Water

Dishes not Drying

Suds

Detergent Dispenser cover will not close

Food redeposited on dishes

POSSIBLE SOLUTIONS

Incorrect amount of detergent or rinse agent. Inappropriate program selected. Rack overloaded. Wash arm rotation blocked. Clogged nozzles in wash arms. Make sure the filter is locked in place.

Check circuit breaker and make sure that water and electrical lines are connected.

Too little rinse aid used.

Too much rinse aid used.

Obstruction in large object trap. Kink in drain hose. Air gap clogged. Check to make sure kitchen sink is draining well, if not, you may need a plumber instead of a dishwasher repairman.

Make sure rinse aid dispenser is full and check the materials section and make sure it is set at the right water hardness.

Make sure only automatic dishwasher detergents are used. Refer to Detergent Usage Chart on this Quick Reference Guide.

First, check to make sure you push down on the arrow with your thumb, while closing the dispenser. A program was not completely finished. Cancel drain, turn off, then on, then try to close dispenser cover again.

Make sure the filter is locked in place.