

PRODUCT MODEL NUMBER


JUW248L

JUW248R

Electrical: 115-Volt, 60-Hz, AC-only 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your wine cellar be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

NOTE: Before performing any type of installation, cleaning or removing a light bulb, unplug wine cellar or disconnect power.


LOCATION REQUIREMENTS

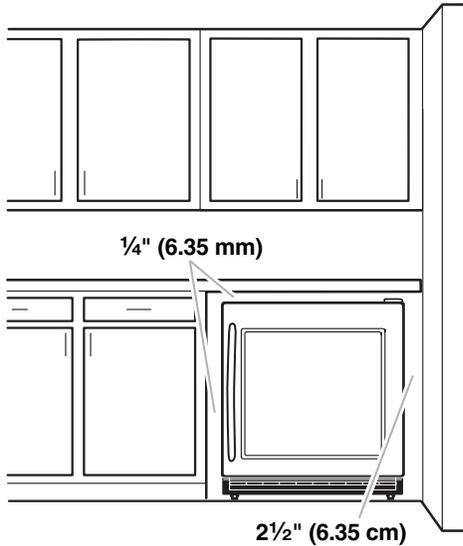

To ensure proper ventilation for your wine cellar, allow for a 1/4" (6.35 mm) space on each side and at the top. When installing your wine cellar next to a fixed wall, leave 2 1/2" (6.35 cm) minimum clearance on each side to allow for the door to swing open.

NOTE: It is recommended that you do not install the wine cellar near an oven, radiator, or other heat source. Do not install in a location where the temperature will fall below 55°F (13°C). For best performance, do not install the wine cellar behind a cabinet door or block the base grille.

PRODUCT DIMENSIONS

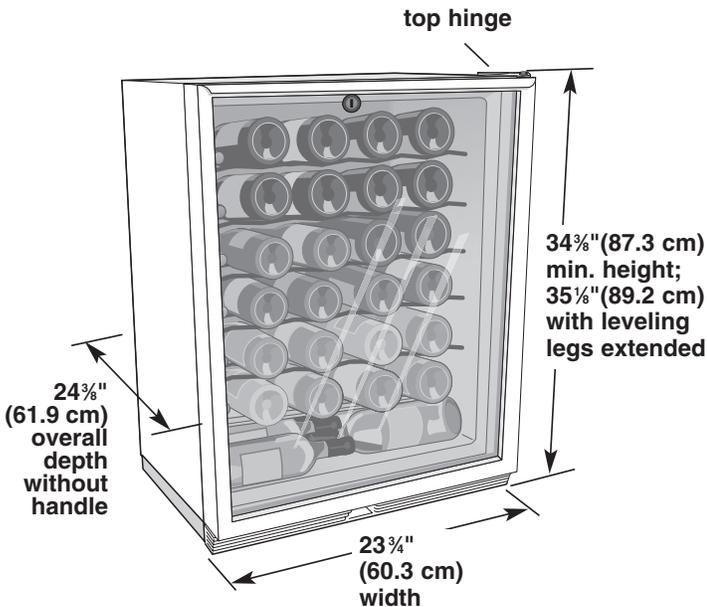

CUSTOM OVERLAY FRAME


If you plan to install a custom overlay frame, you will need to create the frame yourself or consult a qualified cabinetmaker or carpenter. See dimension drawings for frame specifications.

IMPORTANT:

- The thickness of the overlay frame must be 3/4" (1.91 cm).
- Overlay frame must not weigh more than 10 lbs (4.54 kg).
- Overlay frames weighing more than recommended may cause damage to your appliance.

Overlay Frame — Rear View

Create the custom overlay frame using the dimensions shown.

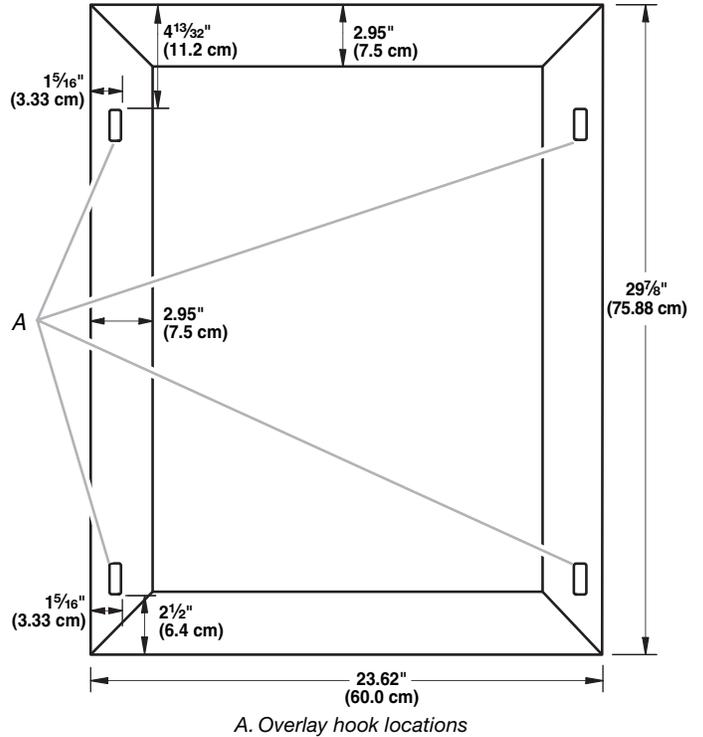

Install Overlay Hooks

Using a Phillips screwdriver and eight flat-head screws attach the overlay hooks to the back of the overlay frame. See "Overlay Frame—Rear View" for overlay hook locations.

