



FACT SHEET

Total Control – Customer Handset Configuration

Your Total Control Appliance is supplied with a handset; this will enable you to create a program to control the oven on and off times. This guide must be read in conjunction with the Installation Instructions supplied with your AGA.

How to communicate the handset and the appliance

Before the handset can be programmed it will need to be configured with your AGA. Please ensure the batteries are installed correctly into the handset, the battery configuration is labeled inside the battery compartment.

The handset can be activated 30 seconds after the mains power has been supplied to the AGA. The standby button on the touch panel must be 'ON' and the communication process must be completed within 2 minutes. If the time elapses then you will need to repeat the process.

Press and hold the  button for 10 seconds to open the communication synchronization screen, the following message will appear



Simultaneously press the  and  buttons, the serial number will be found by the handset. The following message will briefly appear



Use the  and  buttons to choose the language you require the handset text to be in, then press  button to confirm the language choice required.

The handset is now synchronized, for detailed instructions on programming your handset please refer to your installation guide supplied with your AGA

Hints and Tips

- The handset will only operate within the same room as the AGA and up to a maximum distance of 4m away. If the handset reads standby this is usually due to the handset not operating within the range specified. To rectify move within the specified distance the handset should then correct itself.
- The program for controlling the ovens is contained within the appliance software, in the unlikely event that your handset doesn't communicate with your appliance, the ovens will continue to work on the programs.
- When transferring the information, it is advisable to operate the handset in front of the cooker as this gives the strongest signal.
- If the  symbol is displayed in the right hand corner of the screen, the handset is out of range with the cooker or the communication / handshake process has not been completed.
- When the communication is ok then the  symbol is displayed
- The  button can be used to force the communication between the cooker and the handset. This function is active once a successful initial communication has been made and the handset is in range.
- The handset will **NOT** automatically adjust for BST (British Summer Time) this will need to be adjusted manually



Screens

The handset has 3 main screens.

1. The Information Home screen (main menu)
2. The Date/Time screen
3. The Events Programming screen

The display will revert to 'sleep' mode after approximately 3 minutes. Simply press the required button to open up any screen.

Button Operations

1.  Communication or 'Handshake' button
used initially to synchronise the handset to the AGA Total Control.
2.  Clock button
Opens and closes the date and time settings screen.
3.  Left/Back Button
Moves back and highlights the previous setting.
4.  Plus Button
Increases the highlighted setting.
5.  Minus Button
Decreases the highlighted setting.
6.  Right/Forward Button
Moves forward and highlights the next setting.
7.  Copy Button
copies the time program from the current day to the following day in the 7-day event calendar screen.
8.  7-day event Button
Opens and closes the 7-day event calendar screen.