




30" FREESTANDING ELECTRIC RANGE

MODELS:

WFE505W0HB3 (Black)
WFE505W0HW3 (White)


COOKTOP PARTS

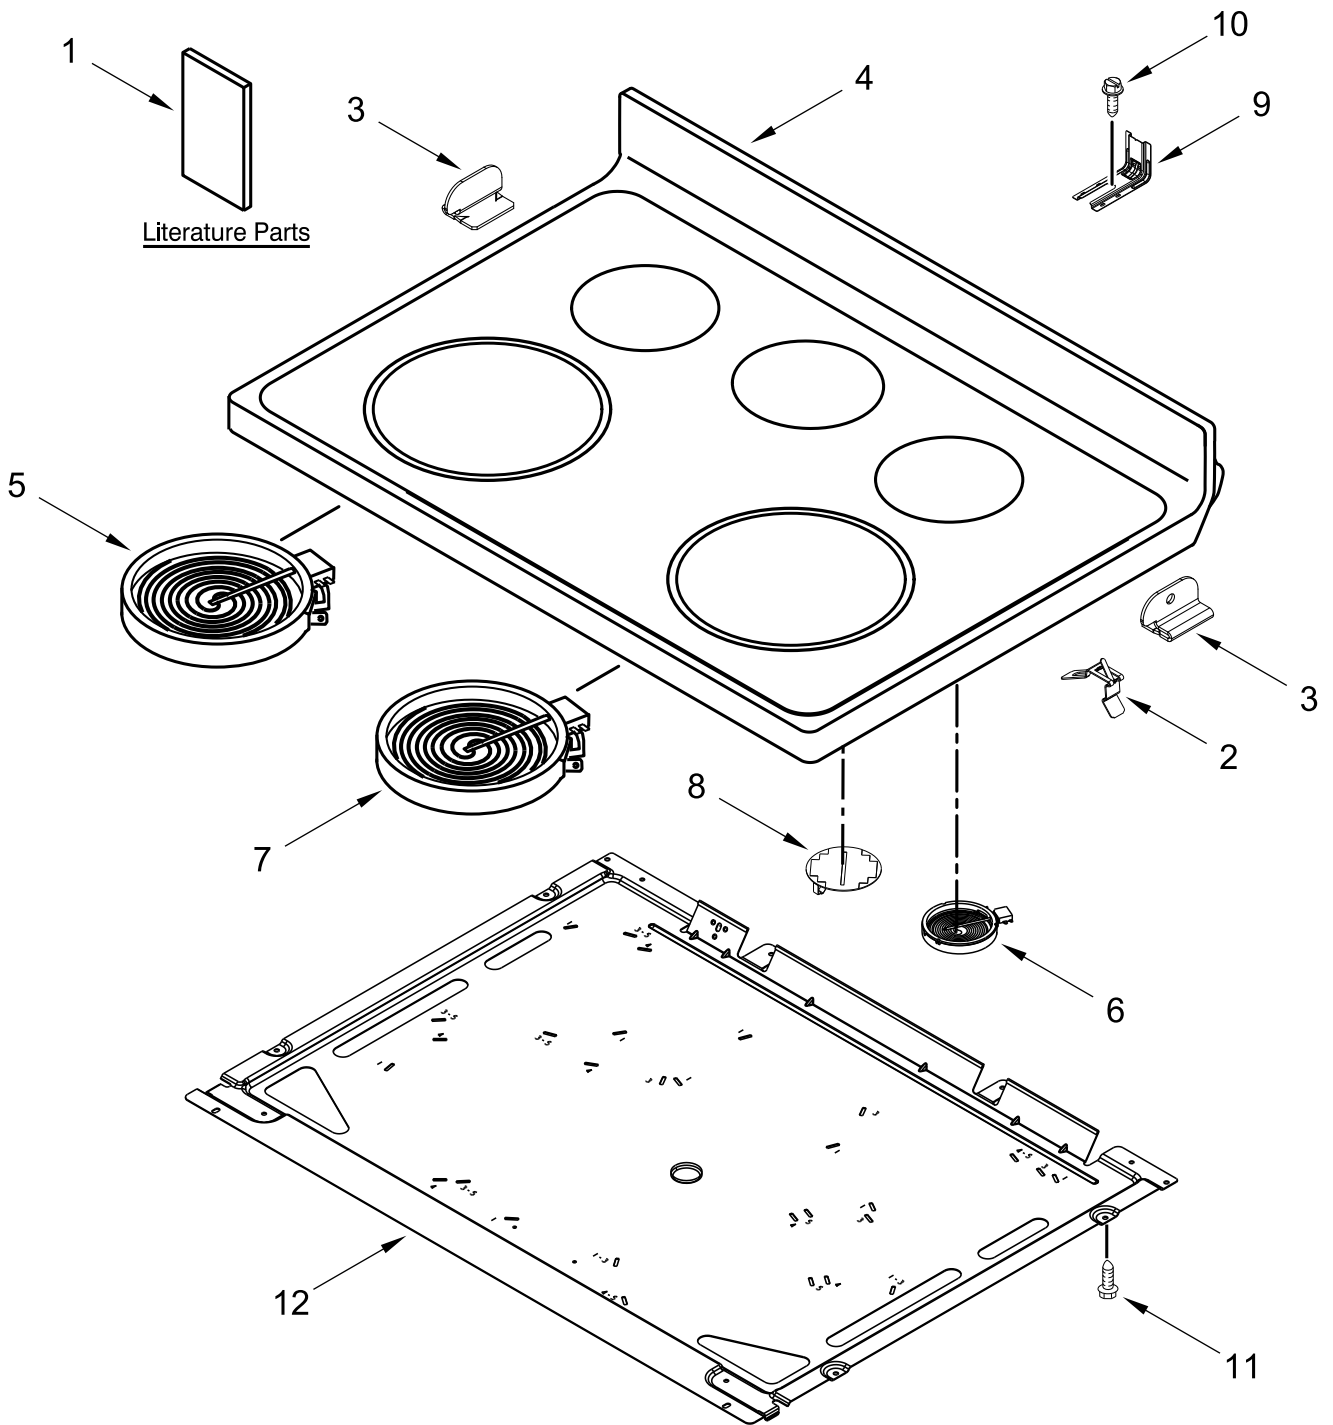

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000/1400W)	12	W10691223	Pan, Radiant Element
	W11333124	Use and Care Guide			(Left Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11333088	Installation Instructions	6	W10248261	Element (1200W)		W11452624	Harness, Main
	W11326982	Diagram, Wiring			(Left Rear and Right Rear)		W11134592	Harness, Warm Zone
	W11351201	Tech Sheet	7	W10248262	Element (2500W)		W11134551	Harness, Cooktop (Right)
2	W10225448	Spring, Element			(Right Front)		W11134603	Harness, Cooktop (Left)
3	W10607641	Bracket, Cooktop (Left)	8	W10799048	Element, Warm Zone			
	W10607642	Bracket, Cooktop (Right)			(Center)			
4		Cooktop	9	W11379945	Bracket, Anti-Tip			
	W11034825	Black	10	7101P485-60	Screw, Anti-Tip Kit			
	W11034824	White	11	3196169	Screw			


CONTROL PANEL PARTS

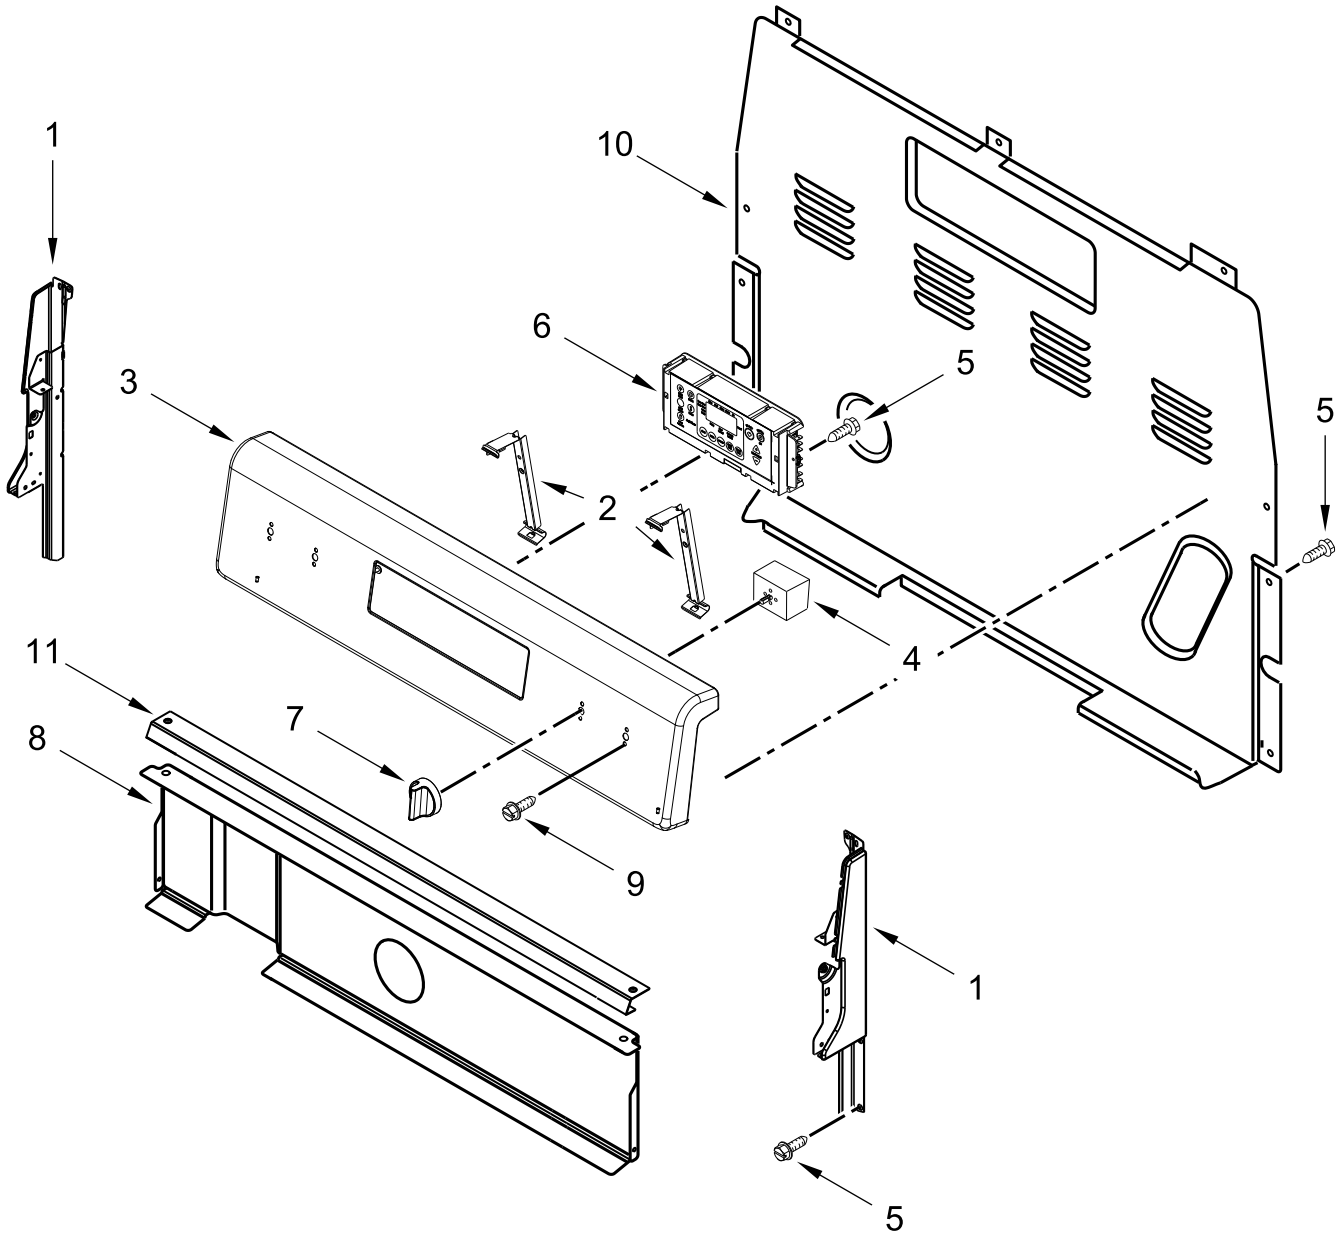

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	6		Control, Electronic (LCX)
	W11130372	Black (Left)			(Left Front)		W11511579	Black
	W11130379	Black (Right)		3148951	Switch, Infinite		W11428349	White
	W11130371	White (Left)			(Left Rear and Right	7		Knob
	W11130378	White (Right)			Rear)		W11022718	Black
2	W10695491	Bracket, Control		3148954	Switch, Infinite		W11022720	White
3		Panel, Console			(Orange)	8	W10134247	Shield, Heat
	W11027374	Black			(Right Front)	9	3400882	Screw
	W11027375	White	5	3196169	Screw	10	8272473	Cover, Upper Rear
						11	W10525121	Bracket, Console Mounting


CHASSIS PARTS

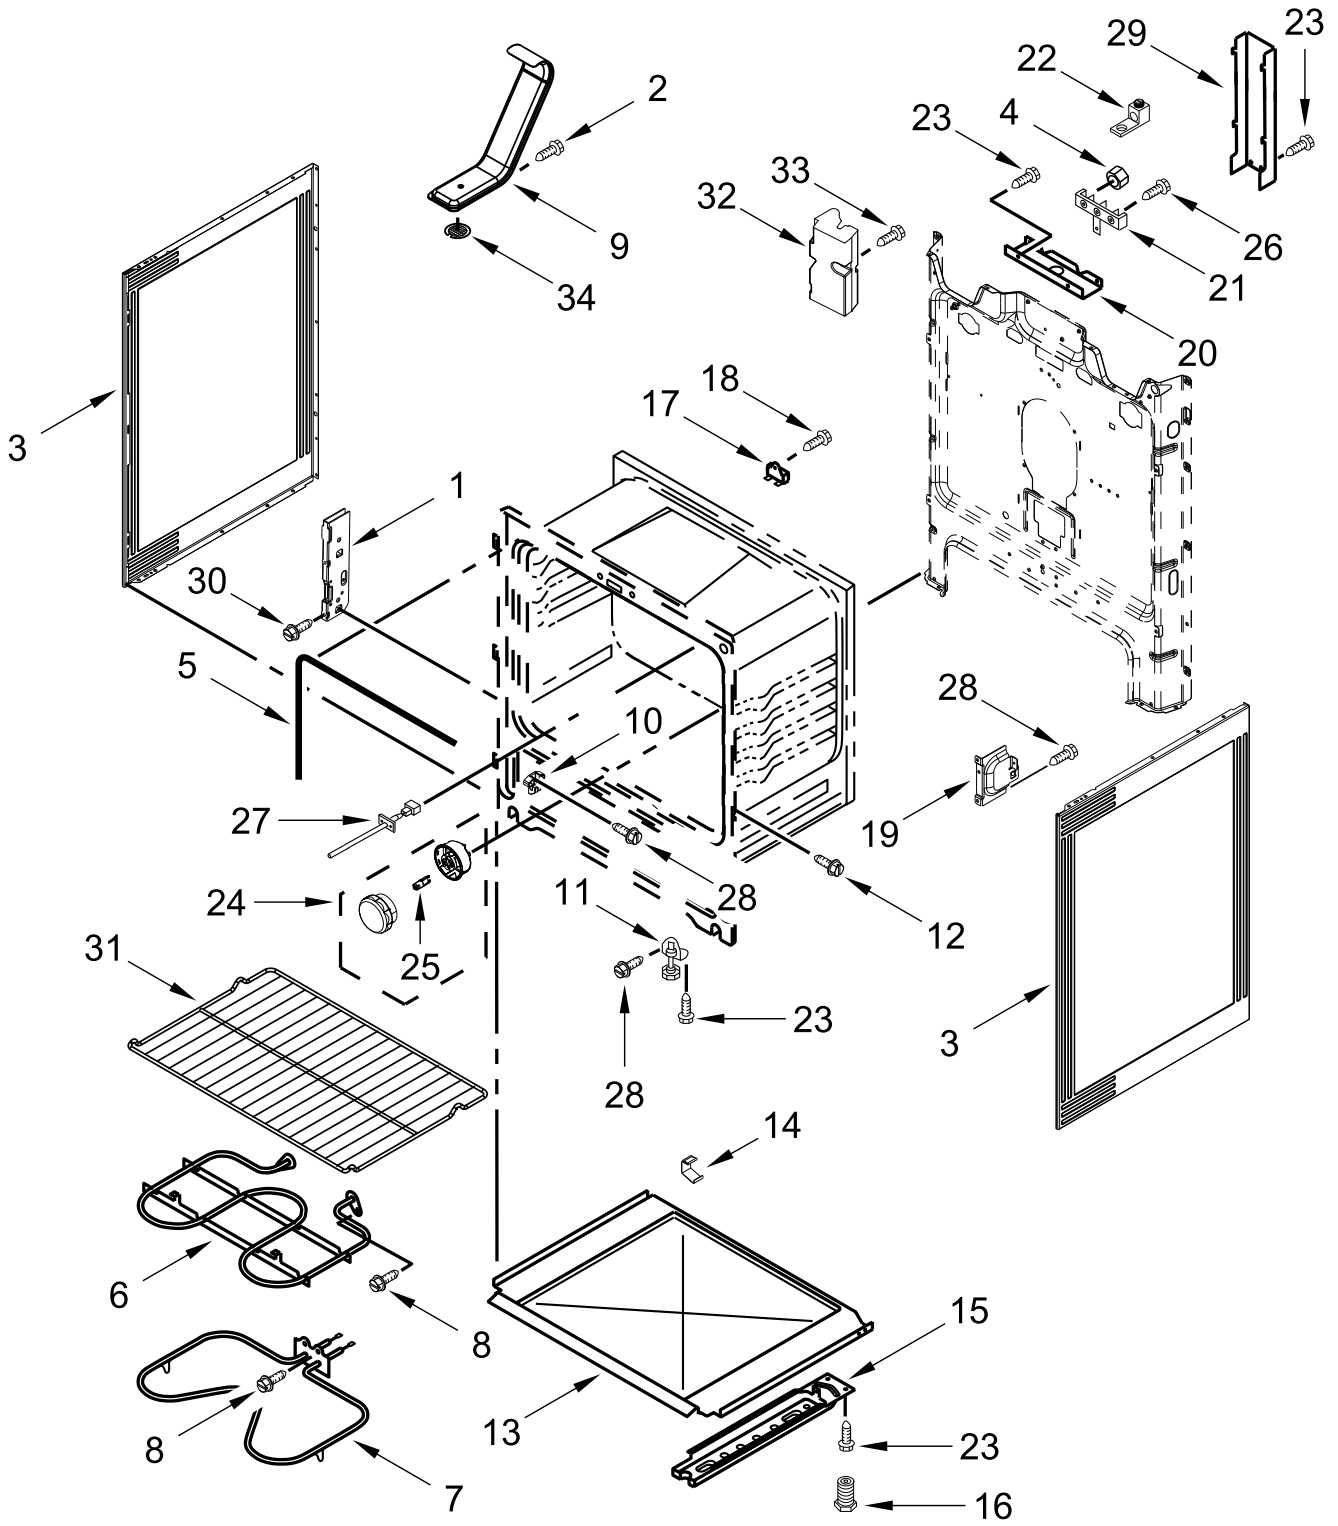

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	15	W10390007	Base Rail Assembly (Right)	27	W10181986	Sensor, Oven
2	W10362924	Screw				28	3196169	Screw
3		Panel, Side		W10390008	Base Rail Assembly (Left)	29	W10326122	Cover, Terminal Block
	W10162245	Black				30	W10031780	Screw
	W10575396	White	16	W10058460	Foot, Leveling	31	W11173792	Rack, Oven
4	3400029	Nut	17	3196548	Fuse, Thermal	32	W10910404	Counterweight
5	W10129032	Seal, Door	18	3196172	Screw	33	W11034869	Screw
6	9757340	Element, Broil	19	W10404688	Clip, Oven Support	34	9761301	Screen, Vent
7	W11111743	Element, Bake	20	3186034	Bracket, Service			FOLLOWING PARTS NOT ILLUSTRATED
8	3196154	Screw	21	W10245259	Block, Terminal		8273263	Insulation, Wrap
9	W10134285	Tube, Vent	22	W10281322	Kit, Bare Wire Adapter Block		8272611	Insulation, Back
10	W10674705	Glide, Drawer Front					W10333344	Insulation, Flue
11	W10341186	Front Foot Assembly	23	3196178	Screw			
12	W10067840	Screw	24	W11430367	Light Assembly			
13	8054068	Retainer, Insulation	25	W10571723	Bulb, Halogen 40 Watts			
14	W10137382	Clip, Panel	26	3400016	Screw			


DOOR PARTS

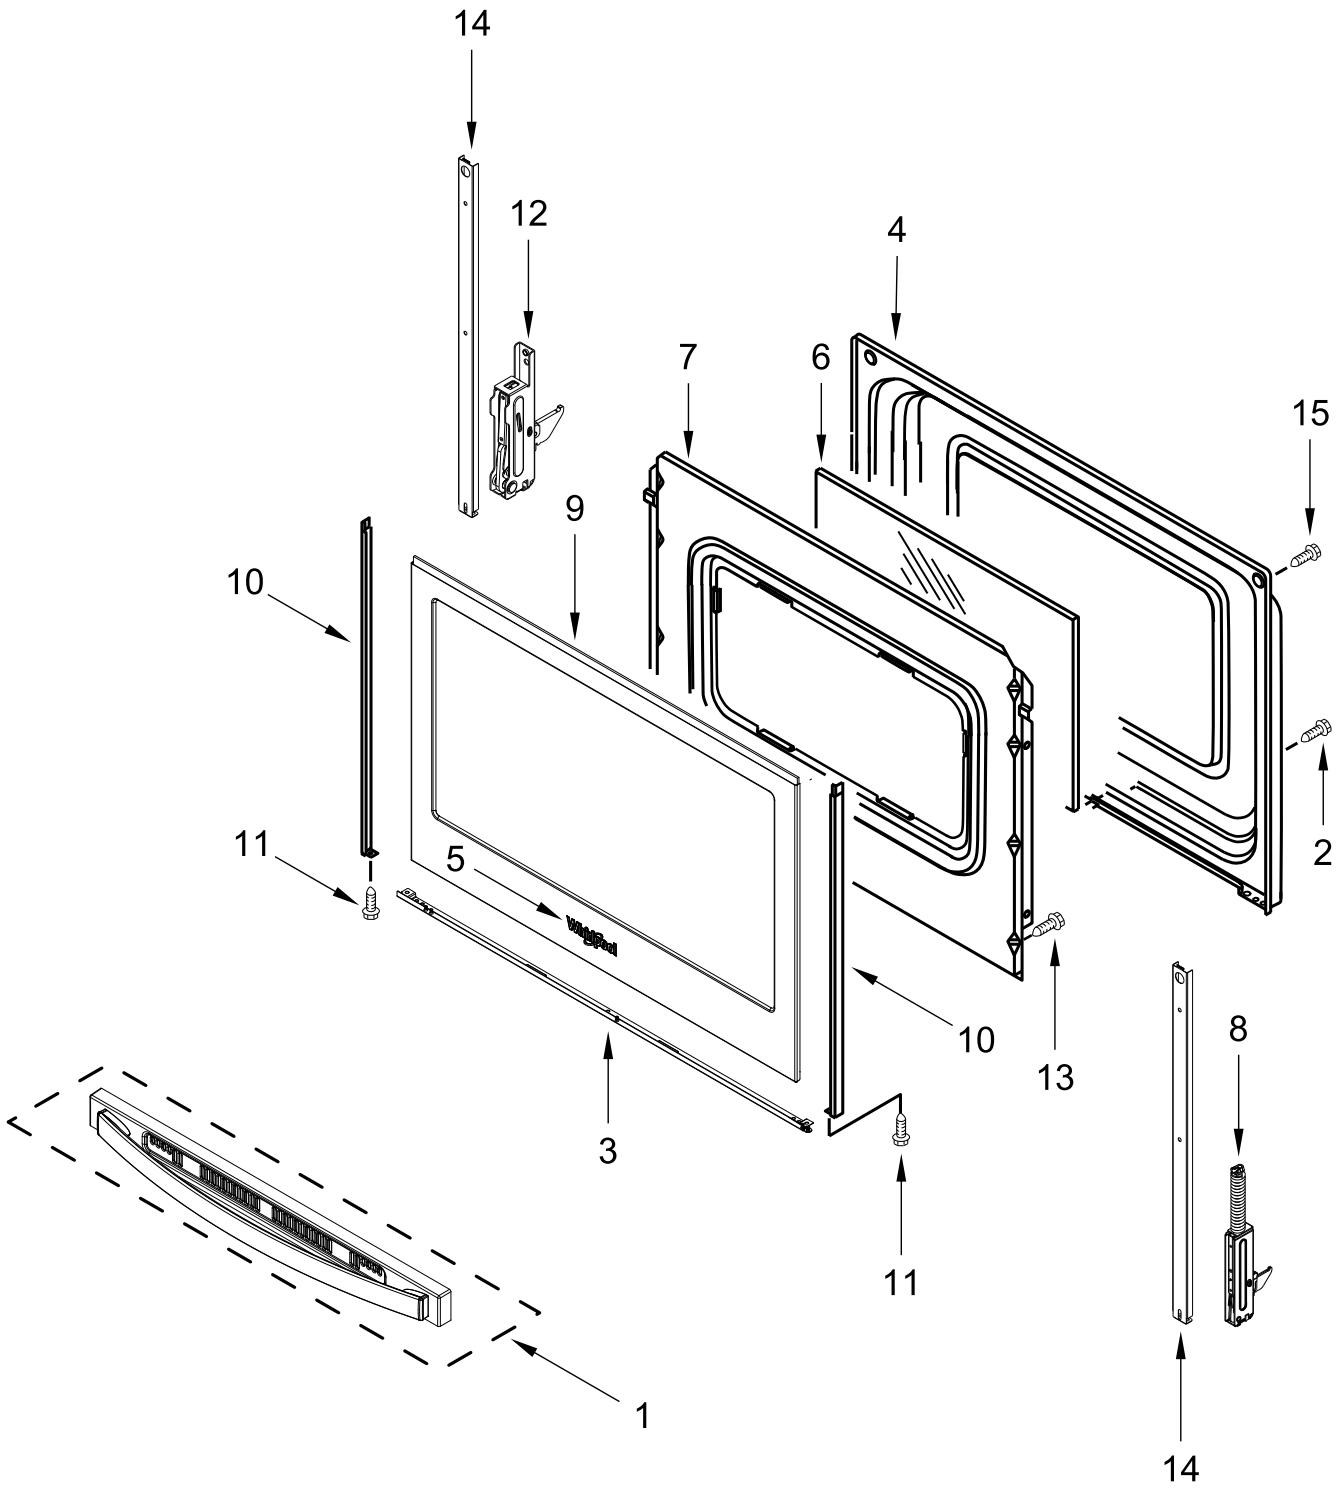

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	7	9761505	Retainer, Insulation	11	W10327235	Screw
	W11242949	Black	8	W10299225	Hinge, Active	12	W10299227	Hinge, Door (Passive)
	W11242947	White	9		Glass Assembly, Outer Door	13	W10031780	Screw
2	W10031790	Screw		W10884159	Black	14	W11379944	Strap, Door
3		Trim, Lower Door		W10409945	White	15	W10200660	Screw
	8523177	Black	10		Trim, Side			
	8523175	White		W10746436	Black (Left)			
4	9761344	Liner, Door		W10746435	Black (Right)			
5	W10884775	Badge		8523172	White (Left)			
6	W11367326	Glass, Inner		8523166	White (Right)			

DRAWER PARTS

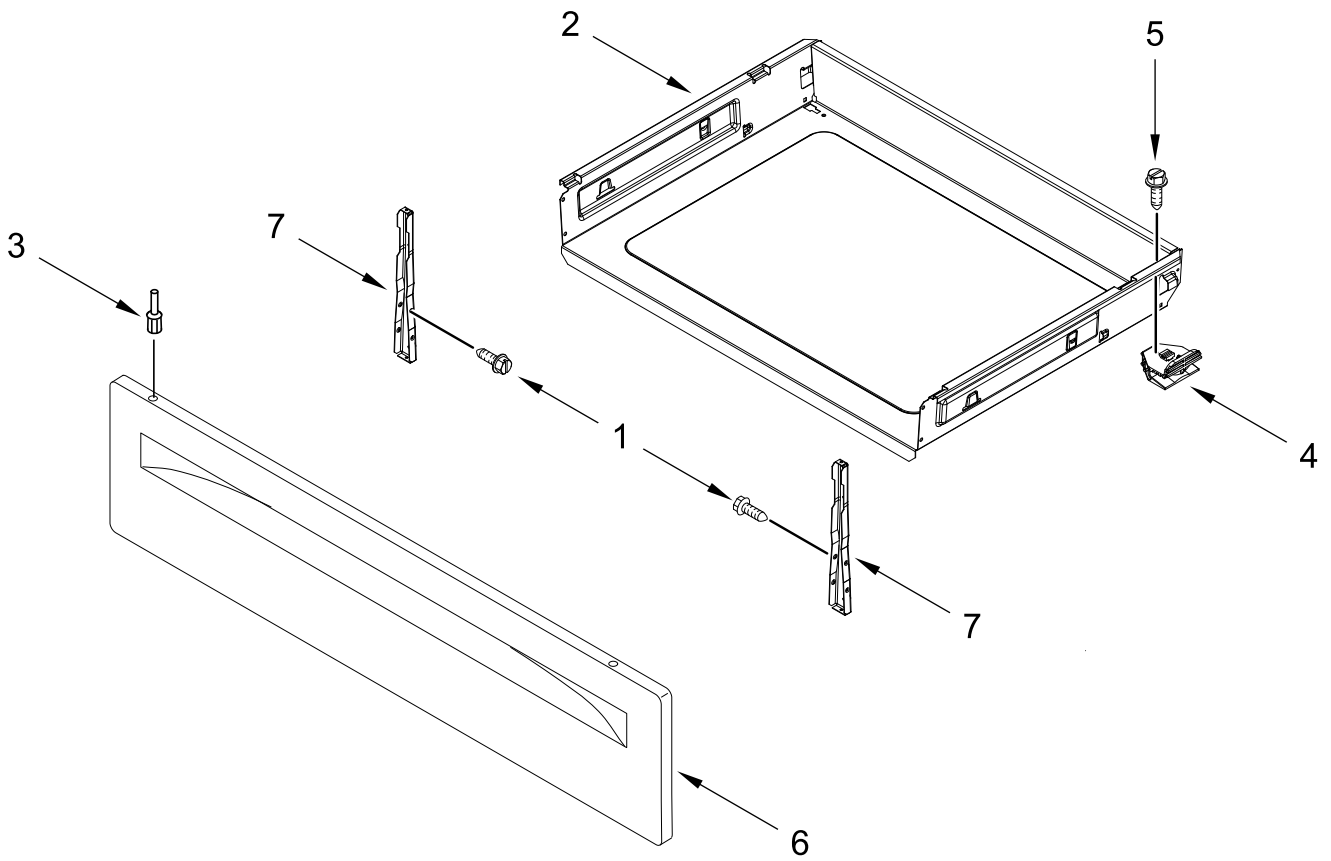

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196169	Screw
2	W10688022	Drawer, Storage
3		Rivet, Push
	3196813	Black
	3196814	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear
5	3196165	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6		Panel, Drawer Front
	W11123900	Black
	W11123901	White
7	W10462912	Bracket, Mounting Drawer

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting