




## **24" ELECTRIC FREESTANDING RANGE**

### **MODELS:**

WFE500M4HS0 (Stainless)


# COOKTOP AND CONTROL PARTS

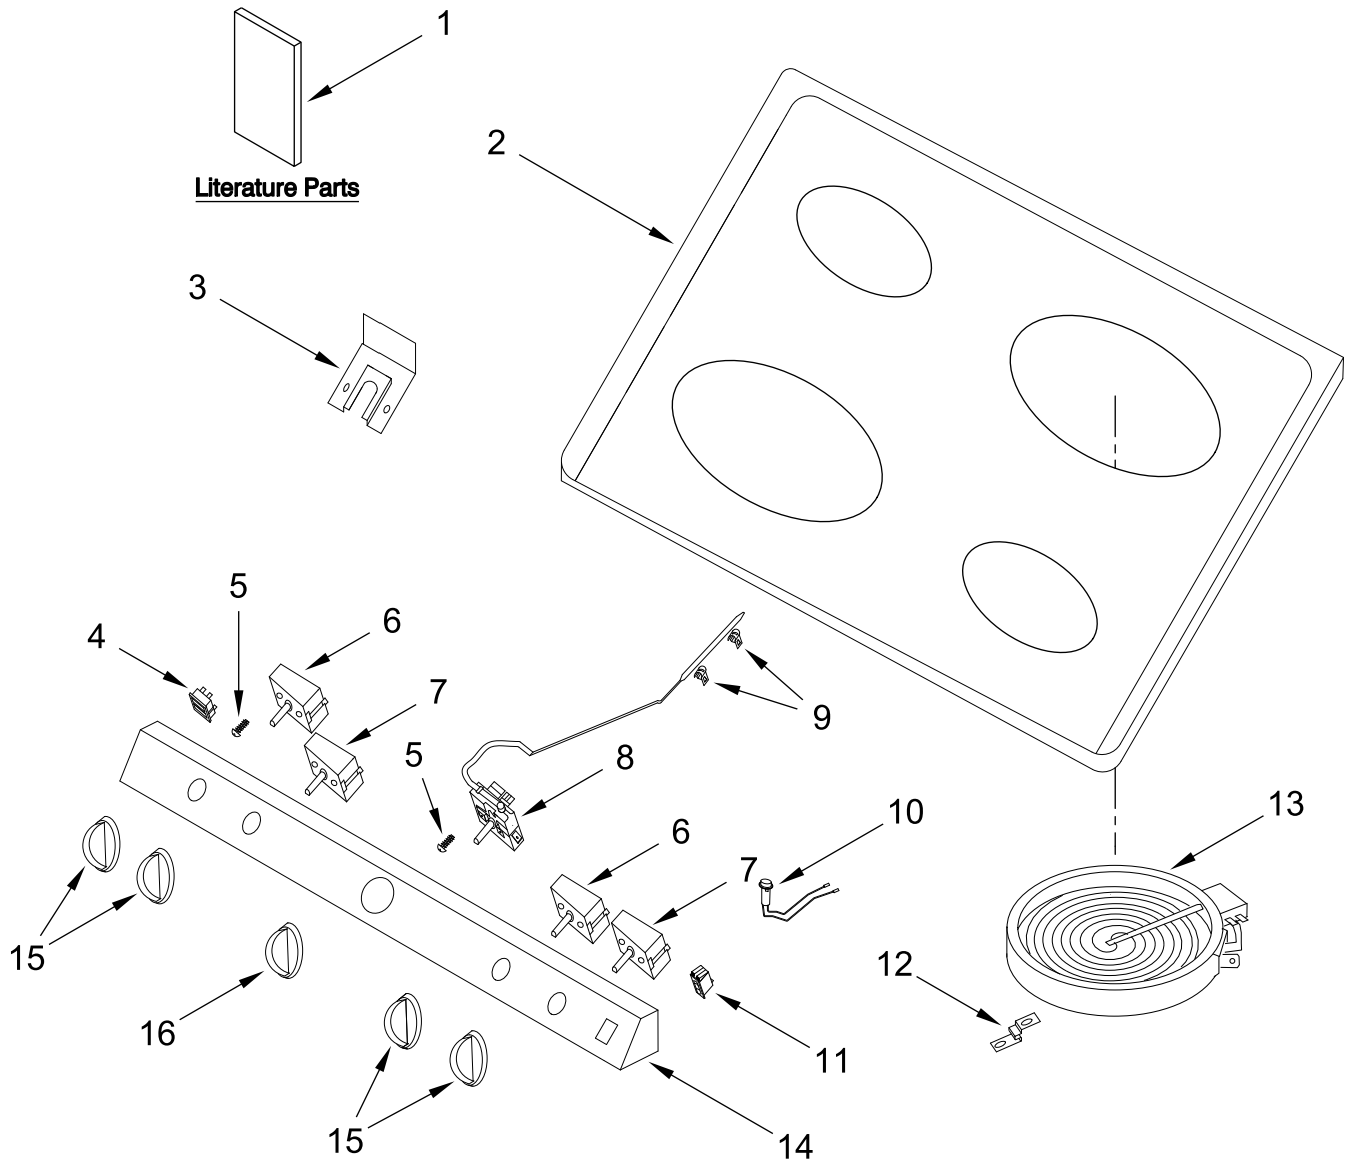

# COOKTOP AND CONTROL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	W11223836	Clip, Thermostat Bulb	16	W11223404	Knob, Oven Thermostat
	W11169654	Use and Care Guide	10	W11223435	Indicator, Hot Surface			FOLLOWING PARTS NOT ILLUSTRATED
2		Cooktop	11	W11223432	Switch, Oven Light			
	W11222946	Black	12	W11223394	Spring, Element		W11223832	Harness, Wire
3	W11223004	Bracket, Anti-Tip	13	W11223381	Element (2000W)		W11223834	Wire, Jumper
4	W11223400	Indicator, Surface and Oven			(Left Front, Right Rear)			
5	W10197682	Screw		W11223389	Element (1200W)			
6	W10197679	Switch, Infinite (2000W)			(Left Rear, Right Front)			
7	W10197681	Switch, Infinite (1200W)	14	W11222947	Panel, Control			
8	W11223396	Thermostat, Oven	15	W11223402	Knob, Burner			


# CHASSIS PARTS

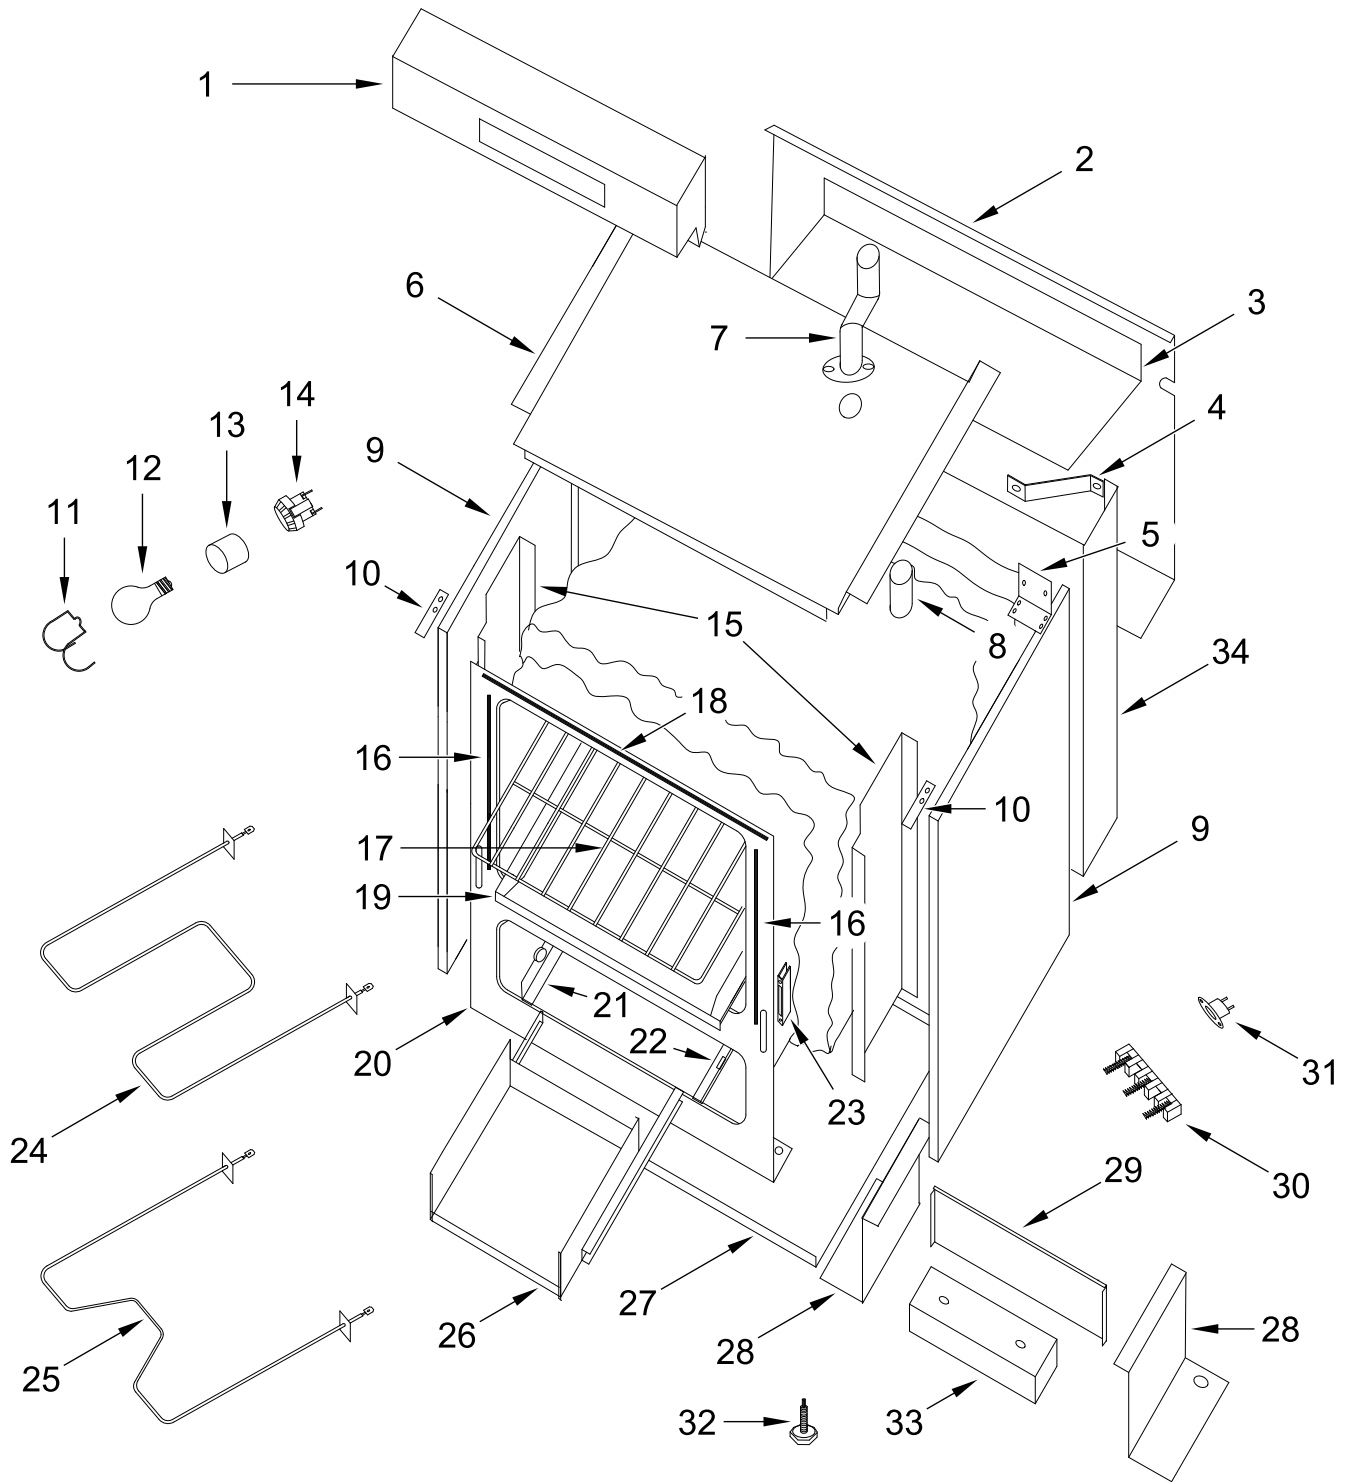

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222948	Backguard, Vented	13	W11223424	Socket, Bulb	27	W11222953	Bottom, Main
2	W11223003	Cover, Rear	14	4364091	Receptacle, Light	28	W11222995	Support, Rear Side
3	W11223018	Deflector, Moisture	15	W11222969	Baffle, Inner Side	29	W11222996	Cross Brace, Rear
4	W11223015	Brace, Back	16	W11222989	Gasket, Oven Side	30	4364187	Block, Terminal
5	W11222997	Retainer, Rear Top	17	W11222957	Rack, Oven	31	4364176	Switch, Limit
6	W11222952	Bottom, Burner Box	18	W11222984	Gasket, Oven Top	32	4364080	Leg, Leveler
7	W11222980	Vent Tube, Upper	19	W11222991	Bottom, Oven	33	W11223037	Counterweight
8	W11222976	Vent Tube, Lower Oven	20	W11222993	Frame, Front	34	W11222960	Back, Main
9		Panel, Side	21	4364363	Runner, Drawer (Left)			INSULATION
	W11222958	Black	22	4364364	Runner, Drawer (Right)	W11222964		Insulation, Wrap
10	W11222951	Retainer, Front Top	23	W11222949	Receiver, Hinge	W11222962		Insulation, Back or Bottom
11	W11223426	Guard, Oven Light	24	W11223408	Element, Broil	W11223376		Retainer, Insulation
12	4364092	Bulb, Light	25	W11223410	Element, Bake			
			26	W11222999	Body, Storage Drawer			

# DOOR PARTS

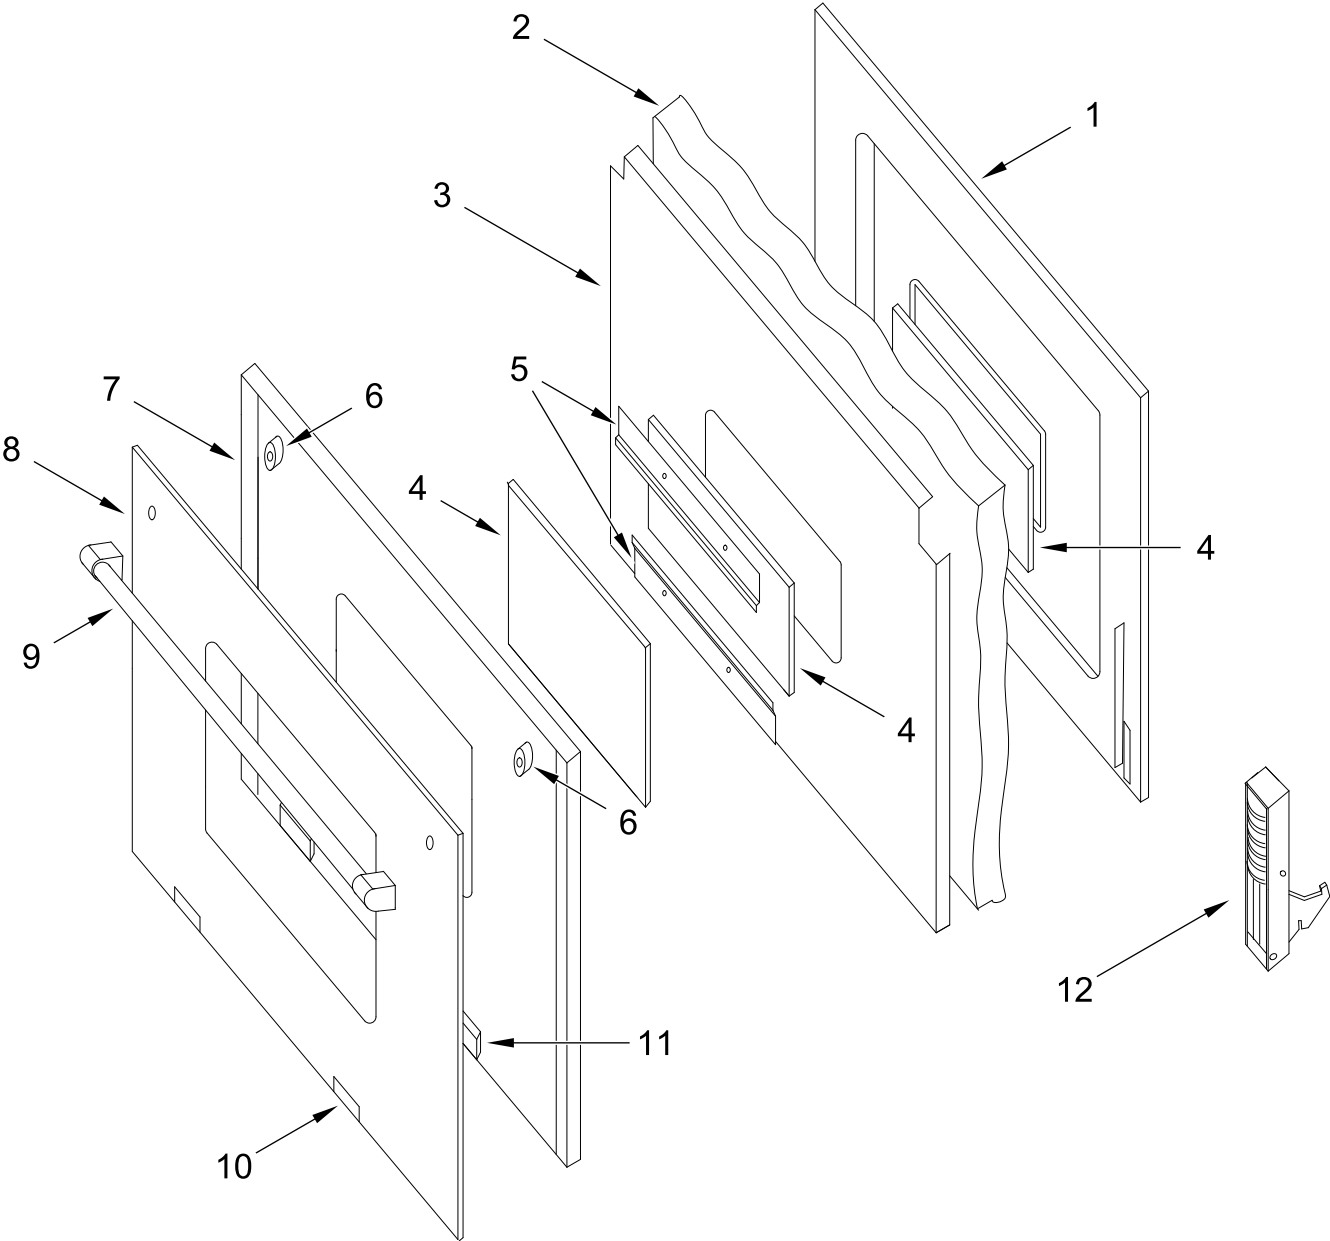


# DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11223440	Liner, Door
2	W11223441	Insulation, Door
3	W11223444	Retainer, Door Insulation
4	W11223445	Glass, Door
5	W11223460	Retainer, Glass

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	W11223466	Spacer
7	W11223451	Panel, Inner Door
8	W11223453	Panel, Outer Door
9	W11223454	Handle, Door
10	W11223469	Clip, Glass Retainer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	W11223467	Spacer, Flat
12	W11223459	Hinge, Oven Door

# DRAWER FRONT PARTS

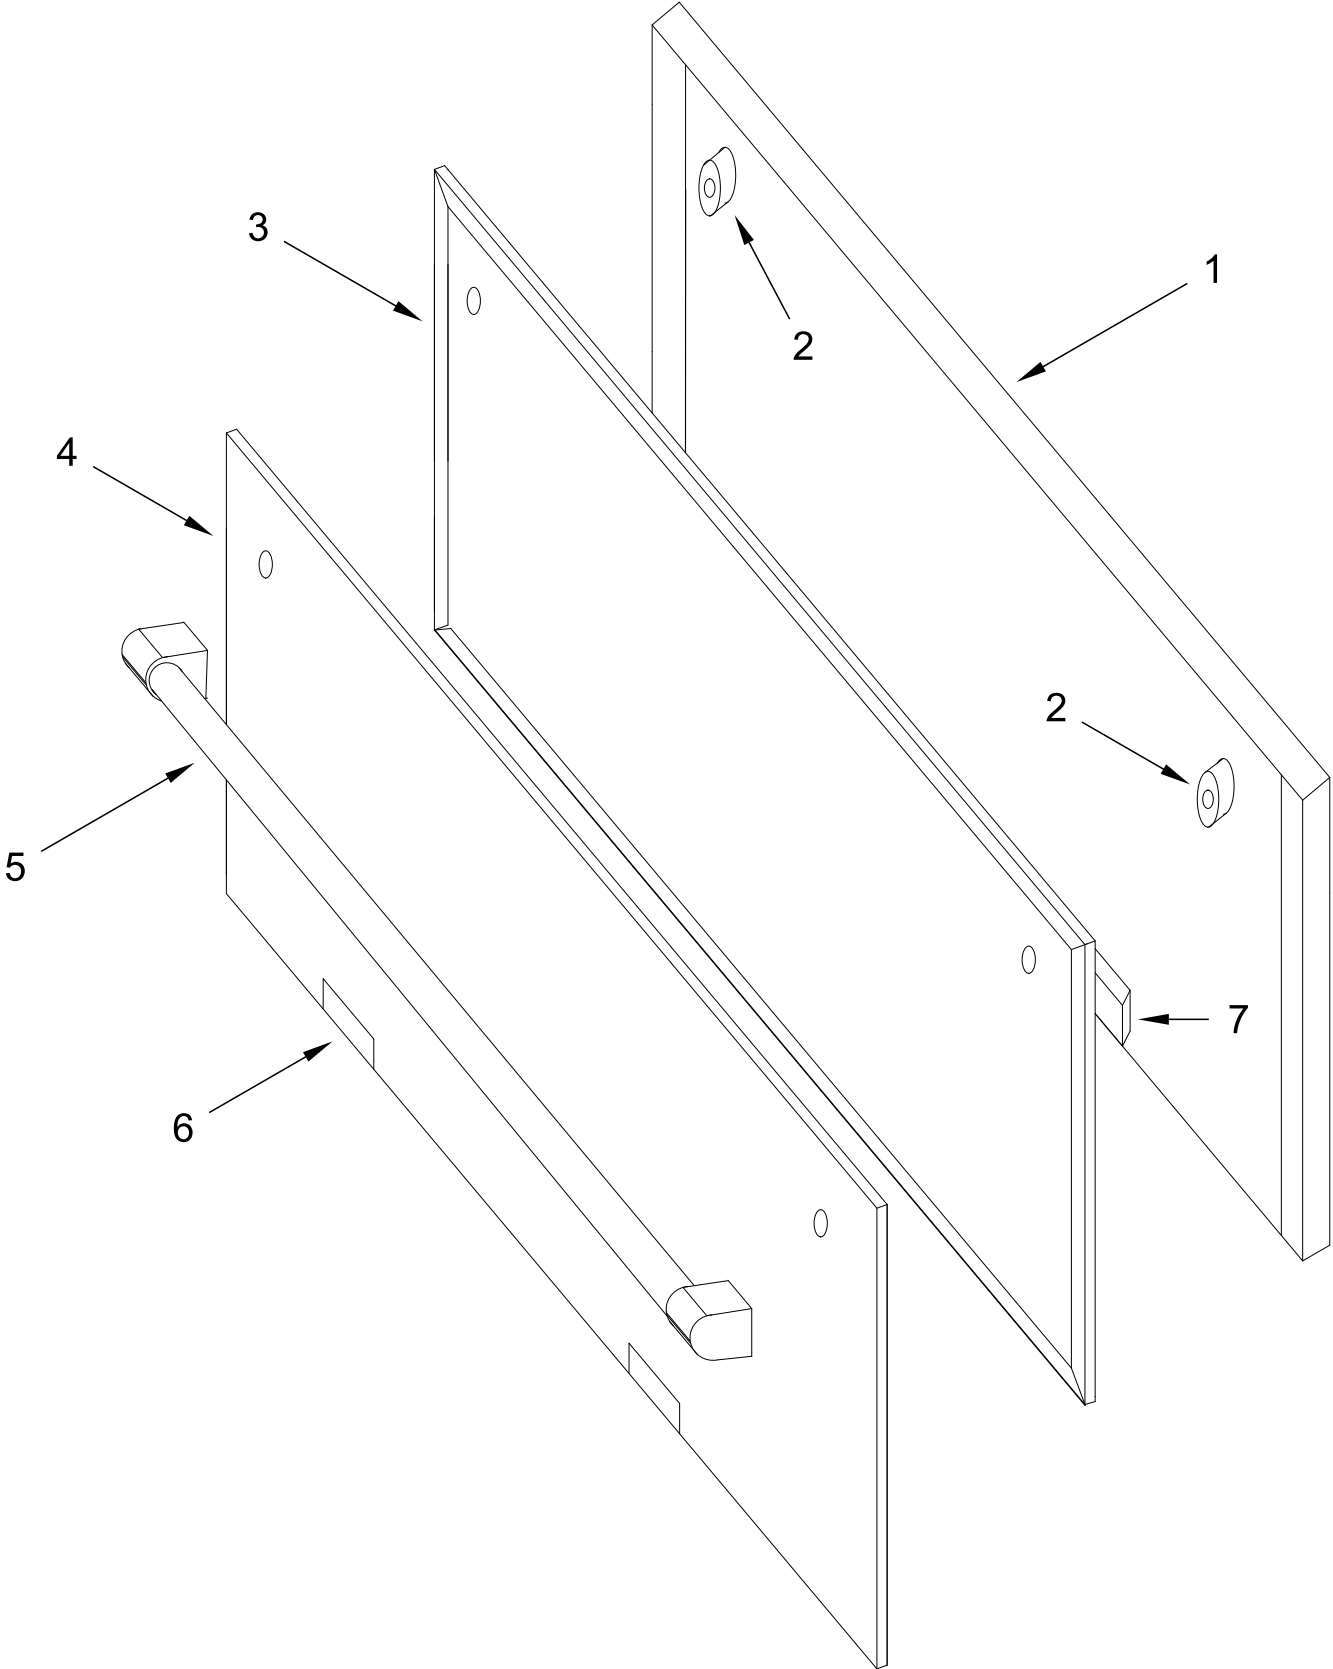



# DRAWER FRONT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11223473	Panel, Inner Drawer	4	W11223476	Panel, Outer Drawer	6	W11223469	Clip, Glass Retainer
2	W11223466	Spacer	5	W11223454	Handle, Door	7	W11223467	Spacer, Flat
3	W11223475	Sub-Panel, Drawer						