UNDERCOUNTER DISHWASHER

MODELS:

WDF550SAHB0 (Black)
WDF550SAHW0 (White)
WDF550SAHS0 (Stainless)

04/23/2018
© 2018 Whirlpool Corporation
Part No. W11239563 Rev. A

CONTROL PANEL AND OUTER DOOR PARTS

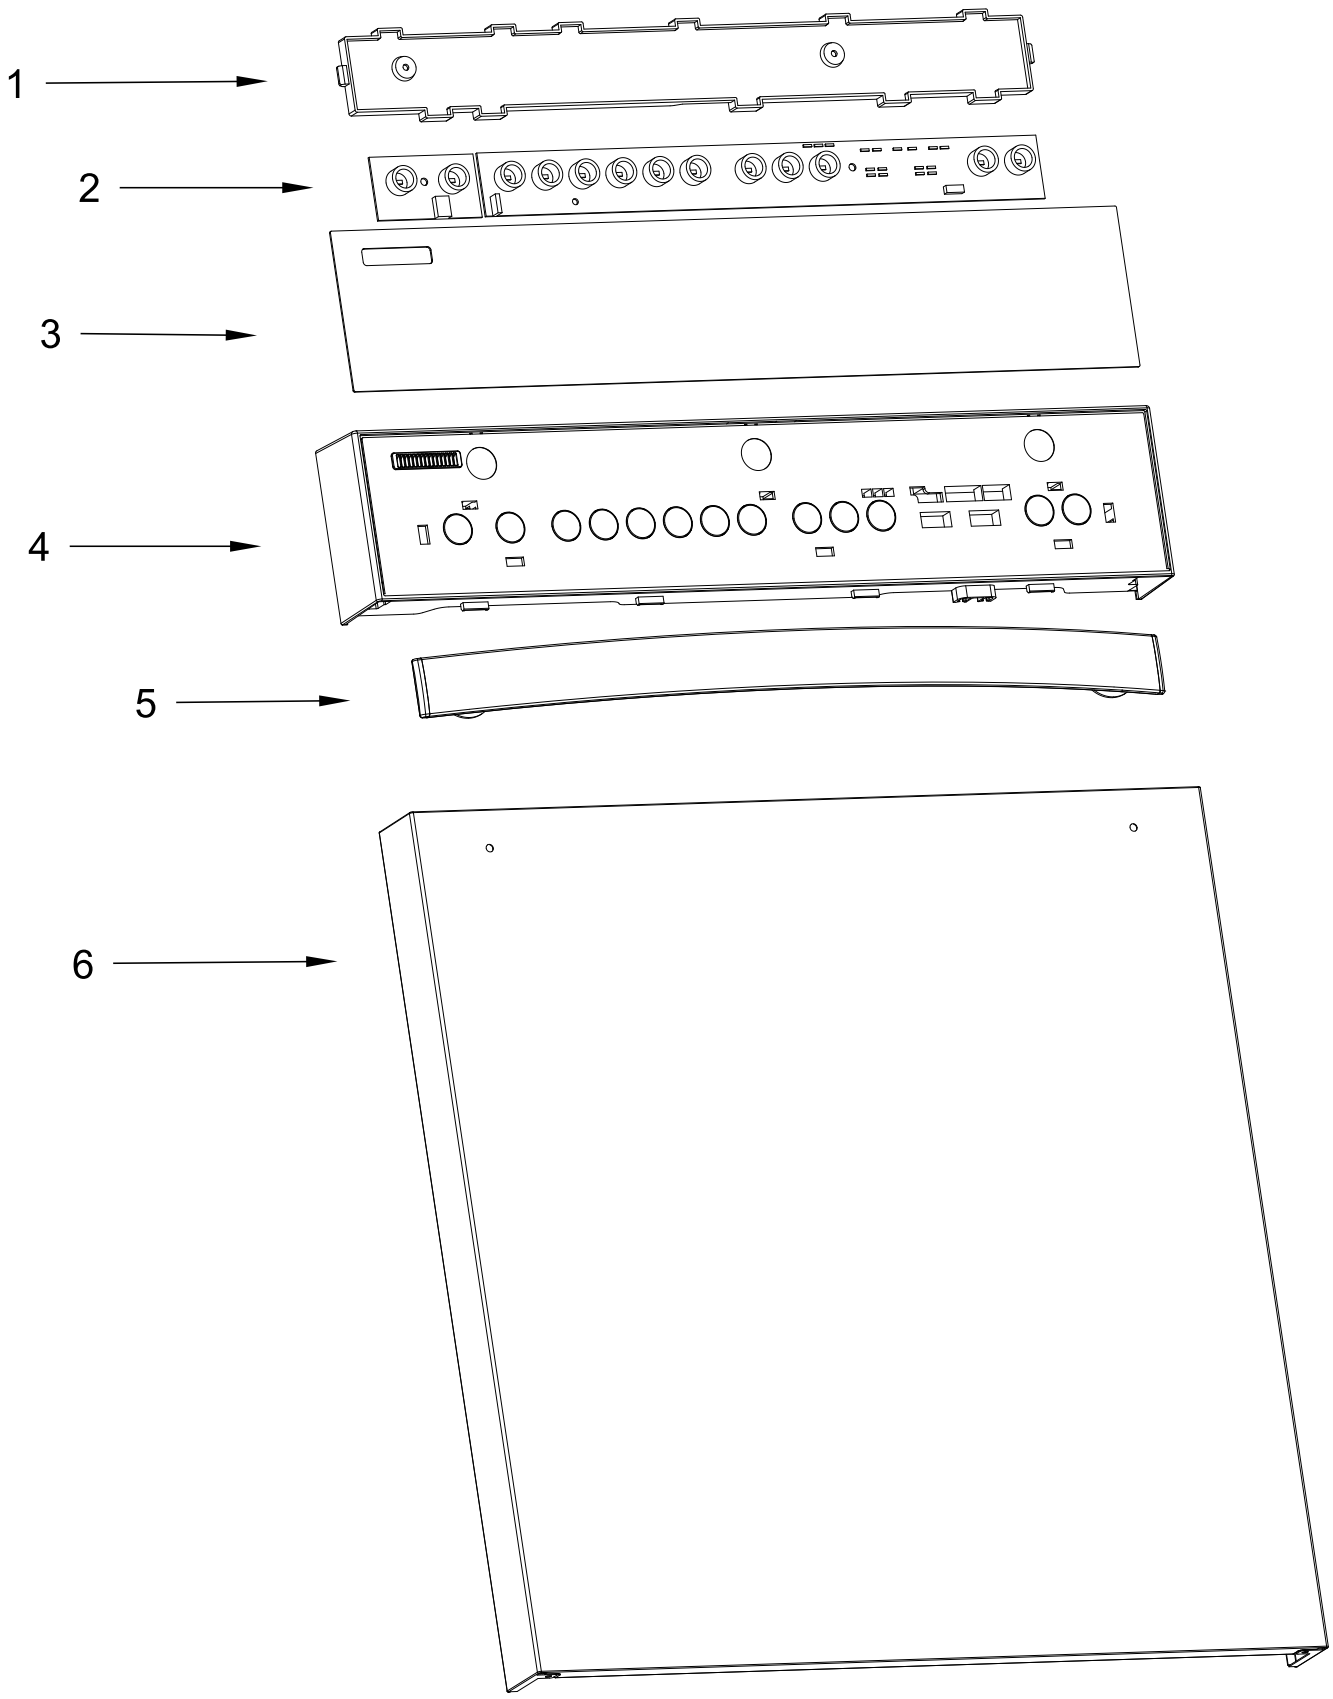

CONTROL PANEL AND OUTER DOOR PARTS

Illus. No.	Part No.	Description
1	W11230391	Housing, PCB Display
2	W11230393	Control Board, Display
3		Console Overlay
	W11230396	Black
	W11230554	White
4		Console Assembly
	W11230397	Black
	W11230555	White
	W11230528	Stainless
5		Handle Assembly
	W11230399	Black
	W11230556	White
	W11230547	Stainless
6		Panel, Front
	W11230402	Black
	W11230557	White
	W11230548	Stainless

INNER DOOR PARTS

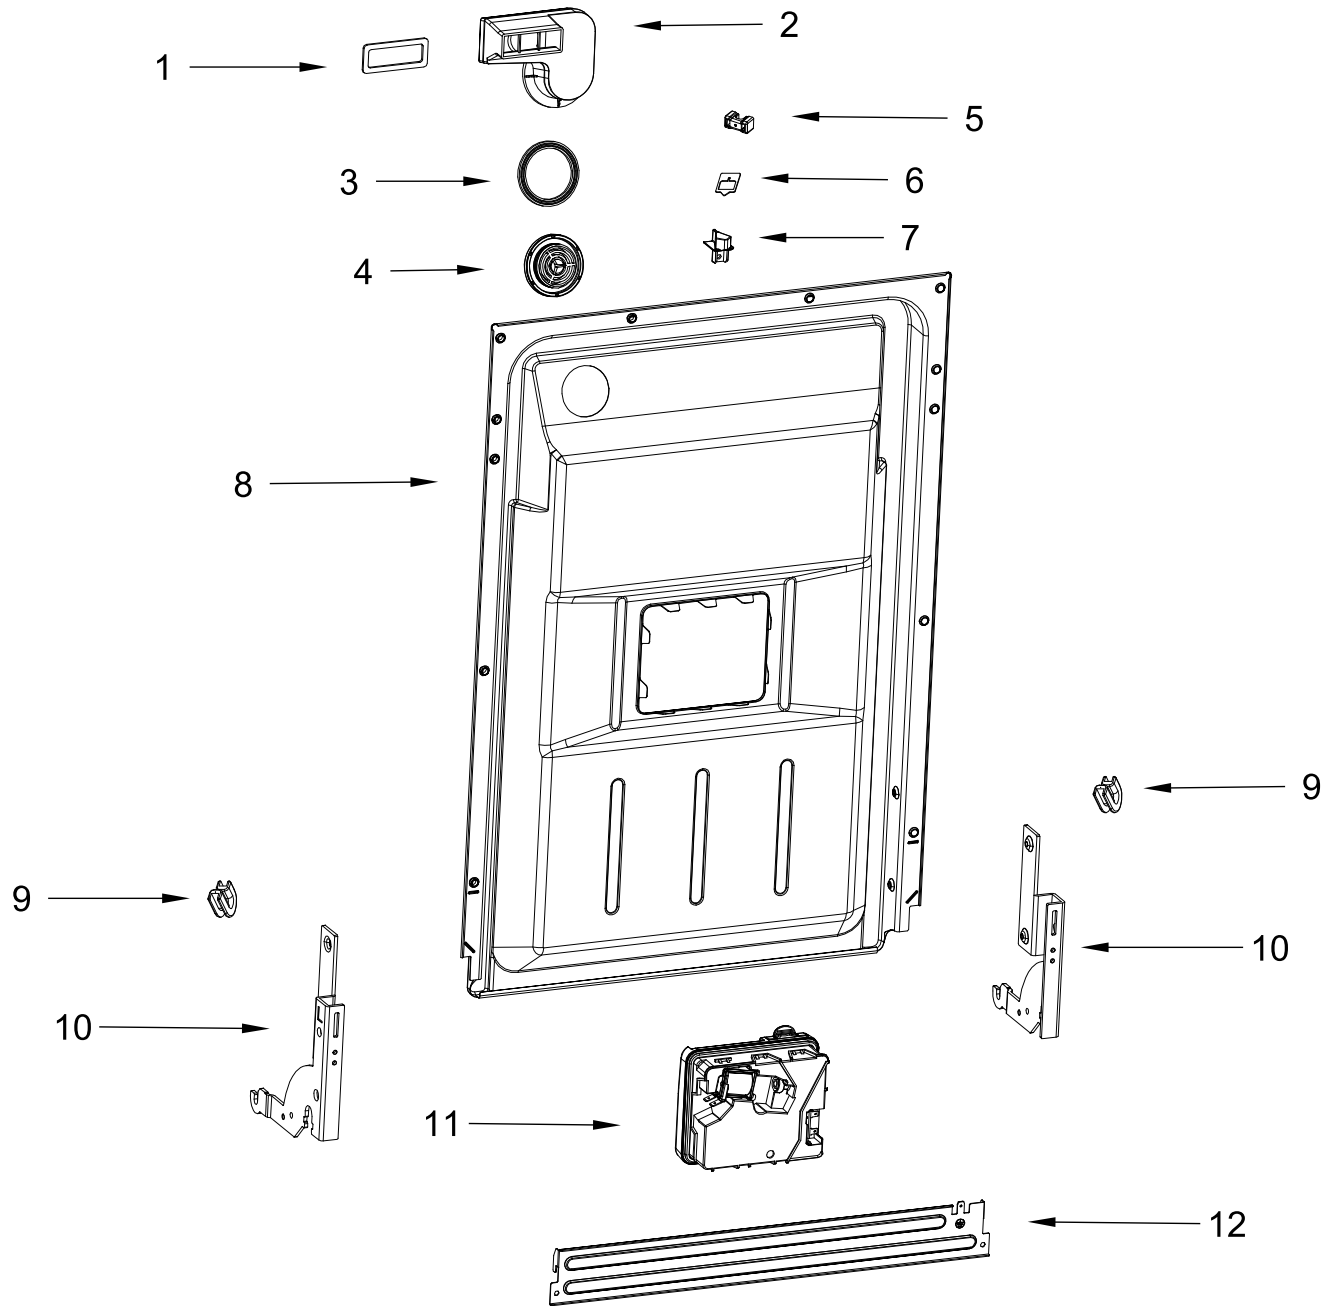

INNER DOOR PARTS

Illus. No.	Part No.	Description
1	W11225863	Gasket, Vent
2	W11230129	Vent Assembly
3	W11226131	Gasket
4	W11226138	Deflector
5	W11230138	Base, Door Latch
6	W11226261	Gasket
7	W11226146	Hook, Door Latch
8	W11230130	Inner Door Assembly
9	W11226223	Snap Ring
10		Hinge Assembly
	W11226198	Left Hand
	W11226199	Right Hand
11	W11226203	Dispenser
12	W11230131	Stiffener, Door

FILL DRAIN AND BASE PARTS

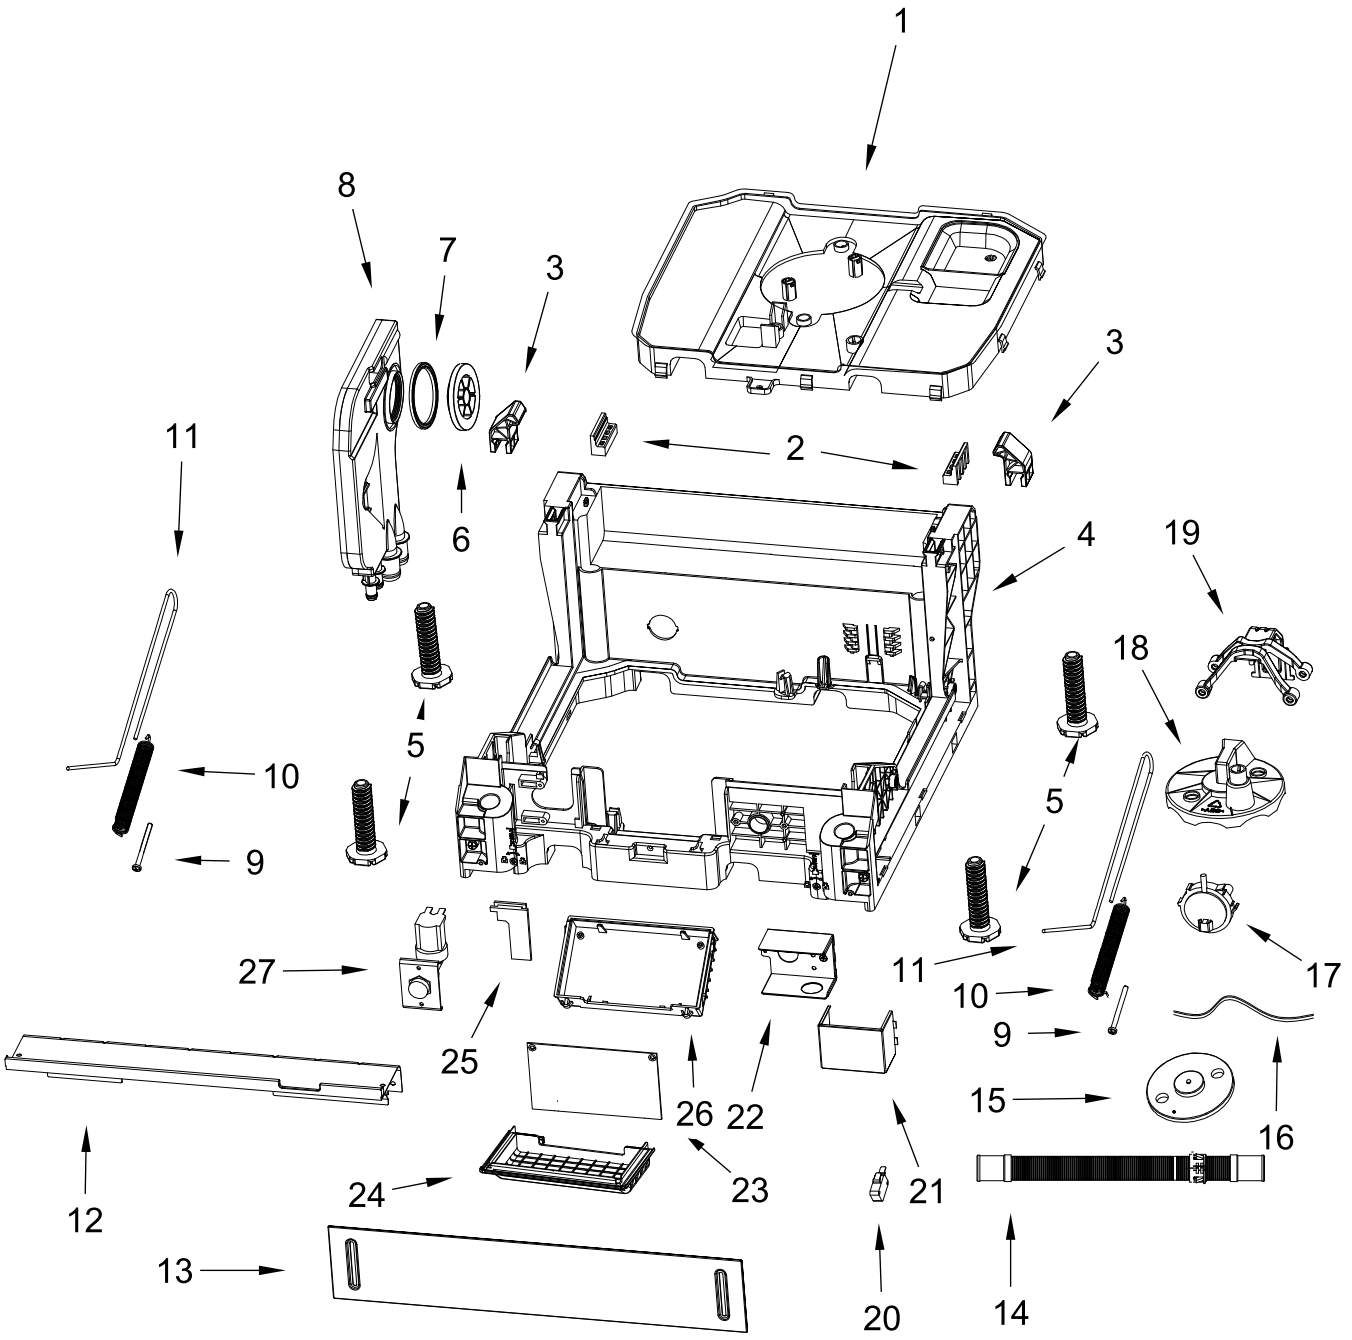

FILL DRAIN AND BASE PARTS

Illus. No.	Part No.	Description
1	W11230142	Cover, Base
2	W11226333	Tub Support
3	W11226329	Connecting Block, Tub
4	W11230143	Base Assembly
5	W11226335	Leveling Leg
6	W11226568	Nut, Air Breather
7	W11226570	Gasket
8	W11226325	Air Breather
9	W11226867	Adjustment Screw, Door Spring
10	W11230160	Spring, Door
11	W11230159	Door Rope
12	W11230154	Toe Panel
13	W11230155	Access Panel
14	W11226860	Drain Hose
15	W11226858	Float
16	W11230158	Pipe, Pressure Switch
17	W11226502	Pressure Switch
18	W11226494	Seat, Float
19	W11226339	Assembly, Pump Support
20	W11226864	Microswitch
21	W11226540	Cover, Junction Box
22	W11226537	Base, Junction Box
23	W11230457	Electronic Control
24	W11226535	Cover, PCB Box
25	W11226514	Block
26	W11226520	PCB Box
27	W11226511	Inlet Valve

TUB AND FRAME PARTS

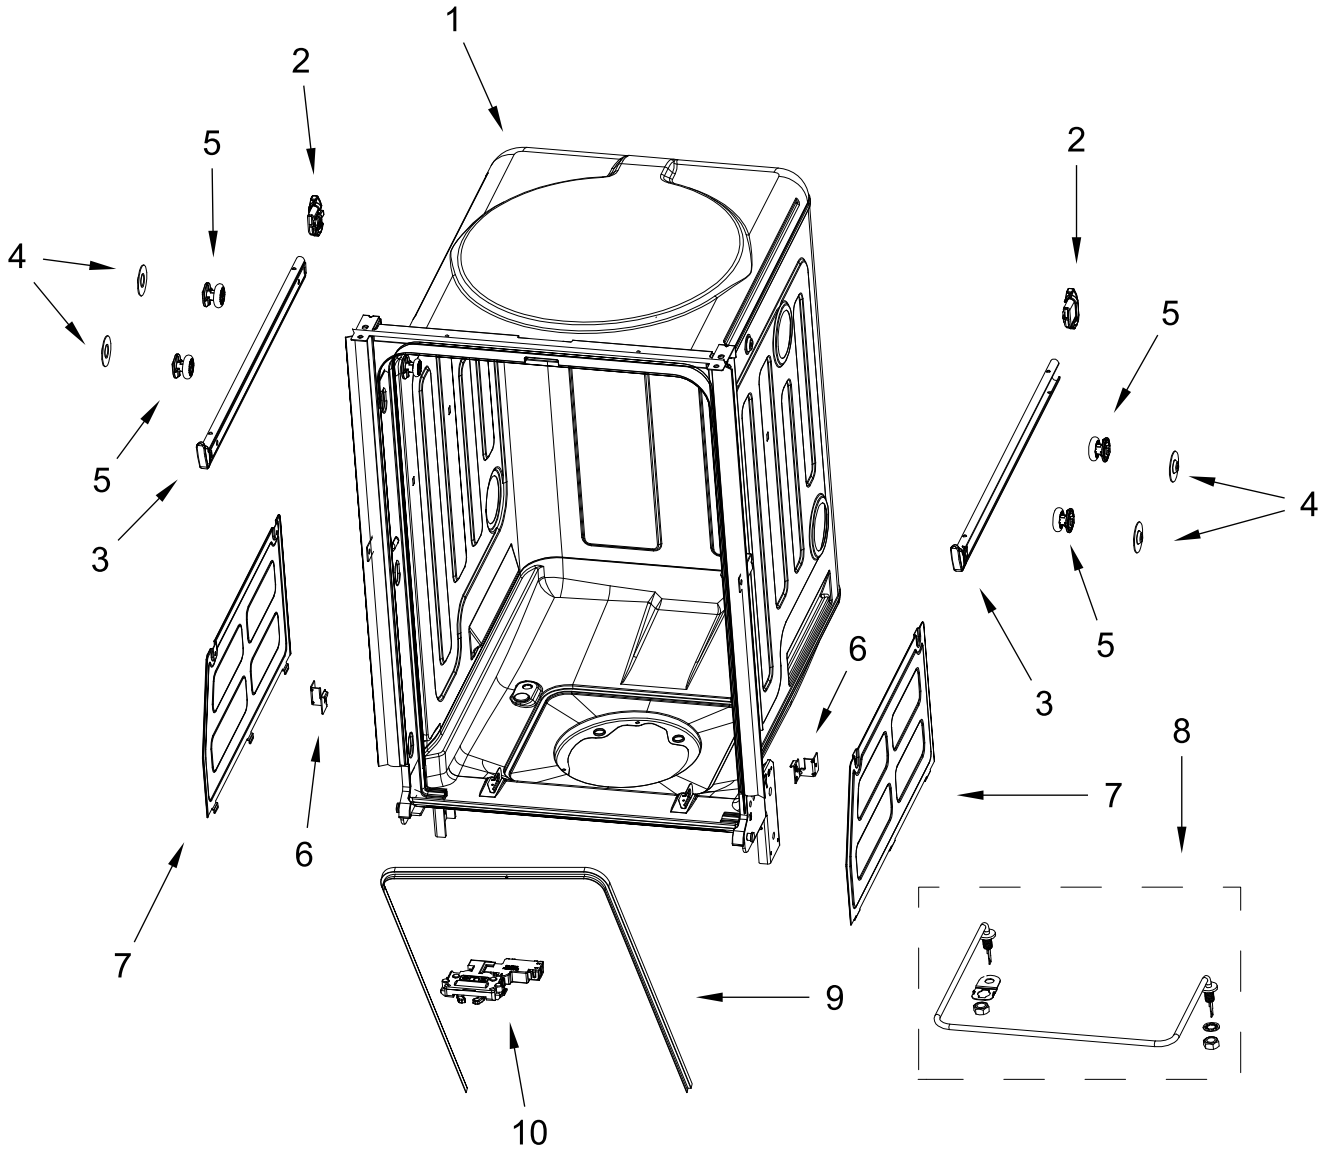

TUB AND FRAME PARTS

Illus. No.	Part No.	Description
1		Tub Assembly (Not Serviced)
2	W11226273	Stop, Track
3		Track Assembly
	W11226276	Left Hand
	W11226277	Right Hand
4	W11226286	Supporting Holder, Basket Guider
5	W11226280	Wheel
6		Bracket
	W11226292	Left Hand
	W11226293	Right Hand
7		Connecting Panel
	W11226289	Left Hand
	W11226291	Right Hand
8	W11230139	Heating Element Assembly
9	W11230140	Gasket, Tub
10	W11226294	Door Switch Assembly

PUMP AND MOTOR PARTS

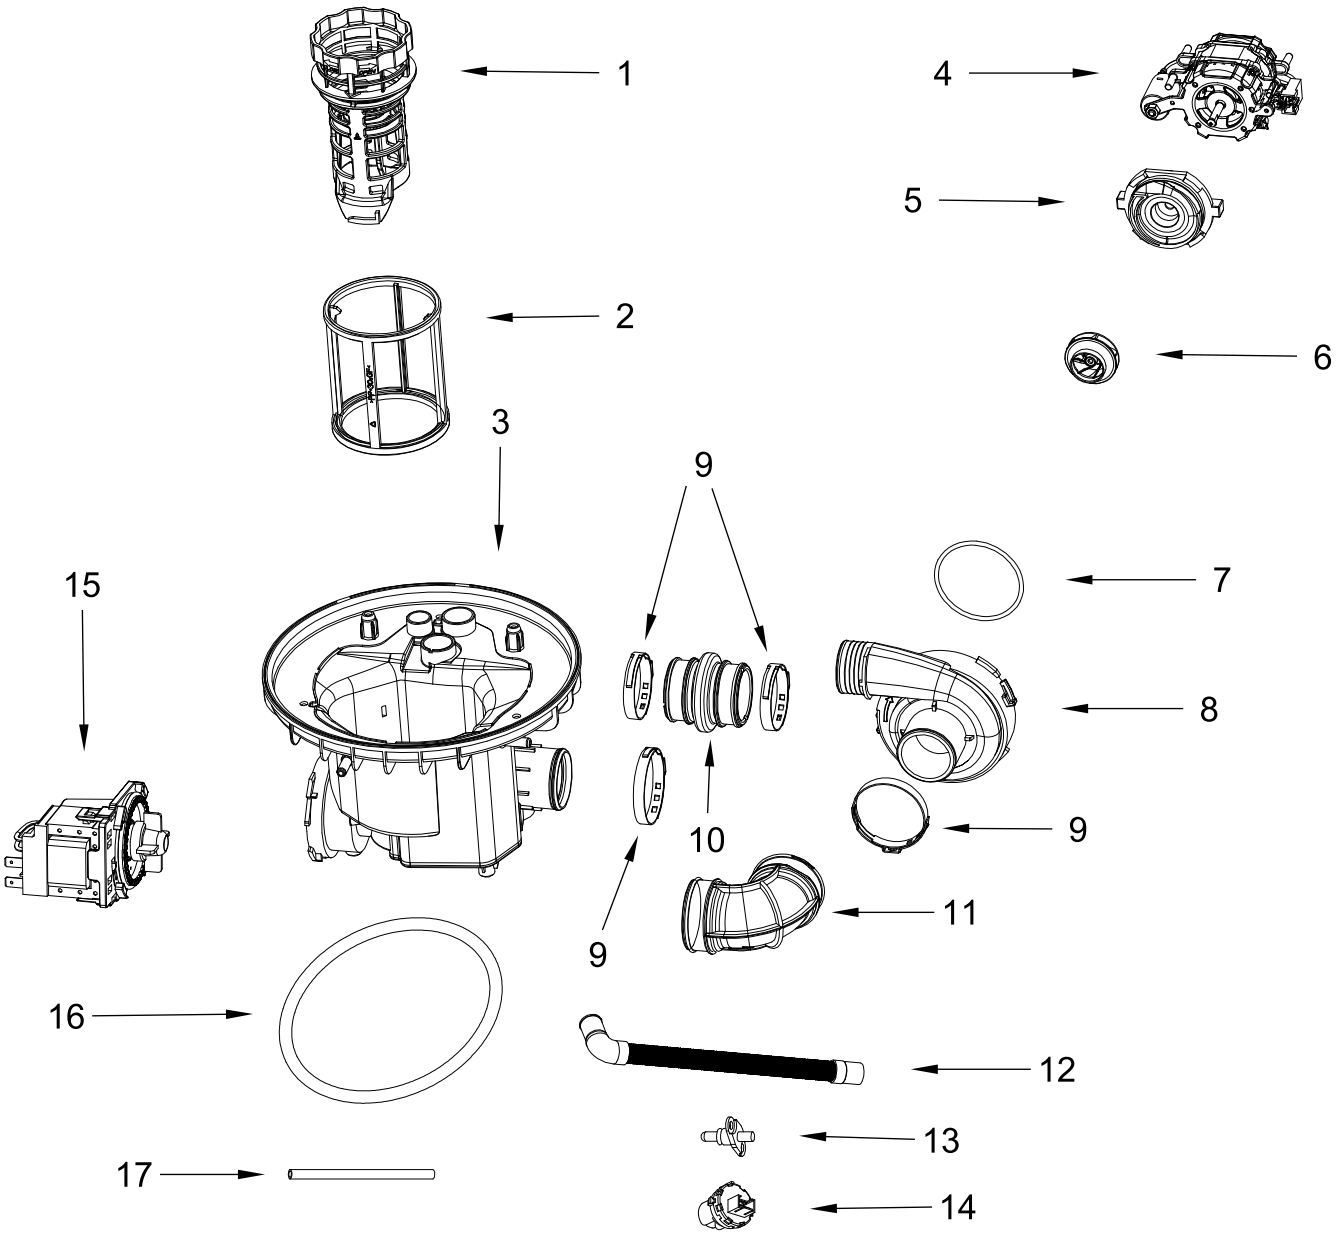

PUMP AND MOTOR PARTS

Illus. No.	Part No.	Description
1	W11230487	Filter Handle
2	W11226876	Filter
3	W11226878	Sump
4	W11230164	Motor
5	W11226885	Housing, Lower Pump
6	W11226886	Impeller
7	W11226887	Gasket, Pump
8	W11226889	Housing, Upper Pump
9	W10763499	Clamp
10	W11226893	Hose
11	W11226894	Inlet Hose
12	W11230166	Drain Hose
13	W11226897	Thermistor
14	W11226898	Trubidity Sensor
15	W11226877	Pump
16	W11226899	Sealing Gasket
17	W11226900	Inlet Hose

WASH SYSTEM PARTS

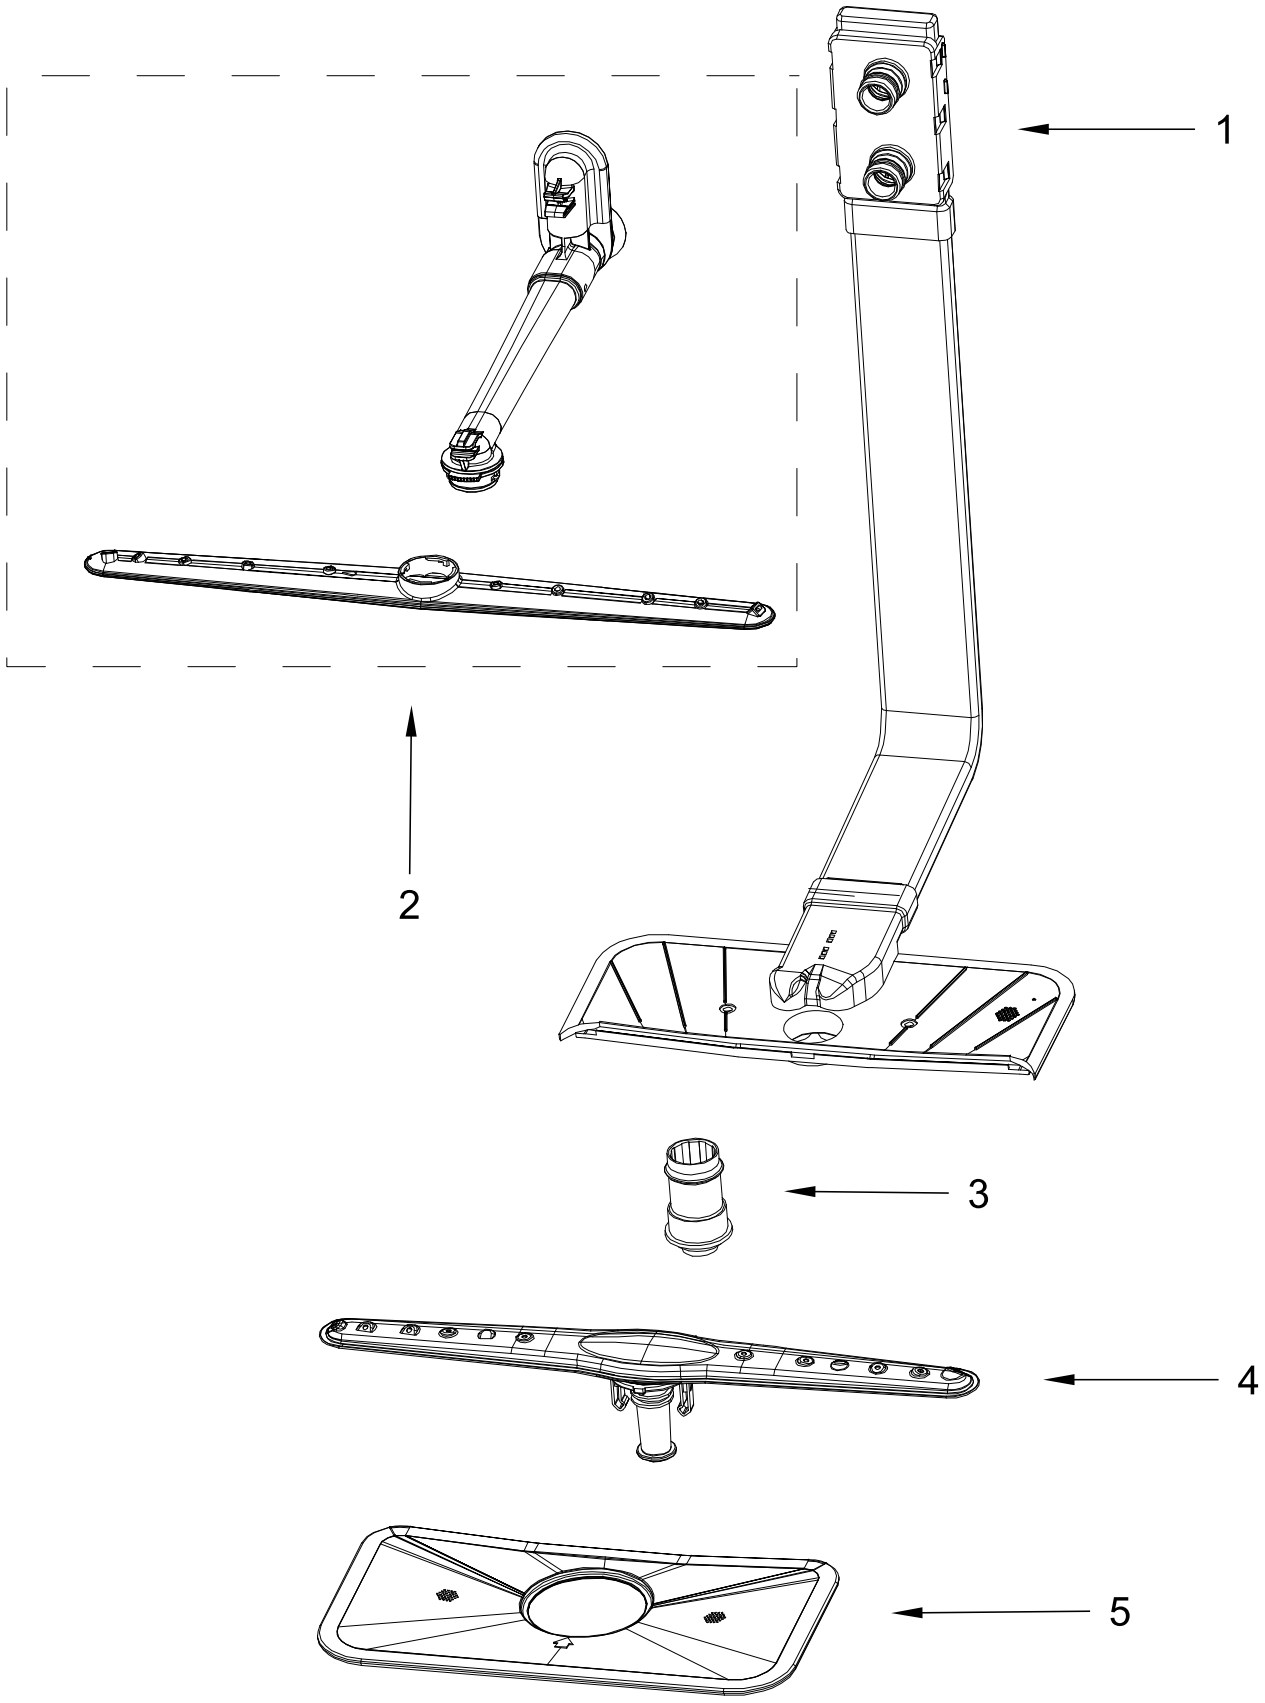

WASH SYSTEM PARTS

Illus. No.	Part No.	Description
1	W11226868	Feed Tube Assembly
2	W11230161	Upper Sprayarm Assembly
3	W11226870	Extension, Lower Sprayarm
4	W11230162	Lower Sprayarm
5	W11230163	Filter Screen

DISHRACK PARTS

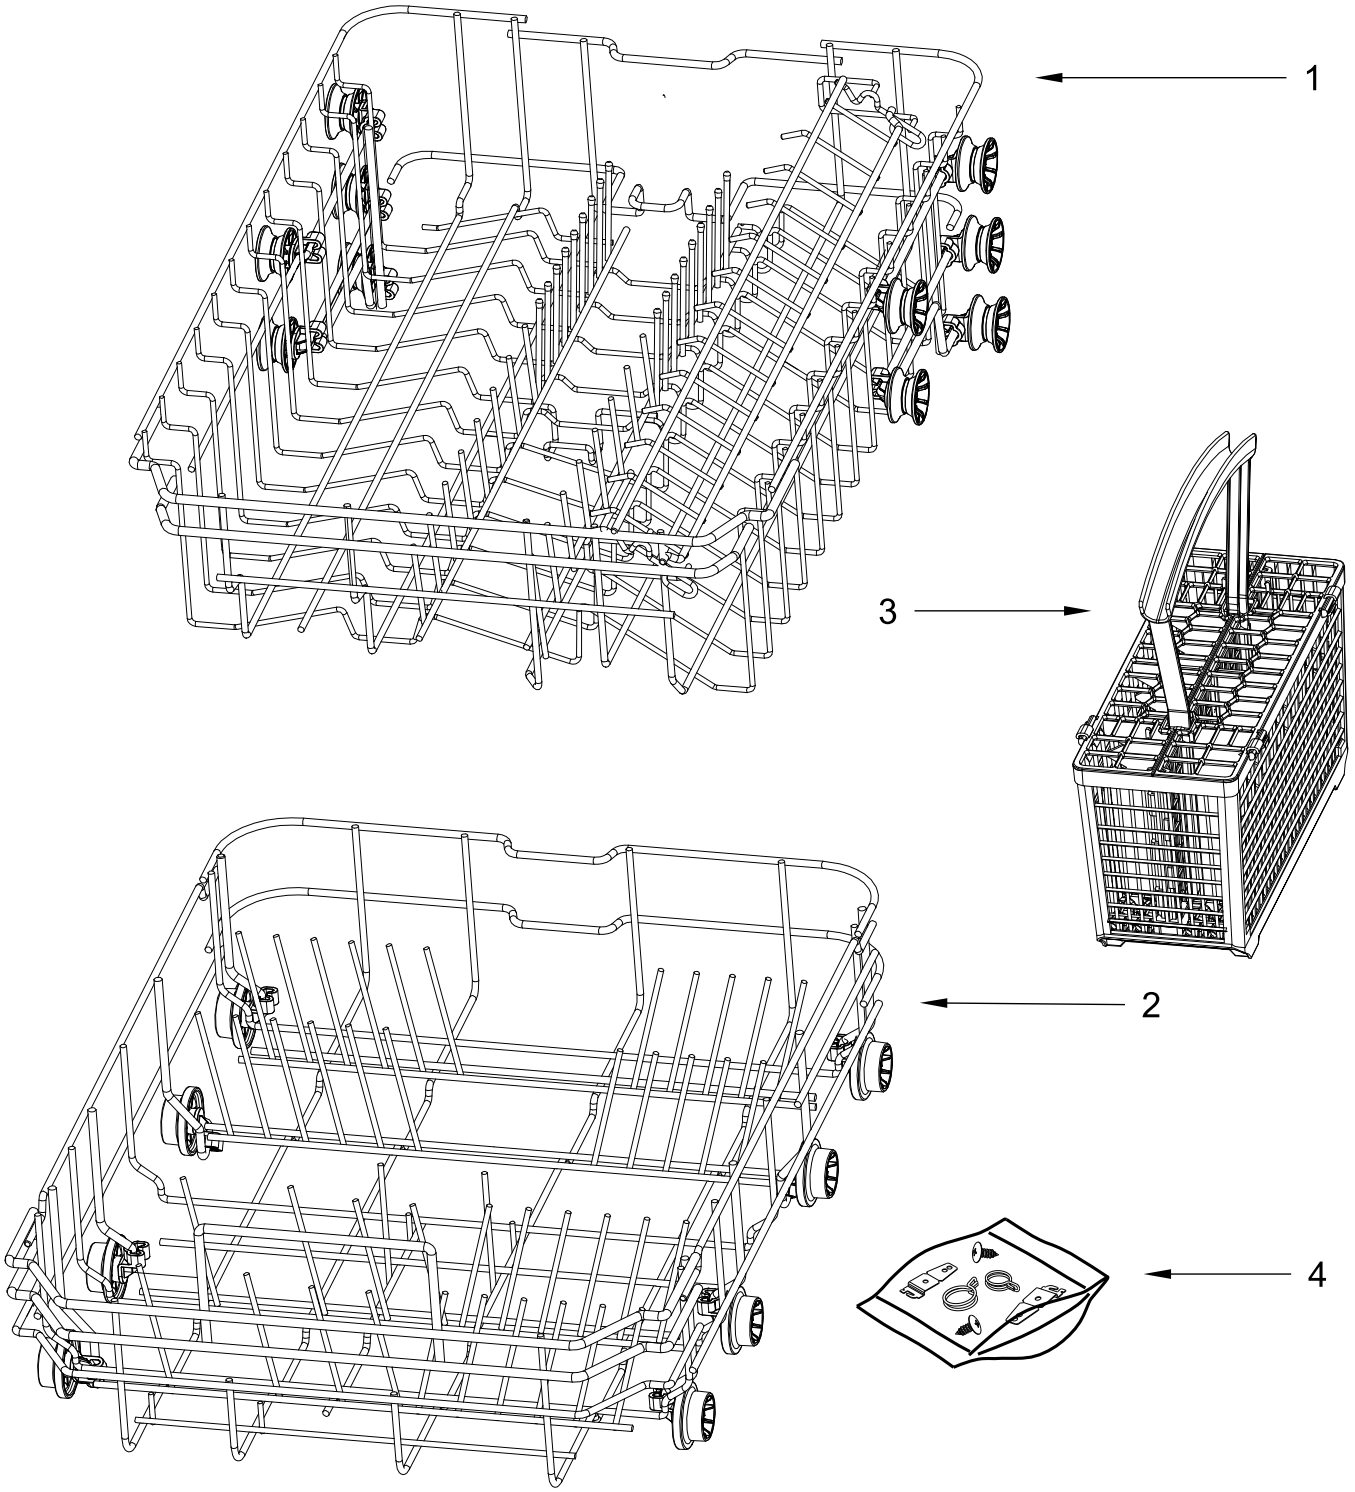

DISHRACK PARTS

Illus. No.	Part No.	Description
1	W11230167	Upper Rack Assembly
2	W11230168	Lower Rack Assembly
3	W11230169	Silverware Basket
4	W11230170	Miscellaneous Parts Bag