

Retain for Future Reference

Viking Range Corporation 111 Front Street Greenwood, Mississippi 38930 USA (662) 455-1200



IMPORTANT - PLEASE READ AND FOLLOW

•Before beginning, please read these instructions completely and carefully.


- •Do not remove permanently affixed labels, warnings, or plates from the product. This may void the warranty.
- •Please observe all local and national codes and ordinances.
- •Please ensure that this product is properly grounded.
- •The installer should leave these instructions with the consumer who should retain for local inspector's use and for future reference

BEFORE YOU START INSTALLATION


Proper installation is your responsibility. Make sure you have everything necessary for correct installation. It is the personal responsibility and obligation of the customer to contact a qualified installer to assure that electrical installation meets all local and national codes and ordinances.

Grounded electrical outlet is required. (See "Electrical Requirements")

Check the location where the compactor will be installed. Compactor is designed for recessed installation. Cabinet opening should be square. You should be able to fully open the compactor drawer. Allow 25" (63.5 cm) in front of compactor to remove drawer. Six inches of clearance is needed on the right side of the compactor drawer to be able to remove basket/bag.

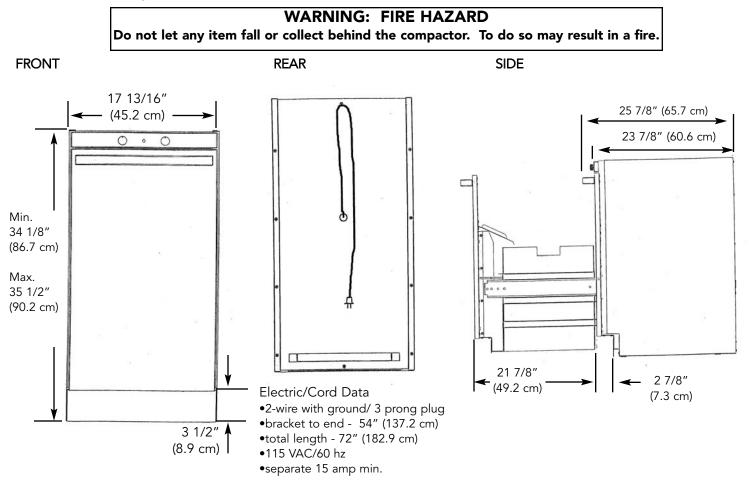

CUTOUT

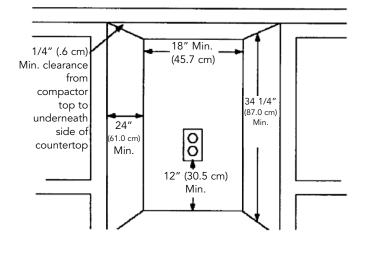



ELECTRICAL REQUIREMENTS

Important: Observe all governing codes and ordinances.

WARNING: ELECTRICAL SHOCK HAZARD

•Electrical ground is required on this appliance.

- •Improper connection of the equipment-grounding conductor can result in electric shock.
- •Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.
- •Do Not modify the plug on the power supply cord. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.
- •Do Not use an extension cord with this appliance. Such use may result in a fire, electrical shock or other personal injury.
- •Do Not have a fuse in the neutral or grounding circuit. A fuse in the neutral or grounding circuit could result in electrical shock.

Failure to follow these instructions could result in fire, electrical shock or other personal injury.


A 115 volt, 60 Hz fused electrical supply is required. (Time-delay fuse or circuit breaker is recommended). It is recommended that a separate circuit serving only this appliance be provided.

RECOMMENDED GROUNDING METHOD

Do Not, under any circumstances, remove the power supply cord grounding prong.

For your personal safety, this appliance must be grounded. This appliance is equipped with a power supply cord having a 3-prong grounding plug. To minimize possible shock hazard, the cord must be plugged into a mating 3-

prong, grounding type, wall receptacle, grounded in accordance with the National Electrical Code ANSI/NFPA 70 latest edition and all local codes and ordinances. If a mating wall receptacle is not available, it is the personal responsibility and obligation of the customer to have a properly grounded, 3-prong, wall receptacle installed by a qualified electrician.

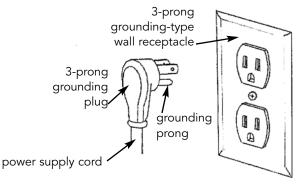


CUSTOM FRONT PANEL INSTALLATION (DFC MODELS)

The Designer Full Overlay model should be installed with a locally supplied custom front panel. All parts needed to install the panel come standard with the Designer Full Overlay model trash compactor. A handle should be used on the custom front panel rather than a knob because a knob does not provide enough grip. Also note that the handle should be attached to the panel before installing the front panel onto the compactor. See "Installing Custom Front" section below for detailed information on attaching front panel to compactor. Mounting hardware for the handle must be flush to the overlay panel.

Custom Front Panel Dimensions


17-3/16" (43.7 cm)
28-1/4" (71.8 cm)
3/4" (1.9 cm)
up to 25 pounds (11.4 kg.)

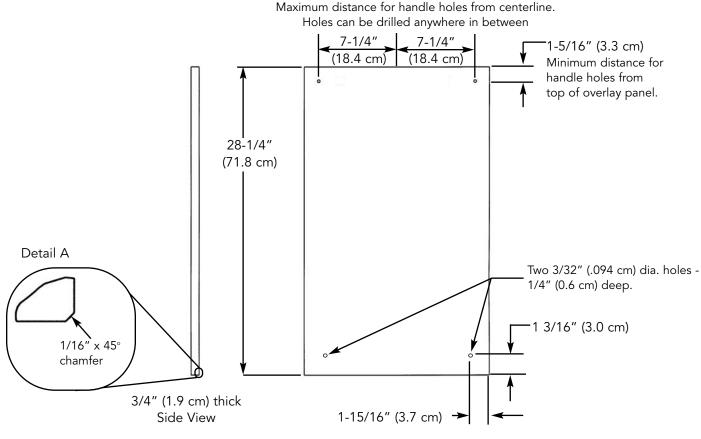

Custom Panel - Back View


Installing Custom Front (DFC models only)


- 1. Prepare custom front panel and handle. (See information on p. 4 for details/dimensions.)
- 2. Placed prepared custom front panel on the ledge of the unit. (See Illustration #1).
- 3. Attach to unit by placing two (2) #10 x 1/2" screws in the lower most holes and screwing through the pilot holes on the overlay. (See illustration #2). Loosen screws and center panel if needed. Retighten lower most screws after adjusting.

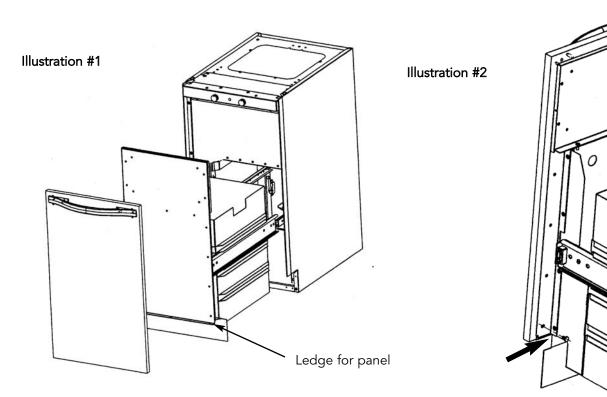

- 4. Secure the overlay panel by using the remaining seventeen (17) #10 x 1/2 screws. (See illustration #3).
- 5. Install the storage compartment cover with two (2) #8 x 3/8" wafer head screws. (See Illustration #4).



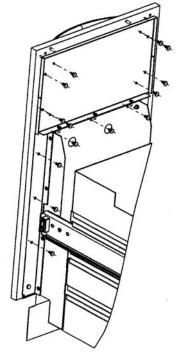

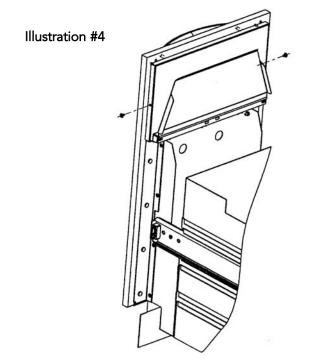

0