


CONTENTS

- | | |
|---|------------|
| 1 | Panel, top |
| 4 | Screw |


Note: A side panel should be installed prior to a top panel to ensure proper alignment, if applicable.

PROFESSIONAL TOP PANEL INSTALLATION

- 1 Rotate the bottom of the grille upward.

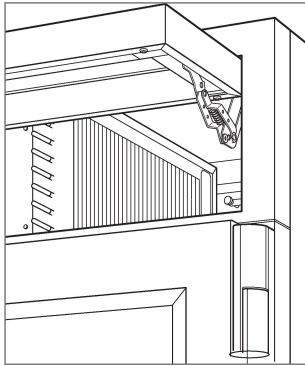

- 2 Disconnect the network cable, then remove the center mounting screw.
- 3 Loosen the three bolts from the grille, then pull the grille forward to remove.

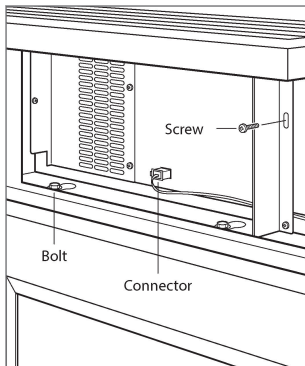

- 4 Place the top panel on the unit shroud with the longer flange toward the back of the unit.

- 5 Install two screws in front and two in the back to secure the top panel.

