

**NOTE: IT IS VERY IMPORTANT TO READ AND FOLLOW THE DIRECTIONS IN THE INSTALLATION INSTRUCTIONS BEFORE PROCEEDING WITH THIS REAR WALL TEMPLATE.**

This template is for locating the horizontal exhaust cutout. Do not use this template for vertical or recirculation exhaust.

1. Place the template flat against the rear wall, aligning the circles **A.** and **B.** with the corresponding holes previously drilled in the rear wall for holes A and B of the wall plate.
2. With the template aligned to the holes, tape the template to the rear wall.
3. Use a saber or keyhole saw to cut out the shaded area **F.** through the rear wall.
4. Remove the template from the rear wall.
5. **RETURN TO AND PROCEED WITH THE INSTALLATION INSTRUCTIONS.**


**Darle vuelta a la hoja para consultar la versión en Español.**

49-40531

4922W5A074B


03-07 JR

Printed in China

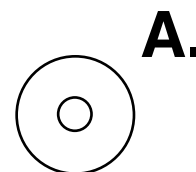

**A.**


LINE UP WITH  
PREVIOUSLY  
DRILLED HOLE.

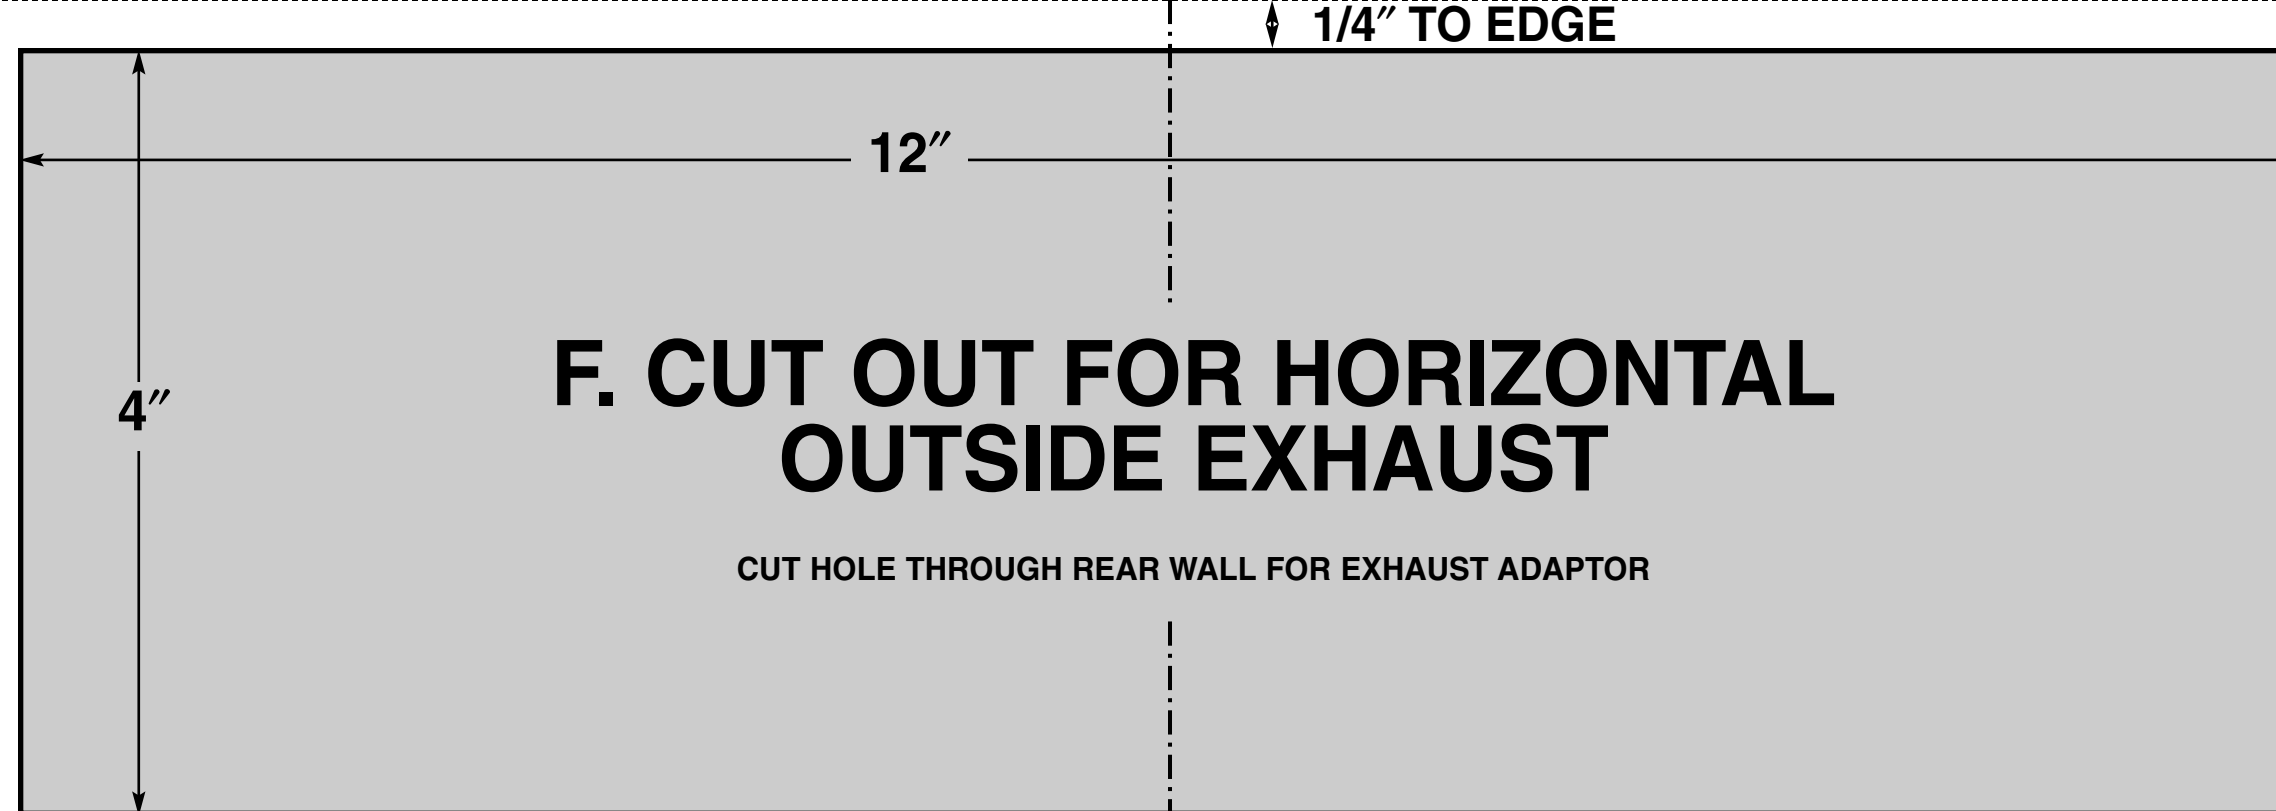

**CAUTION – IF EXHAUST ADAPTOR IS POSITIONED OUTSIDE RECOMMENDED DIMENSION, GREASE-LADEN AIR WILL DISCHARGE INTO HOUSE STRUCTURE.**

# REAR WALL TEMPLATE

**30" MINIMUM WIDTH REQUIRED**

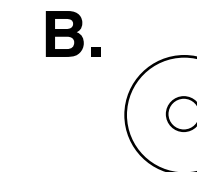

**B.**

LINE UP WITH  
PREVIOUSLY  
DRILLED HOLE.

**NOTA: ES MUY IMPORTANTE LEER Y SEGUIR LAS DIRECCIONES EN LAS INSTRUCCIONES DE INSTALACIÓN ANTES DE PROCEDER CON ESTA PLANTILLA DE PARED POSTERIOR.**

Esta plantilla es para localizar el corte de escape horizontal. No use esta plantilla para escape de recirculación o vertical.

1. Coloque la plantilla de manera plana contra la pared posterior, alineando los círculos **A.** y **B.** con los agujeros correspondientes previamente perforados en la pared posterior para los agujeros A y B del plato de la pared.
2. Con la plantilla alineada en los agujeros, pegue con cinta adhesiva la plantilla a la pared posterior.
3. Use un sable o una sierra de agujero para cortar el área sombreada **F.** a través de la pared posterior.
4. Remueva la plantilla de la pared posterior.
5. **REGRESE Y PROCEDA CON LAS INSTRUCCIONES DE INSTALACIÓN.**


Turn over for English.

49-40531

4922W5A074B

03-07 JR

Impreso en China

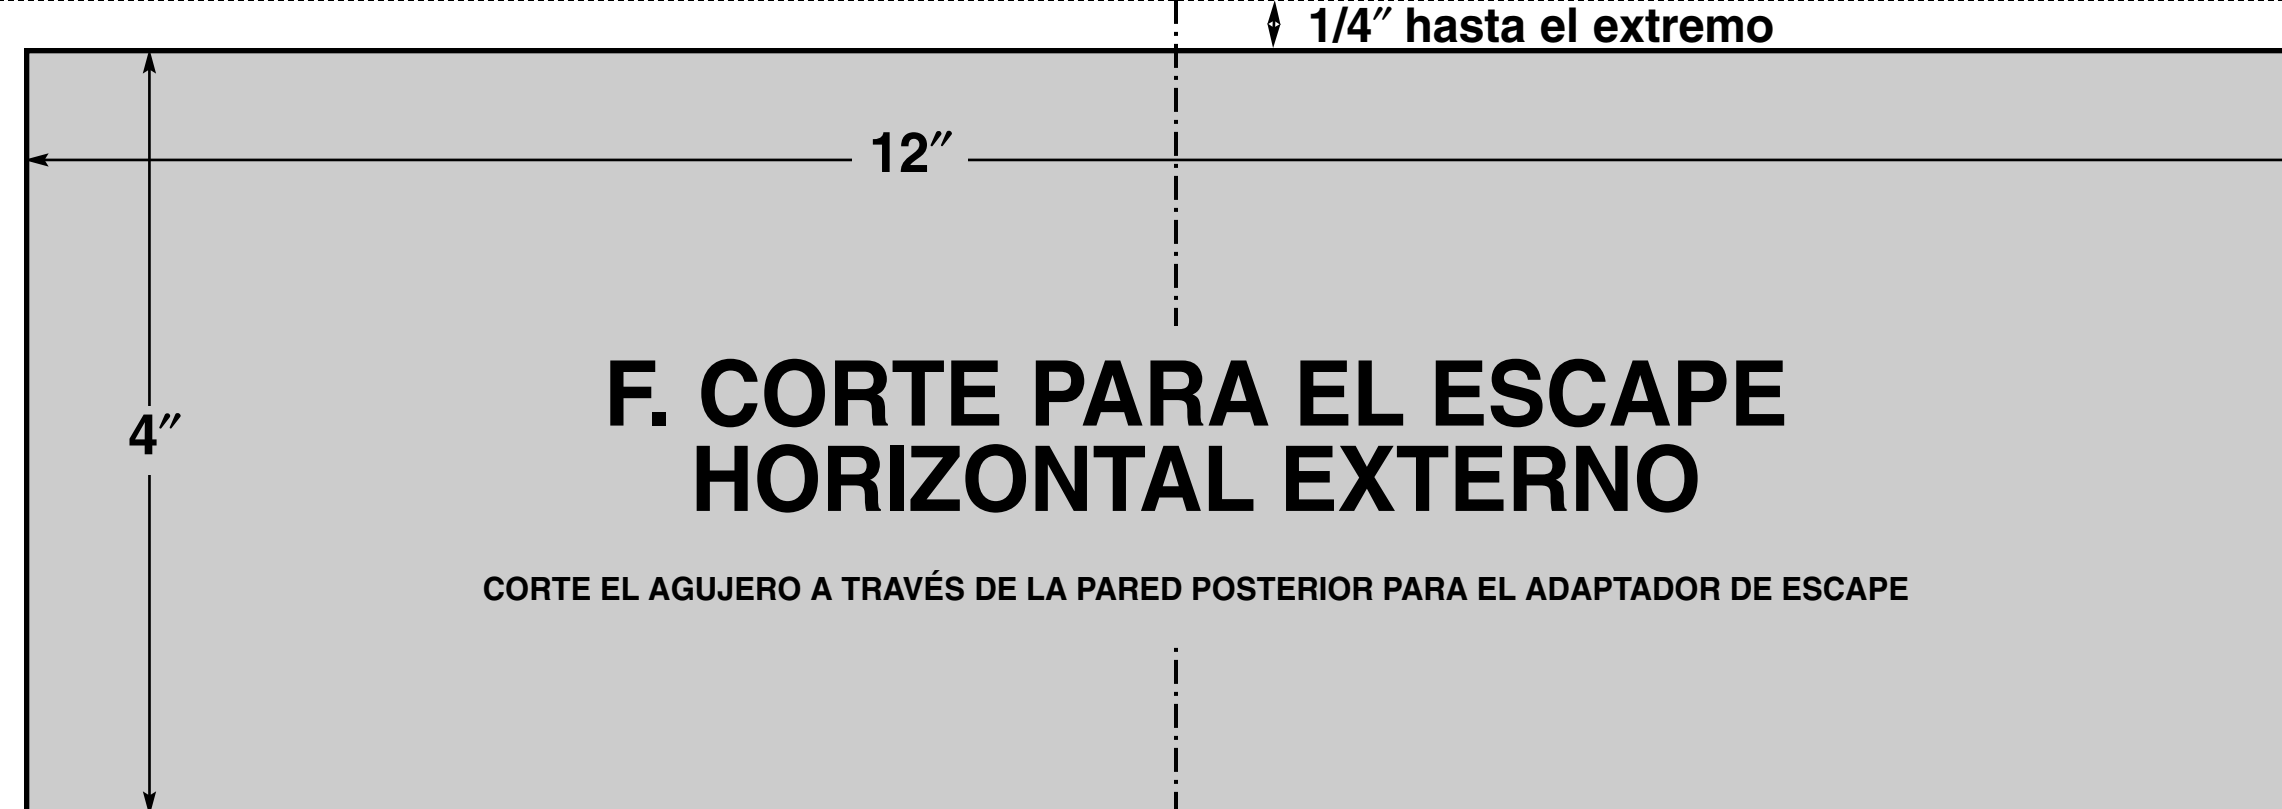


CORTE EL AGUJERO A TRAVÉS DE LA PARED POSTERIOR PARA EL ADAPTADOR DE ESCAPE

**PRECAUCIÓN – SI EL ADAPTADOR DE ESCAPE ESTÁ COLOCADO MÁS ALLÁ DE LAS DIMENSIONES RECOMENDADAS, AIRE CARGADO CON GRASA SE DESCARGARÁ HACIA LA ESTRUCTURA DE LA CASA.**

# PLANTILLA DE PARED POSTERIOR


ANCHO MÍNIMO DE 30" REQUERIDO

**A.**

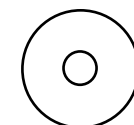

ALÍNEE CON  
LOS AGUJEROS  
PREVIAMENTE  
PERFORADOS

**B.**

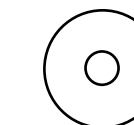

ALÍNEE CON  
LOS AGUJEROS  
PREVIAMENTE  
PERFORADOS