




Frigidaire

Factory Parts Catalog

Product No.	FGF318ECC
Series	30" f/s gas
Color	stainless
Market	North America
Wiring Diagram	316255203
Owner's Guide	316257514
Installation Instructions	316259327

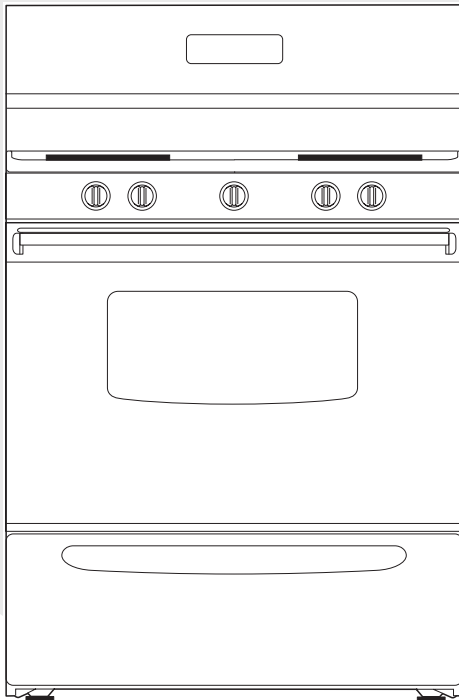

Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917


Publication No.
5995458311
06/01/11
(EN/SERVICE/BJH)
369

30-INCH FREE- STANDING GAS RANGE

Model No.
FGF318E

Copyright © 2006 Electrolux Home Products, Inc.
All rights reserved.

BACKGUARD

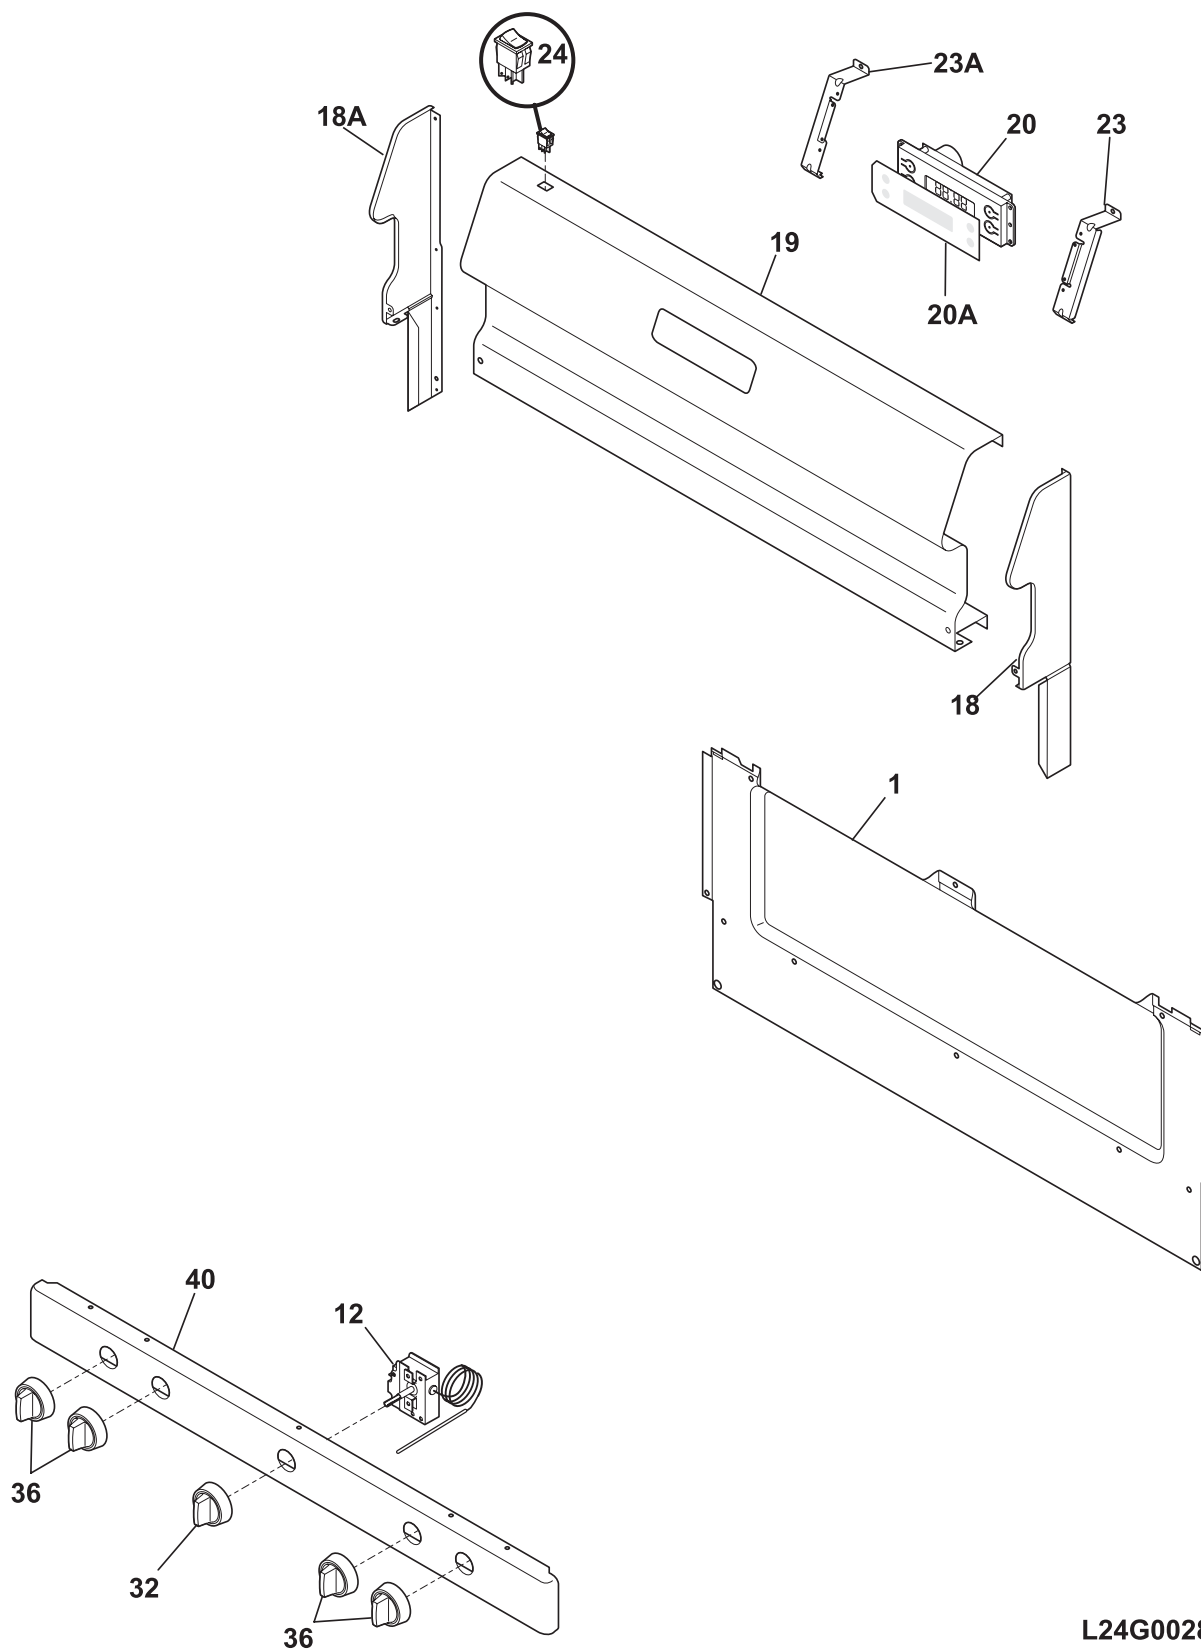


L24G0028

BACKGUARD

POS. NO	PART NO.	DESCRIPTION
1	5303289640	Shield, backguard, rear wall
12 #	316032404	Thermostat
12*	316097602	Insulator
18	316263402	End Cap, black, RH
18A	316263403	End Cap, black, LH
19	316263353	Panel, backguard, black
20 #	316440000	Clock/Timer
20A	316115307	Overlay, clock, black
23	316263500	Bracket, clock mtg, RH
23A	316263501	Bracket, clock mtg, LH
24 #	316448700	Switch, rocker, black, oven light
32	316102300	Knob, thermostat, black
36	316009008	Knob, top valve, black, (4)
40	316458033	Panel, manifold, black
*	316021105	Screw, hex head cup pt, 8-18 x 0.375, black
*	316021108	Screw, cup pt, 8-18 x 0.375, chrome
*	316021110	Screw, 8-18 x 0.5, black

BURNER

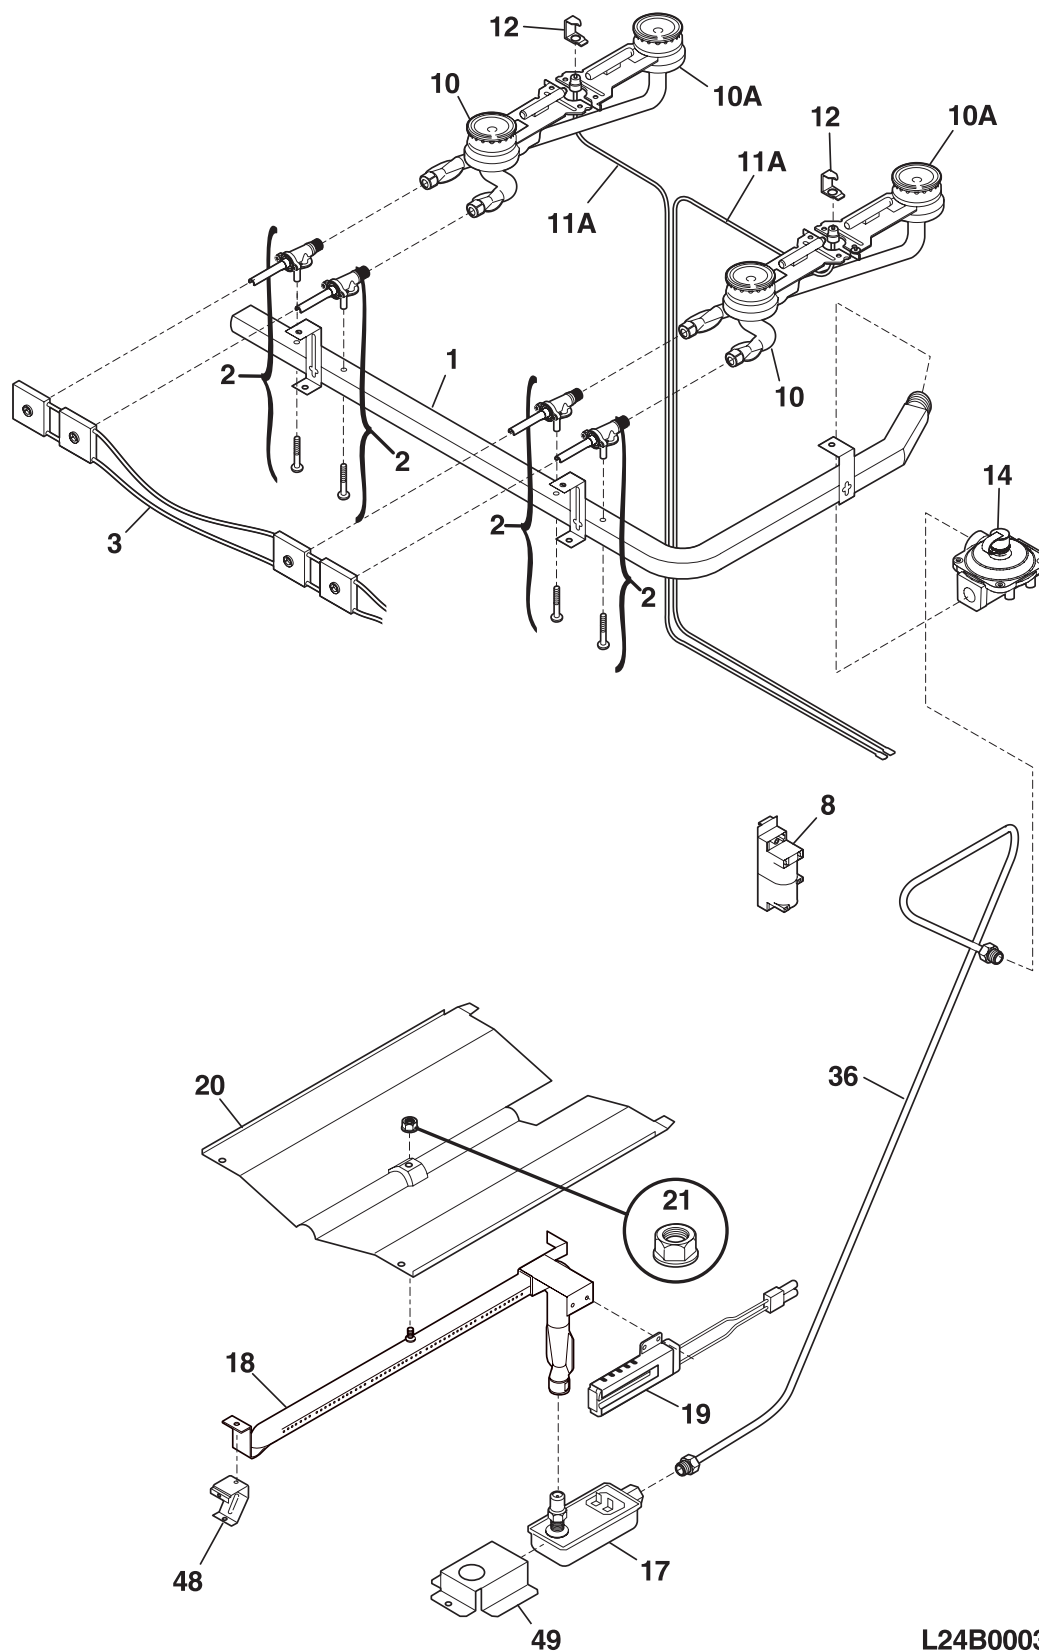


L24B0003

BURNER

POS. NO	PART NO.	DESCRIPTION
1 #	316269100	Pipe, manifold
2 #	5303935237	Valve, top burner, w/mtg screw
3	316001830	Wiring Harness, w/igntr switch
8 #	316135700	Module, spark
10 #	316103800	Burner, top, front, venturi ring
10A#	316103801	Burner, top, rear, venturi ring
11A#	316081705	Ignitor, top burner, 50"
12	3016993	Retainer, ignitor
14 #	316091705	Regulator, pressure
14*	316021104	Screw, hex, 8-18 x 3/8, nick, (3), regulator brkt
17 #	3203459	Valve, safety
18 #	316114300	Burner, oven
19 #	5303935066	Ignitor, oven kit, w/nut & instr
19*#	316119301	Ignitor-oven
20	3203265	Baffle, oven burner
21	5303013272	Nut, hex head sems
36	316065004	Tubing, 3/8, alum
48	3018603	Bracket, support, oven burner
49	3131438	Bracket, safety valve
*	316001003	Screw, ground wire
*	316215600	Screw, valve mtg., 1/4 - 20
*	5303271648	Screw, wafer hd sq dr, 8-18AB x 0.5



BODY

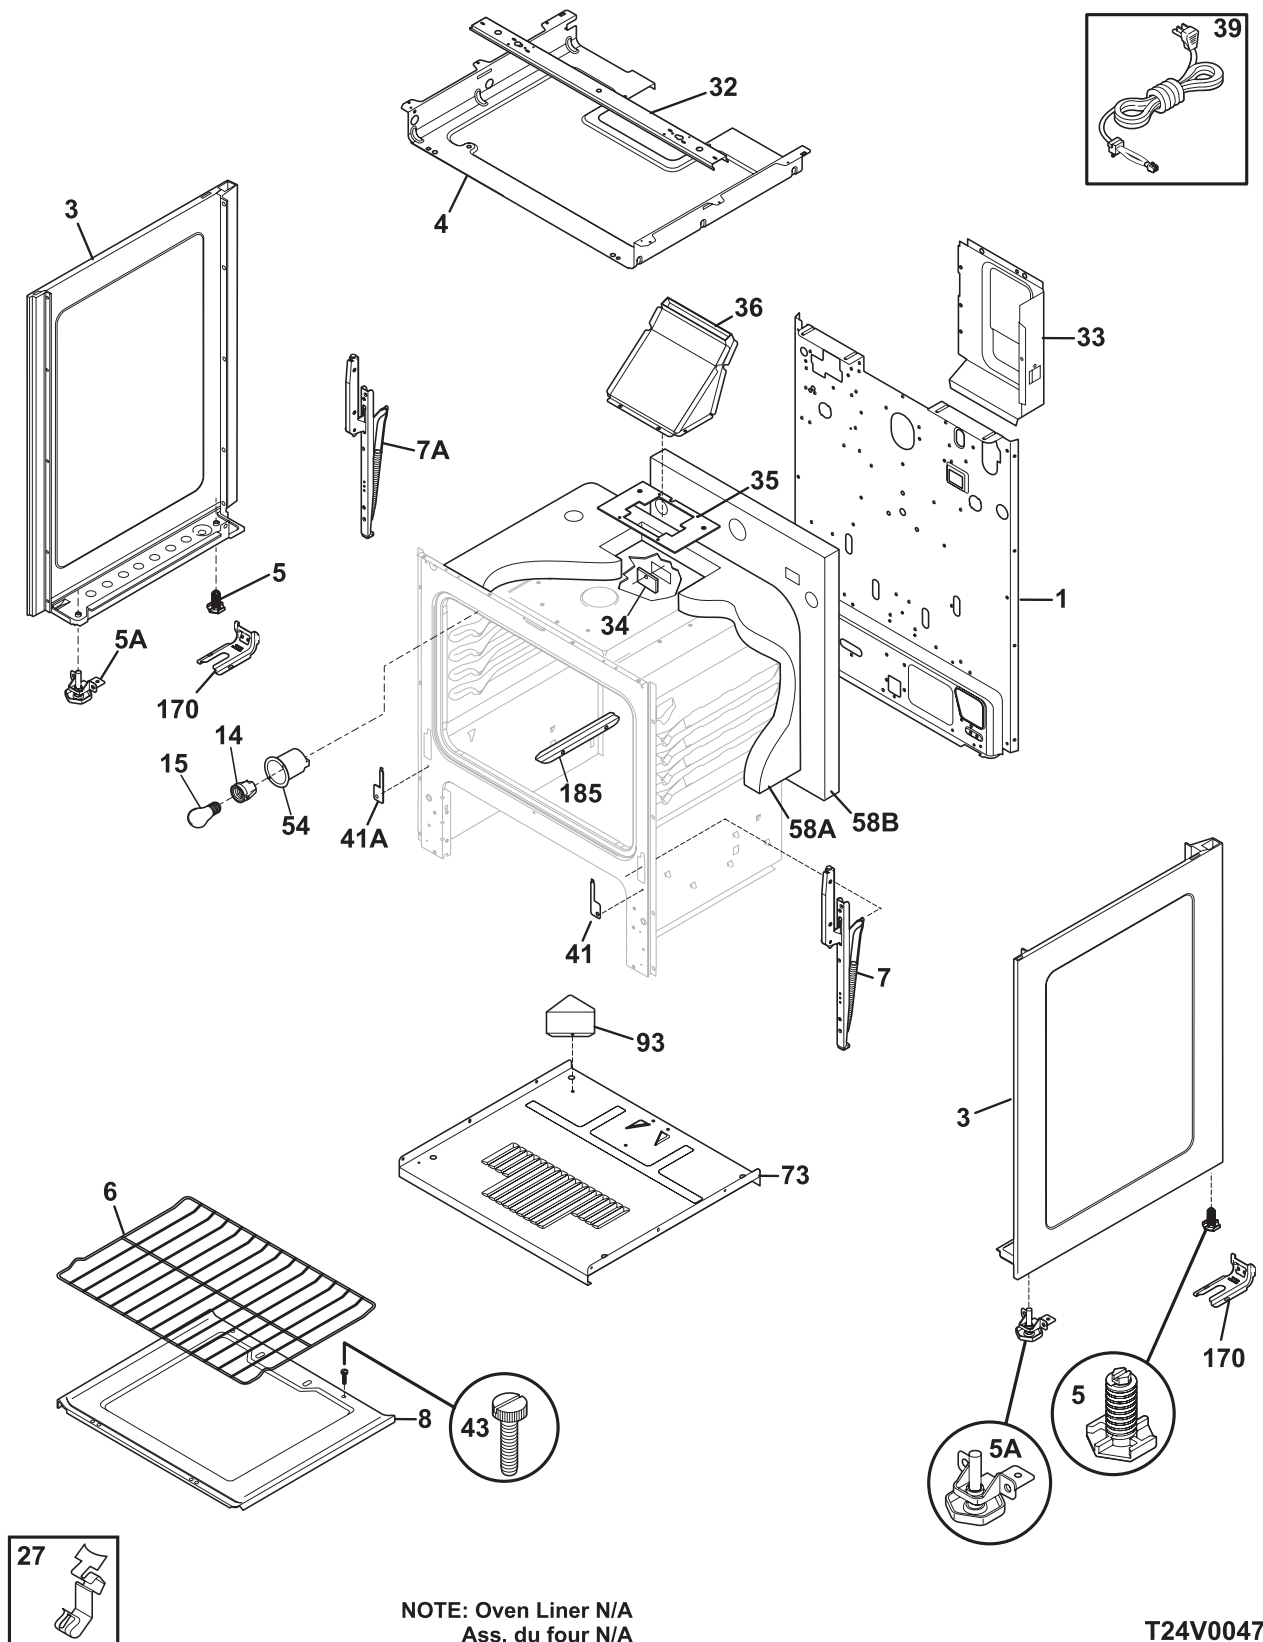

BODY

POS. NO	PART NO.	DESCRIPTION
1	316029415	Panel, main back
3	316400118	Panel, bodyside, black, RH
3	316400119	Panel, bodyside, black, LH
4	316067210	Burner Box
5	316272900	Screw, leveling, plastic, rear, (2)
5A	316407201	Leveling Leg Assy, metal, front, (2), bracket & leg
6	316067902	Rack, oven
7	316216504	Hinge, oven door, RH
7A	316216505	Hinge, oven door, LH
8	5303300701	Panel, oven bottom
8*	316064600	Support, oven bottom
14	316116400	Receptacle, oven light
15	5303013071	Bulb/Lamp, light
27	5303284616	Clip, thermo bulb mtg
32	316107501	Channel, burner support
32*	5303289684	Fastener, tanden wire, (2)
33	316055600	Shield, spark module, galv steel
34	3018607	Plate, cover
35	316116600	Gasket, flue
36	316204401	Flue, black
39	3202006	Cord, electric power
41	316233400	Cover, hinge cutout, RH
41A	316233500	Cover, hinge cutout, LH
43	3131732	Screw, 8-18 x 1.438, oven bottom
54	5303271606	Housing, oven light
58A	3017142	Insulation, oven wrapper
58B	316054202	Insulation, 1", oven back
73	316109902	Base, low broil
93	316110000	Shield, ignitor, metal
170	5303935180	Anti-tip Kit, w/bracket, screw
170*	316107200	Bracket, anti-tip
170*	316112500	Template, anti-tip
170*	316116000	Screw, concrete, 1.75", anti-tip brkt
185	316112900	Shield, thermo bulb
* #	316253307	Harness, main
*	316246400	Plug, button, oven probe
*	316435800	Plate, weight, (3)
*	5303305345	Paint, touch-up, black
*	316021105	Screw, hex head cup pt, 8-18 x 0.375, black
*	316021108	Screw, cup pt, 8-18 x 0.375, chrome
*	316021110	Screw, 8-18 x 0.5, black
*	316089500	Screw, 10-16 x .486
*	5303271648	Screw, wafer hd sq dr, 8-18AB x 0.5
*	5303285179	Screw, wafer head, 8-32T x 0.500, black
*	5308014215	Screw, 6-20 x 0.312

TOP/DRAWER

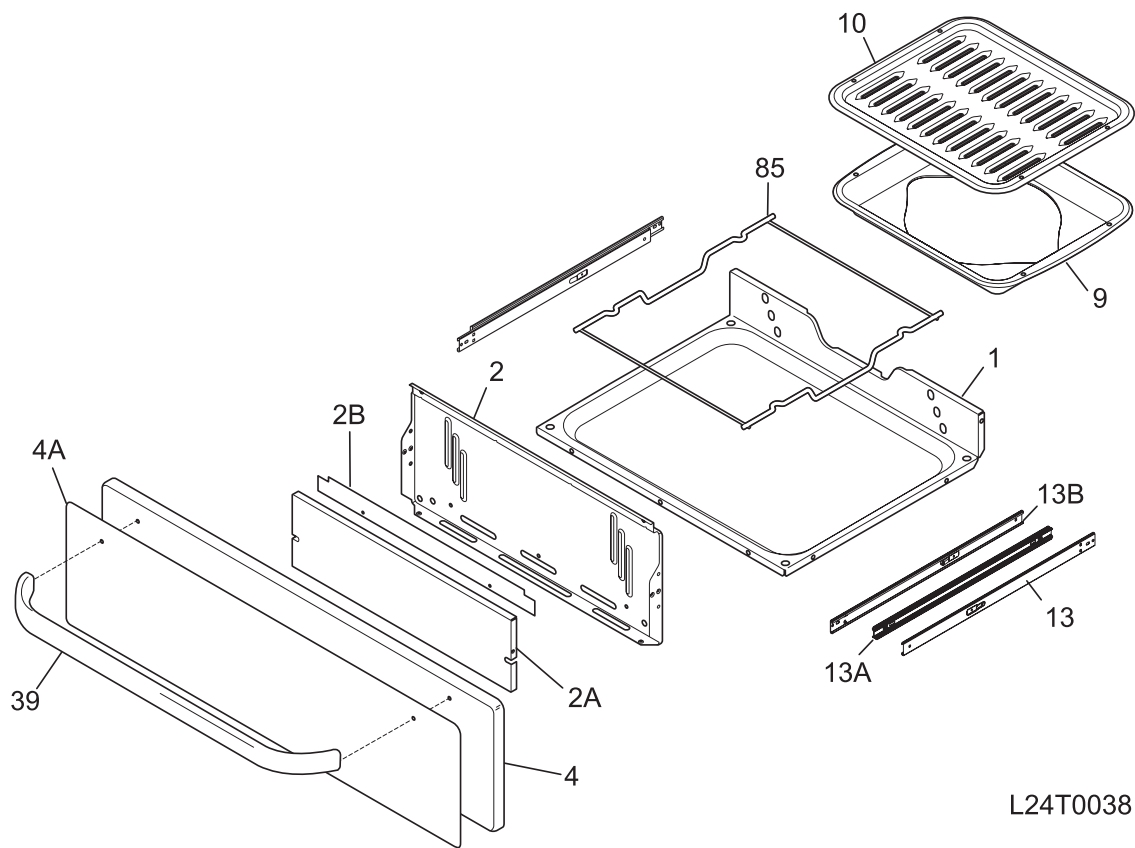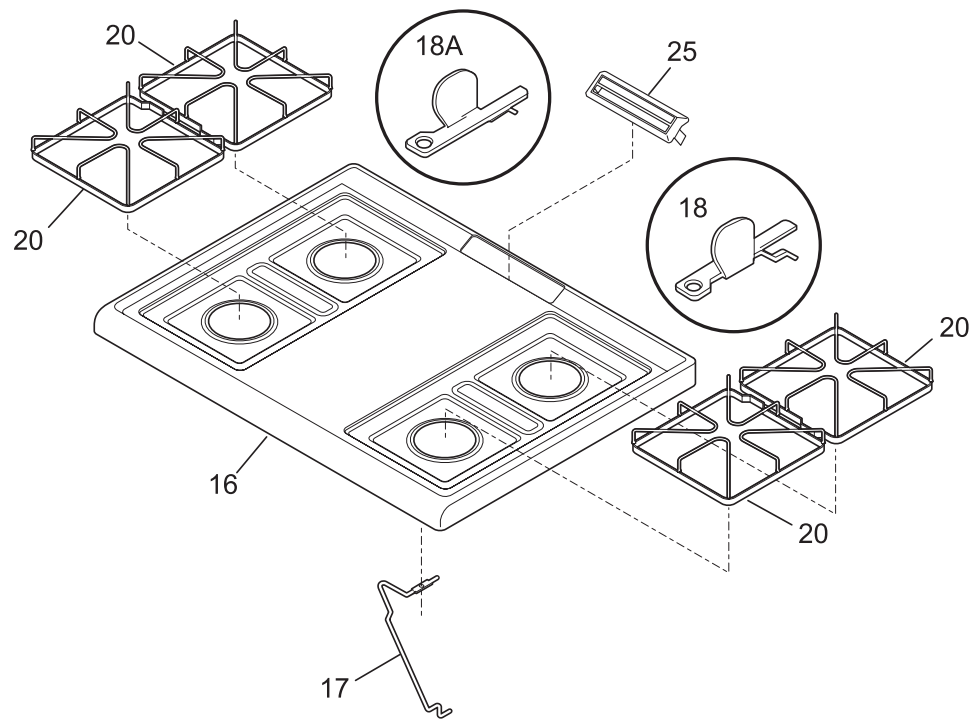


L24T0038

TOP/DRAWER

POS. NO	PART NO.	DESCRIPTION
1	316110201	Carriage, low broil
2	316236401	Liner, low broil
2A	316110800	Shield, broiler
2B	316237600	Shield, low broil, top
4	316231226	Panel, drawer, black
4A	316444800	Overlay, Drawer Panel, stainless
9	316081900	Pan, broiler
10	316082000	Insert, broiler pan
13	316111502	Glide, low broil, chassis
13A	316111600	Glide, low broil, inner
13B	316111501	Glide, low broil, outer
16	316273002	Main Top, black
17	316066900	Rod, maintop support
18	08067747	Bracket, hinge, main top RH
18A	08067746	Bracket, hinge, main top LH
20 #	316277801	Grate, black, (4)
25	316104500	Cover, vent, chrome
39	316248300	Handle, oven door, black
85	316115600	Rack, low broil
*	316279700	Cleaner, stainless steel
*	316021105	Screw, hex head cup pt, 8-18 x 0.375, black
*	316021108	Screw, cup pt, 8-18 x 0.375, chrome
*	316021110	Screw, 8-18 x 0.5, black
*	316021120	Screw, shoulder head, 8-18 x 5/8, (2), square drive
*	5308014215	Screw, 6-20 x 0.312

DOOR

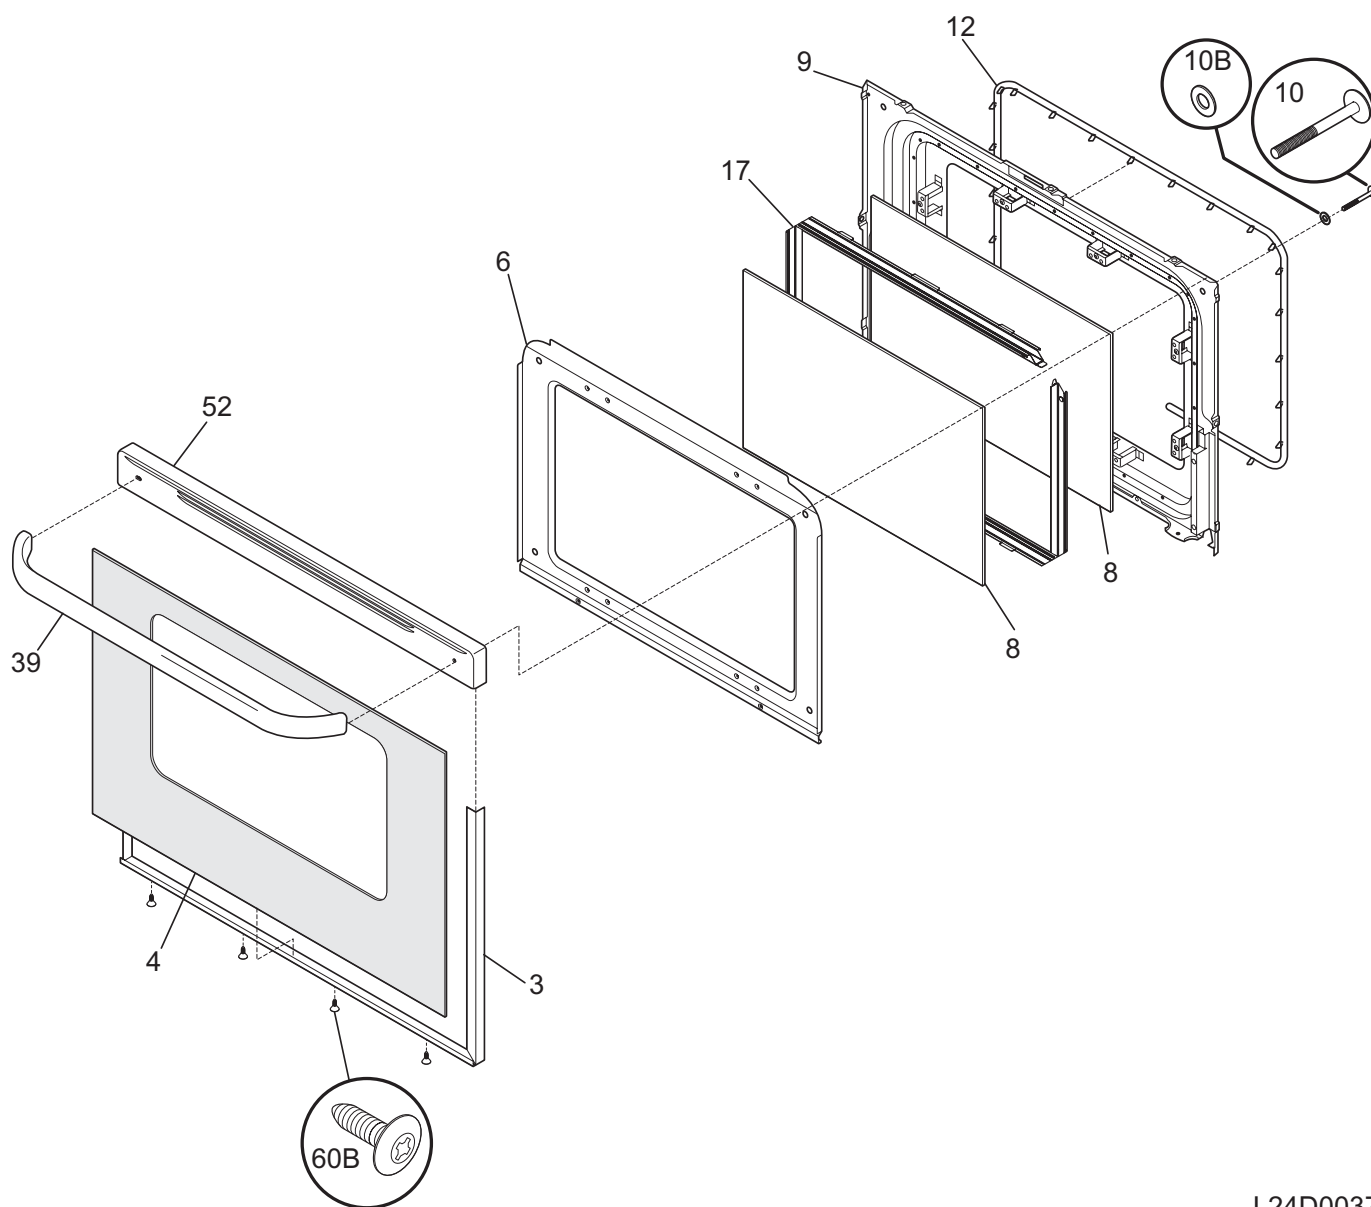

L24D0037

DOOR

POS. NO	PART NO.	DESCRIPTION
3	5303935191	Trim kit-door, 3 sided, black, w/tape and foil
4	316453000	Glass Assembly, oven door, outer, w/ss overlay
6	316222711	Shield, wool, black, oven door
8	316237100	Glass, oven door, clear, heat barrier
9	316230617	Liner, oven door
10	316001014	Screw, waf hd sq, 10-24 x 1.6, handle, (2)
10B	316008401	Washer, 3/4 OD x 1/4 ID, steel
12	316239700	Seal, oven door
17	316117701	Spacer, door glass, (2)
39	316248300	Handle, oven door, black
52	316201005	Cap, door trim, black
60B	316021110	Screw, 8-18 x 0.5, black
*	316433600	Label, anti-tip
*	316279700	Cleaner, stainless steel
*	5303271648	Screw, wafer hd sq dr, 8-18AB x 0.5
*	5303285179	Screw, wafer head, 8-32T x 0.500, black