


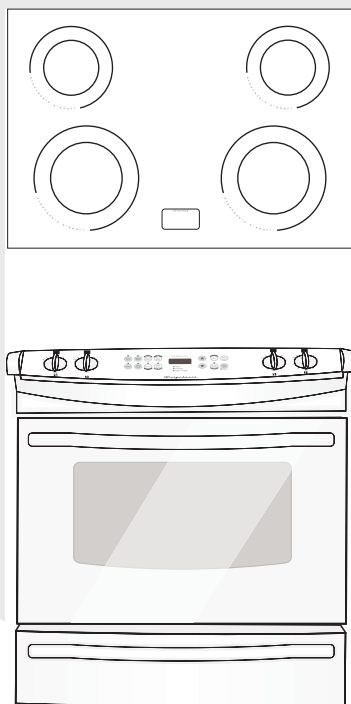

Frigidaire

Factory Parts Catalog

Product No.	GLES389EBA	GLES389EBB	GLES389EQA	GLES389ESA
	37956366H5361	37956366H5362	37956364H5341	37956367H5311
Series	30" slide-in	30" slide-in	30" slide-in	30" slide-in
Color	black	black	bisque	white
Market	North America	North America	North America	North America
Wiring Diagram	318271927	318271927	318271927	318271927
Owner's Guide	318203810	318203810	318203810	318203810
Installation Instructions	318201611	318201611	318201611	318201611
Timer Guide	318200194	318200194	318200194	318200194

Electrolux

Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917


Publication No.
5995450771
05/10/06
(EN/SERVICE/ECL)
377

30-INCH SLIDE-IN ELECTRIC RANGE

**Model No.
GLES389E**

Copyright © 2005 Electrolux Home Products, Inc.
All rights reserved.

BACKGUARD

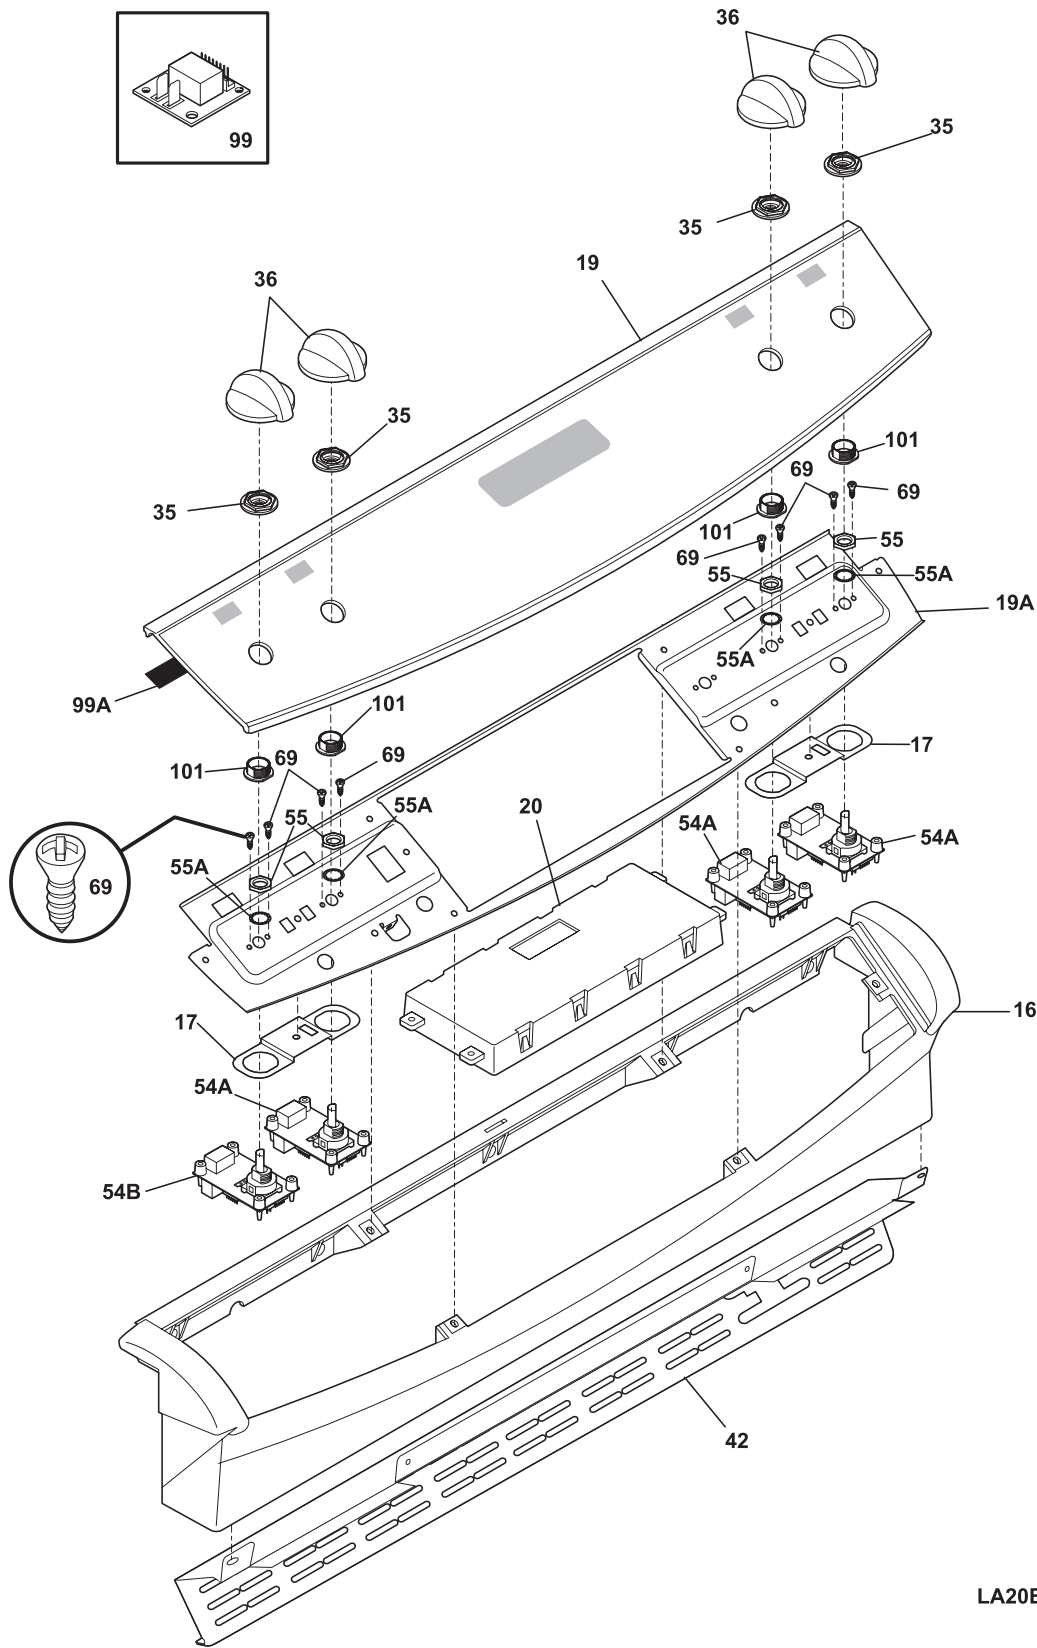


LA20BG0052

BACKGUARD

Model Index: **A** GLES389E (GLES389ESA)
B GLES389E (GLES389EBA)
C GLES389E (GLES389EBB)
D GLES389E (GLES389EQA)

POS. NO	PART NO.		DESCRIPTION
16	318299100	A - - -	Console, assy., white
16	318299102	- B C -	Console, assy., black
16	318299101	- - - D	Console, assy., bisque
17	318306900	A B C D	Bracket, bushing, (2)
19	318313800	A - - -	Control Panel Assembly, white, w/touch pad
19	318313802	- B C -	Control Panel Assembly, black, w/touch pad
19	318313801	- - - D	Control Panel Assembly, bisque, w/touch pad
19A	318224405	A B C D	Panel, control mtg.
20 #	316418735	A B C D	Clock/Timer, electronic, ES510
20*	5304451726	A B C D	Screw, control mtg., 8-18 x 1/2"
35	318233711	A - - -	Retainer, control panel, white
35	318233710	- B C -	Retainer, control panel, black
35	318233712	- - - D	Retainer, control panel, bisque
36	316223022	A - - -	Knob, control, white
36	316223021	- B C -	Knob, control, black
36	316223023	- - - D	Knob, control, bisque
42	318298001	A B C D	Trim, vent, black, upper
54A#	316441801	A B C D	Control, electronic, dual element, (3), w/potentiometer
54B#	316441804	A B C D	Control, electronic, left front, dual element, w/potentiometer
55	316247700	A B C D	Nut, hex control mtg, (5)
55A	316247800	A B C D	Washer, lock, (5), control mtg
69	5303323134	A B C D	Screw, 8-32 x 0.188
99	316435702	A B C D	Board, power supply
99A	318223900	A B C D	Gasket, dark grey
101	318233400	A B C D	Bushing, retainer
* #	318228813	A B C D	Harness, wiring, main, backguard
*	318083021	A B C D	Harness, wiring, to transformer, interface
* #	318224813	A B C D	Harness, wiring, timer
*	08016432	A B C D	Screw, truss head, 8-18 x 0.375
*	5303300265	A B C D	Screw, 8-18 X 1/2, (2)
*	5303311333	A B C D	Screw, 8-32 x 3/8

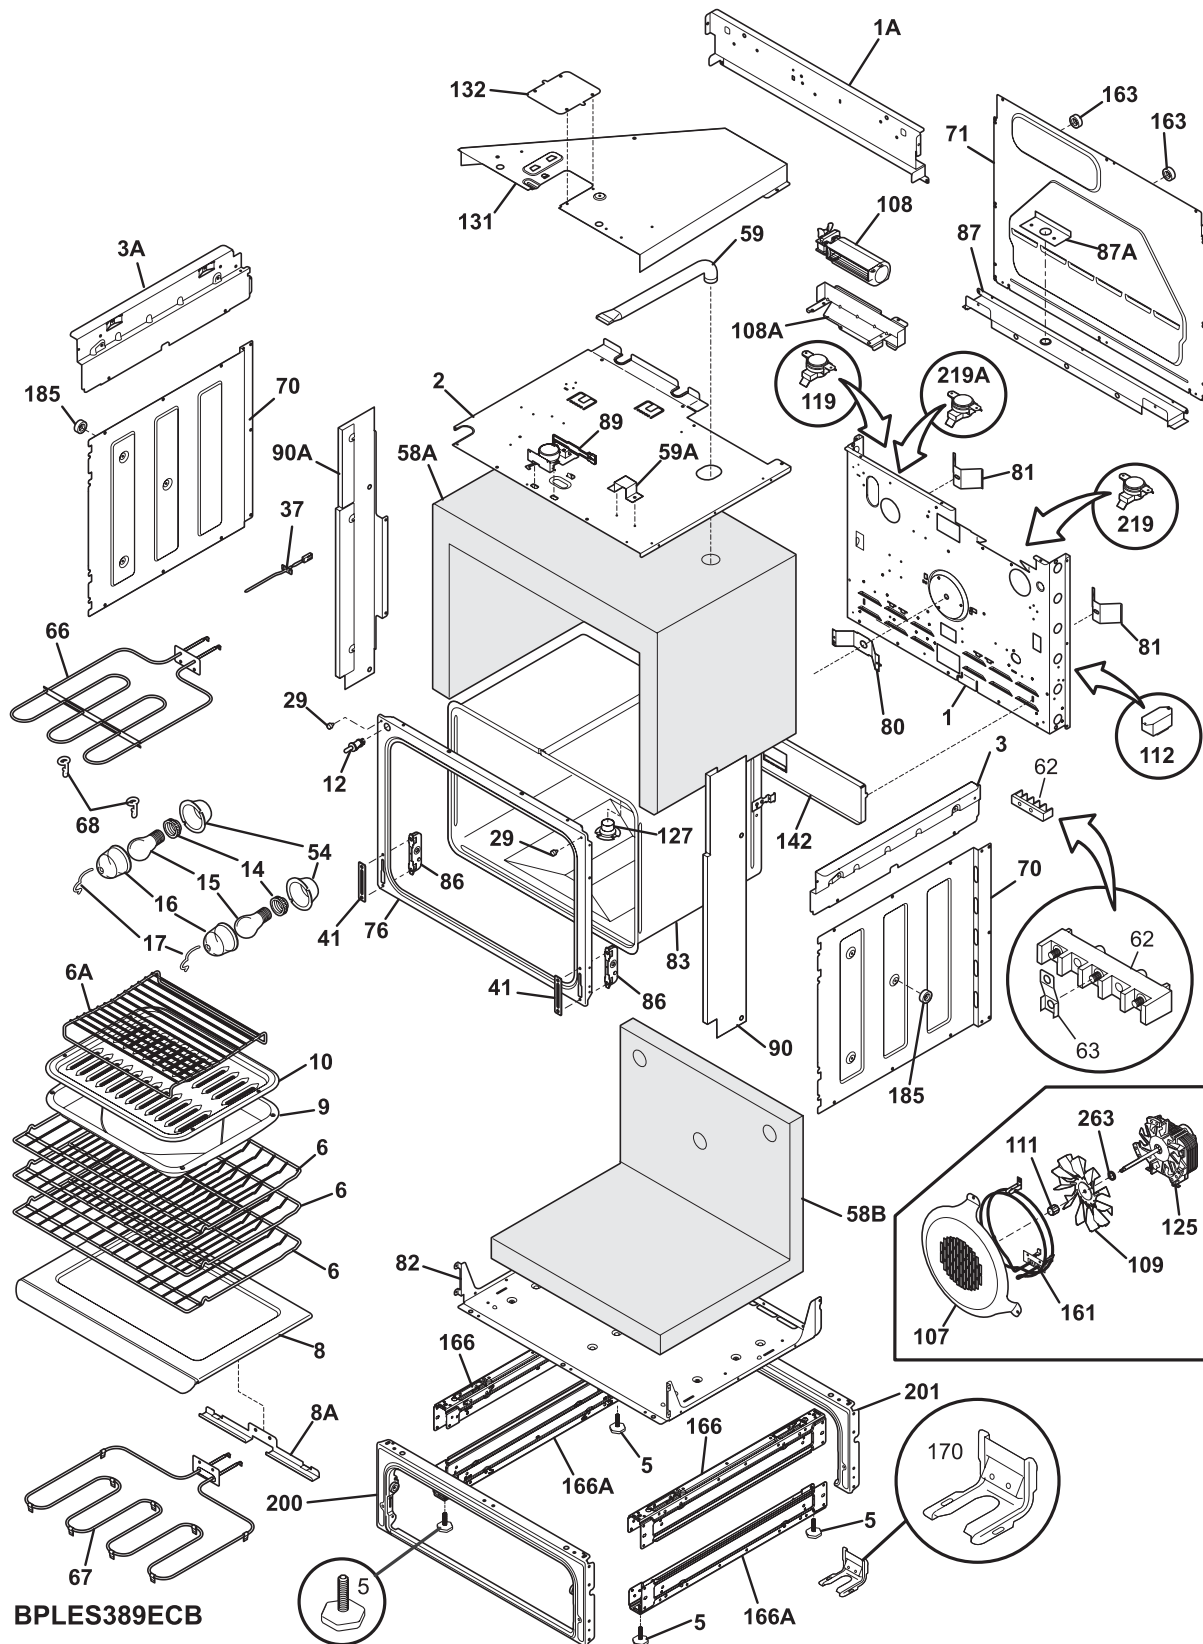
BODY

BODY

Model Index: **A** GLES389E (GLES389ESA)
B GLES389E (GLES389EBA)
C GLES389E (GLES389EBB)
D GLES389E (GLES389EQA)

POS. NO	PART NO.		DESCRIPTION
1	318259203	A B C D	Back, main
1A	318225112	A B C D	Panel, main back, upper
2	318258902	A B C D	Shield, insulation, upper
3	318225210	A B C D	Panel, bodyside, upper RH
3A	318225211	A B C D	Panel, bodyside, upper LH
5	318175503	A B C D	Screw, leveling
6	318262503	A B C D	Rack, oven
6A	318219500	A B C D	Rack, broiler pan
8	318262001	A B C D	Cover, element
8A	318318600	A B C D	Bracket, element, hidden bake
9	5303317977	A B C D	Pan, broiler
10	5303317976	A B C D	Insert, broiler pan
12 #	318089917	A B C D	Switch, light
14	318224000	A B C D	Receptacle, oven light
15	5303013071	A B C D	Bulb/Lamp, light
16	3201911	A B C D	Cover, oven light, glass
17	5304400195	A B C D	Retainer, light cover
29	318147411	A B C D	Bumper, (2)
37 #	316217002	A B C D	Probe, oven temp
41	5303310526	A B C D	Cover, hinge cutout
54	318222400	A B C D	Housing, oven light
58A	318285055	A B C D	Insulation, oven wrapper
58B	318285056	A B C D	Insulation, oven back
59	318072560	A B C D	Duct, oven vent
59A	318261600	A B C D	Bracket, vent tube
62	5303935061	A B C D	Terminal Block Kit
62*	5303323139	A B C D	Screw, 10-24 x 0.906
62*	5303323144	A B C D	Nut, 10-32
63	318264200	A B C D	Plate, grounding strap
66 #	318255600	A B C D	Element, broil, 2750W
67	318254901	A B C D	Element, bake, 3400W, 8 pass
68	5304403015	A B C D	Support, hanger, (2), broil element
70	318259100	A B C D	Shield, insulation, sides, (2)
71	318260007	A B C D	Panel, rear box
76	318056217	A B C D	Front, oven
80	5303320846	A B C D	Plate, oven mtg
81	318192400	A B C D	Spring, oven
82	318258708	A B C D	Shield, insulation, lower
83	318261400	A B C D	Liner, oven assy
86	5303310524	A B C D	Receptacle, hinge
87	318260608	A B C D	Bracket, cable mtg.
87A	318111804	A B C D	Plate, cord set mtg
89 #	318261202	A B C D	Motor, latch assy
90	318296902	A - - -	Panel, filler, white, RH
90	318296904	- B C -	Panel, filler, black, RH
90	318296906	- - - D	Panel, filler, bisque, RH
90A	318296903	A - - -	Panel, filler, white, LH

BODY


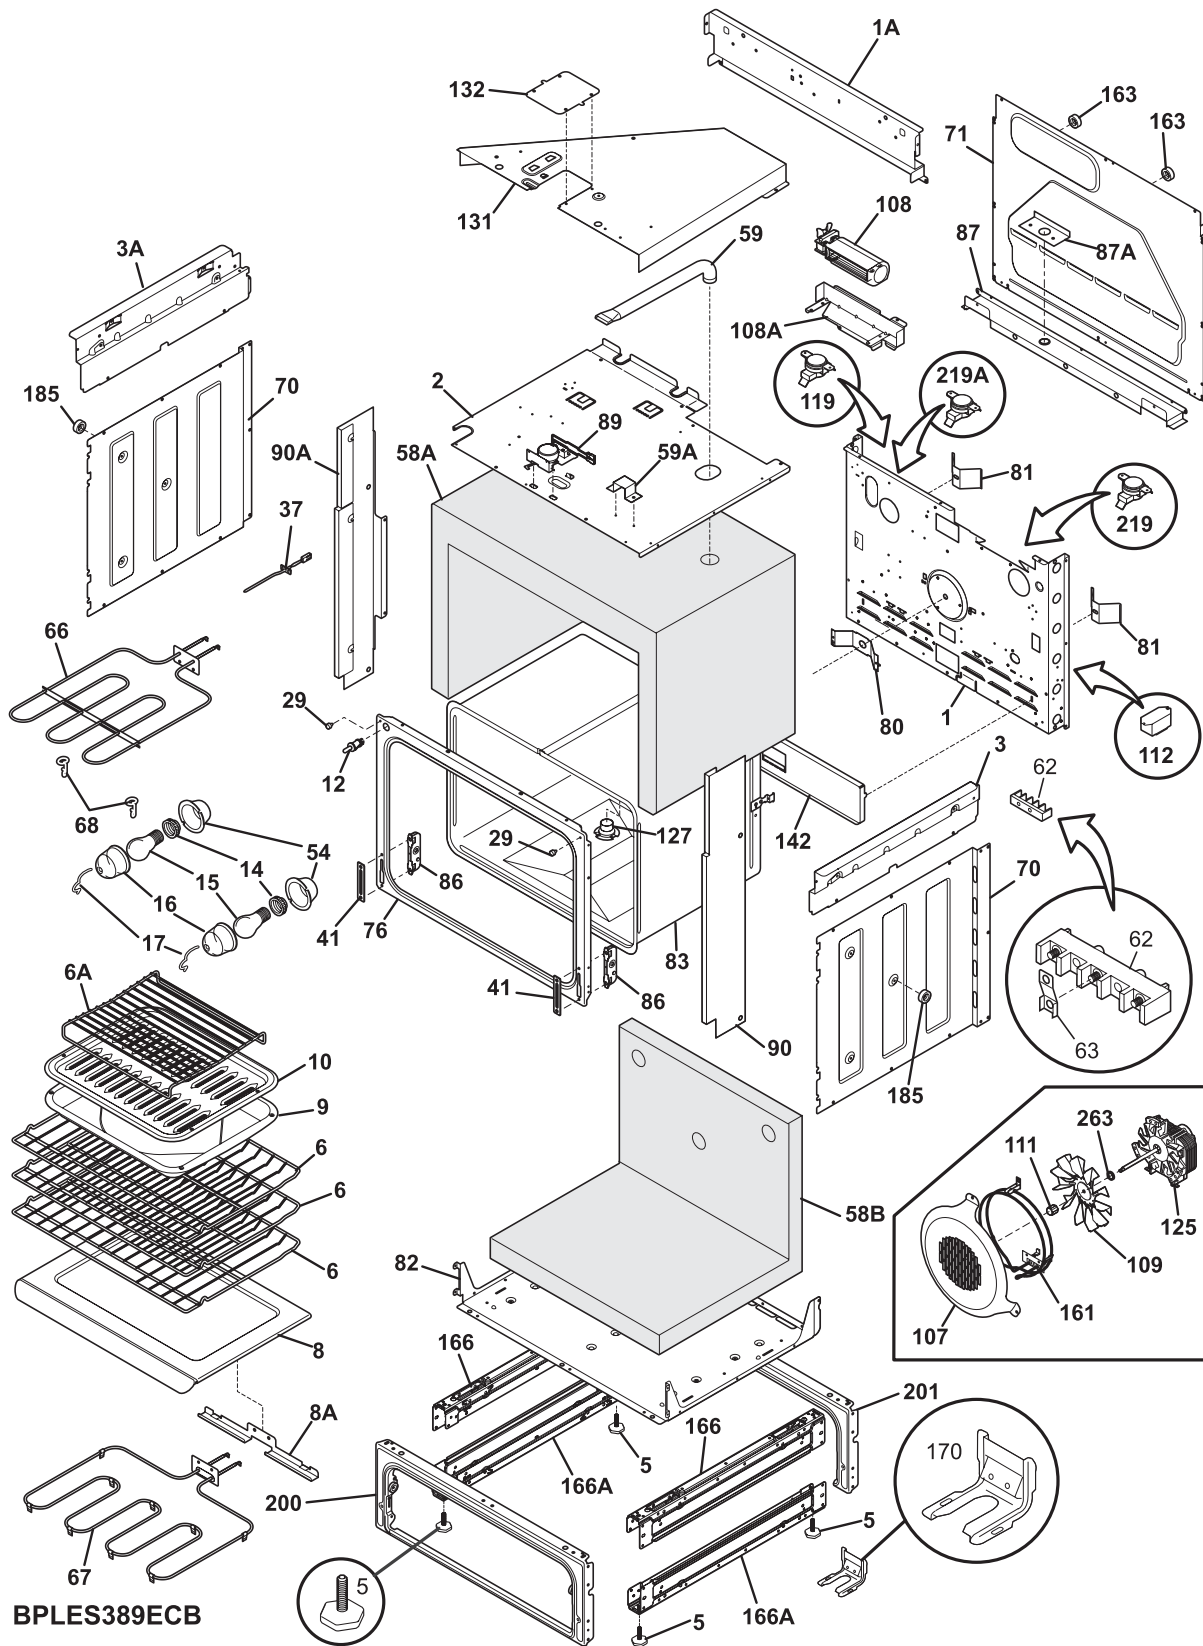


BODY

Model Index: **A** GLE389E (GLE389ESA)
B GLE389E (GLE389EBA)
C GLE389E (GLE389EBB)
D GLE389E (GLE389EQA)

POS. NO	PART NO.		DESCRIPTION
90A	318296905	- B C -	Panel, filler, black, LH
90A	318296907	- - - D	Panel, filler, bisque, LH
107	318219401	A B C D	Cover, fan
108#	318073018	A B C D	Motor, blower
*	318249401	A B C D	Tube, protector
108A	318251300	A B C D	Bracket, fan support
109	316136400	A B C D	Blade, fan
111	316136600	A B C D	Nut, fan retainer
112#	318112703	A B C D	Relay
119#	318005212	A B C D	Switch, thermal cutout
125#	316415800	A B C D	Motor, fan
127	318317100	A B C D	Adapter Assembly, vent tube, w/converter
131	318272900	A B C D	Box, vent
132	318003000	A B C D	Plate, shield
142	318123910	A B C D	Deflector
161#	318255503	A B C D	Element, convection, 350 W
163	318014110	A B C D	Spacer, (6)
166	318298401	A B C D	Bracket, base support, upper, (2)
166A	318298402	A B C D	Bracket, base support, lower, (2)
170	318335500	A B C D	Anti-tip & accessories
185	318165800	A B C D	Spacer, (2)
200	318298201	A B C D	Frame, drawer, black, front
201	318298210	A B C D	Frame, drawer
219#	318003614	A B C D	Thermostat, safety
219A	318003613	A B C D	Thermostat, safety
263	316136500	A B C D	Washer, flat
* #	318224941	A B C D	Harness, wiring, main
*	318235300	A B C D	Connector assy., w/3 lugs, & instructions
*	3051050	A B C D	Screw, shoulder
*	3201861	A B C D	Screw, 6 x 0.375, (4)
*	08016432	A B C D	Screw, truss head, 8-18 x 0.375
*	5303211311	A B C D	Screw, 8 x 0.500
*	5303307980	A B C D	Screw, 8-32 x 0.437, (4)
*	5303323129	A B C D	Screw, 8 X 0.750
*	5304415832	A B C D	Screw, 8-18 x 0.406
*	5304436875	A B C D	Screw, 8-18 X 1/2, black

TOP/DRAWER

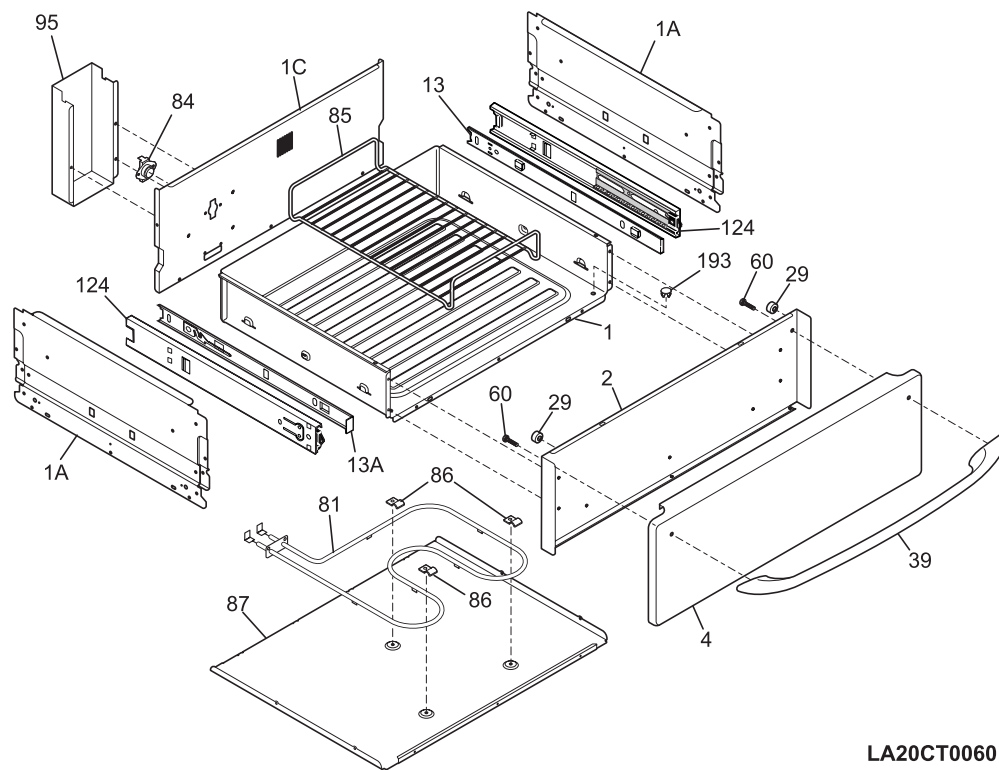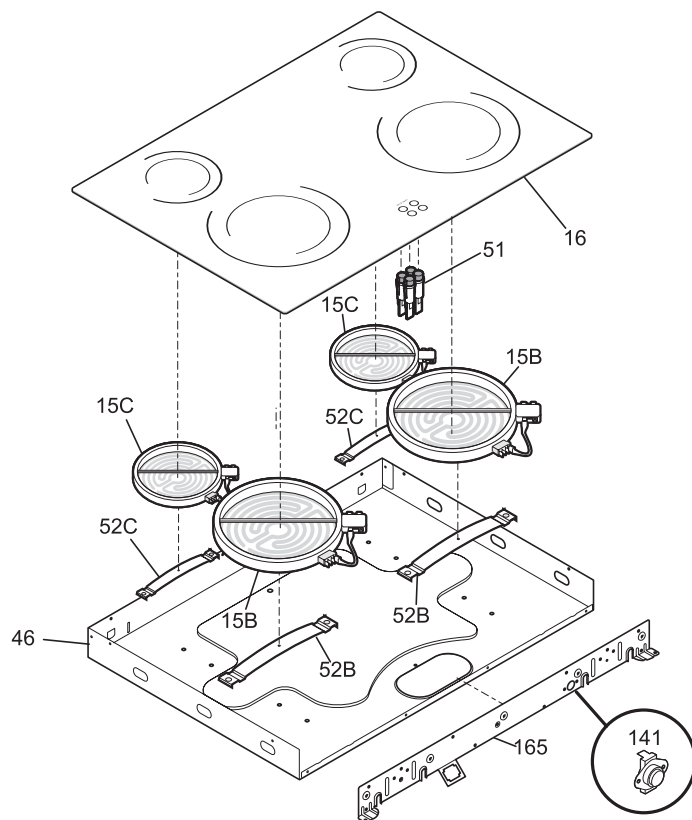


LA20CT0060

TOP/DRAWER

Model Index: **A** GLE389E (GLE389ESA)
B GLE389E (GLE389EBA)
C GLE389E (GLE389EBB)
D GLE389E (GLE389EQA)

POS. NO	PART NO.		DESCRIPTION
1	318304401	A B C D	Drawer, body assembly
1A	318300000	A B C D	Panel, warmer drawer, side, (2)
1C	318300300	A B C D	Panel, warmer drawer, rear
2	318303901	A B C D	Panel, drawer, black, inner
4	318299901	A - - -	Panel, drawer, white, front
4	318299903	- B C -	Panel, drawer, black, front
4	318299902	- - - D	Panel, drawer, bisque, front
13	318259501	A B C D	Glide, warmer, inner RH
13A	318259500	A B C D	Glide, warmer, inner LH
15B#	318198925	A B C D	Element, surface, 6/9, 1200/2500W, dual radiant
15C#	316419901	A B - D	Element, surface, dual, 750W/1800W, (2)
15C#	318198930	- - C -	Element, surface, dual, 750/1800W, (2)
16	318223638	A - - -	Main Top, glass assy., white
16	318223640	- B C -	Main Top, glass assy., black
16	318223639	- - - D	Main Top, glass assy., bisque
29	318147430	A B C D	Bumper, (2)
39	316203001	A - - -	Handle, door, white
39	316270200	- B C -	Handle, door, black
39	316203003	- - - D	Handle, door, bisque
46	318225410	A B C D	Box, burner
51 #	318044820	A - - D	Light, indicator, red
51 #	318044822	- B C -	Light, indicator, clear
52B	318122010	A B C D	Spring, element mtg, 1000W/2500W
52C	318122008	A B C D	Spring, element mtg
60	5304448455	A B C D	Screw, 10-14 x 1/2, (2), handle mtg.
81 #	318255300	A B C D	Element, warmer drawer
84 #	318005105	A B C D	Thermostat
85	318257600	A B C D	Rack, warmer drawer
86	316095800	A B C D	Clip, hold down, warmer element
87	318300100	A B C D	Panel, warmer drawer, lower
95	318303800	A B C D	Shield, wire
124	316105501	A B C D	Glide, warmer drawer, outer/RH & LH, (2)
141#	318005211	A B C D	Switch, thermal cutout
165	318227503	A B C D	Plate, mounting
193	5303325173	A B C D	Cap, plug
* #	318228913	A B C D	Harness, wiring, cooktop
*	318163600	A B C D	Cleaner, cooktop
*	5303325171	A B C D	Washer, plastic
*	08016432	A B C D	Screw, truss head, 8-18 x 0.375
*	5303211311	A B C D	Screw, 8 x 0.500
*	5303300265	A B C D	Screw, 8-18 X 1/2, (2)
*	5303311333	A B C D	Screw, 8-32 x 3/8

DOOR

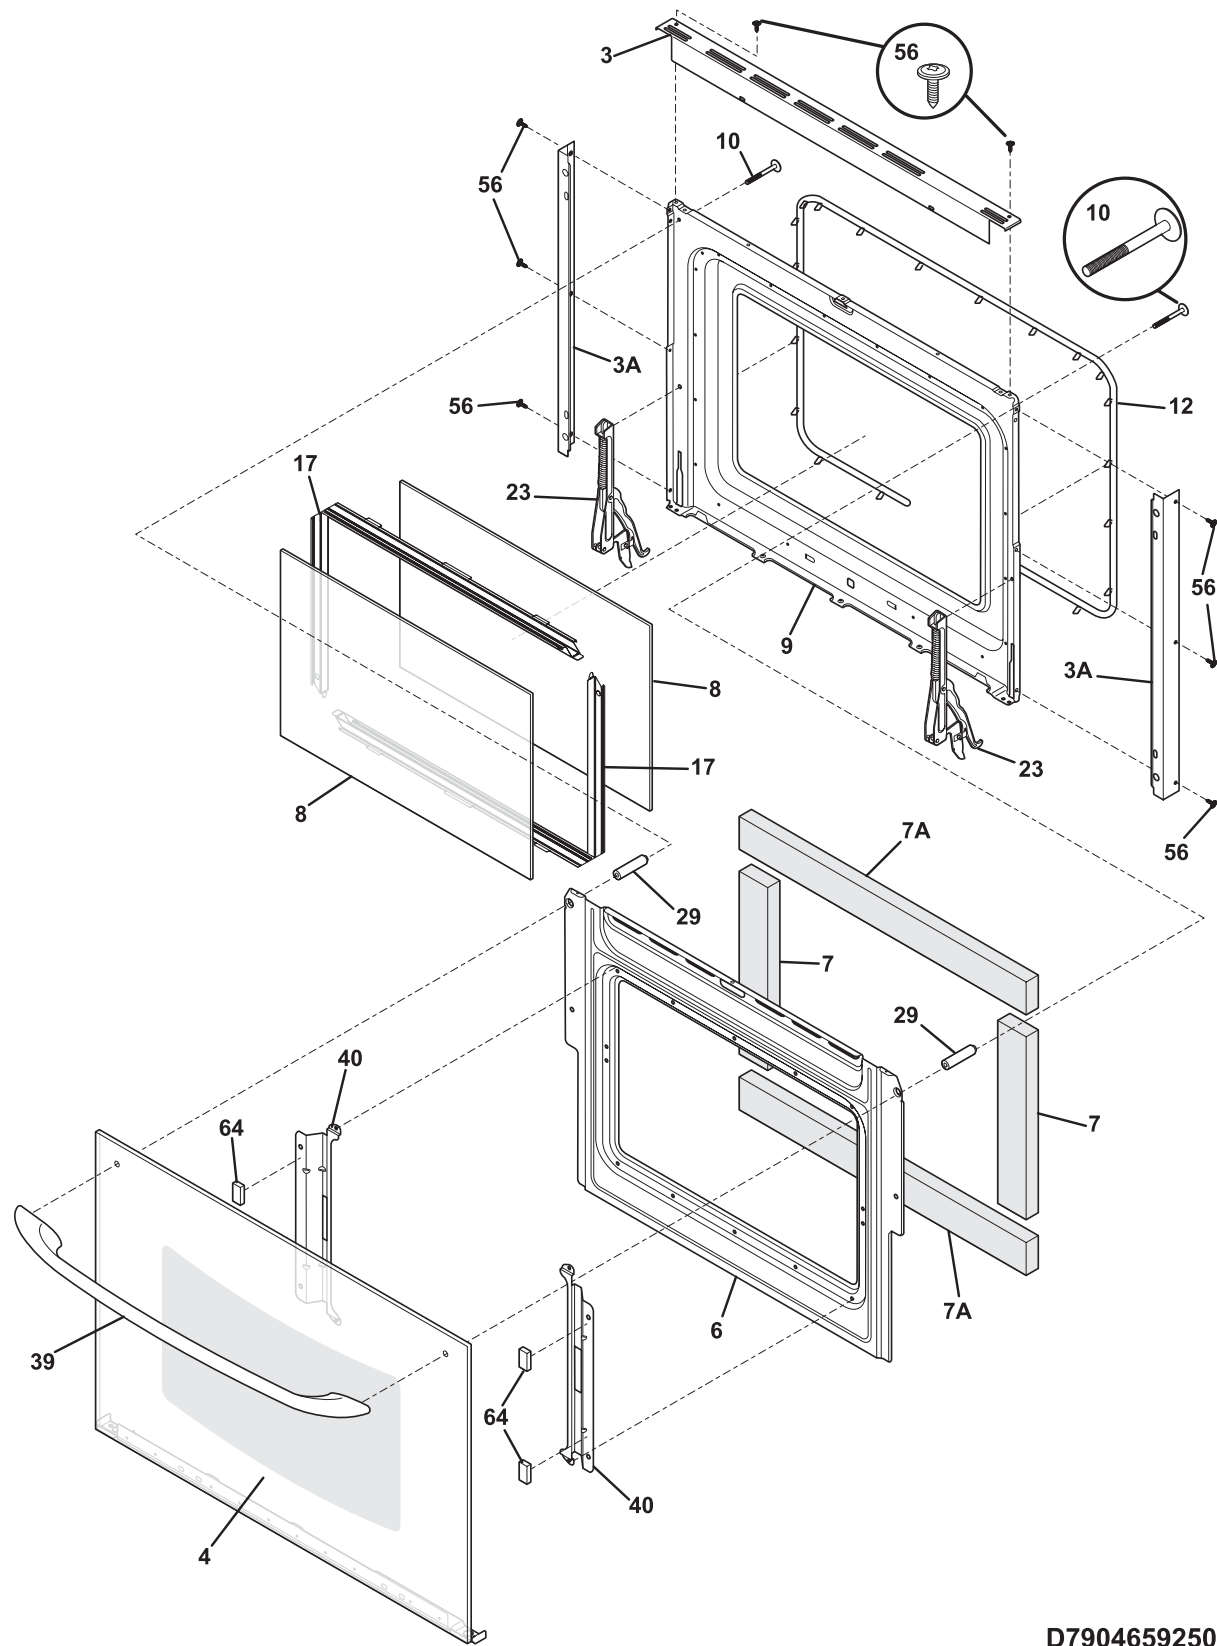


D79046592500

DOOR

Model Index: **A** GLES389E (GLES389ESA)
B GLES389E (GLES389EBA)
C GLES389E (GLES389EBB)
D GLES389E (GLES389EQA)

POS. NO	PART NO.		DESCRIPTION
3	318260201	A B C D	Trim, oven door, black, upper
3A	318260401	A B C D	Trim, oven door, side, (2)
4	318261301	A - - -	Glass Assy., oven door, white, outer, w/trim
4	318261300	- B C -	Glass Assy., oven door, black, outer, w/trim
4	318261302	- - - D	Glass Assy., oven door, bisque, outer, w/trim
6	318260500	A B C D	Baffle, door
7	318285057	A B C D	Insulation, oven door
7A	318285062	A B C D	Insulation, oven door
8	316117500	A B C D	Glass, oven door, heat barrier
9	318259601	A B C D	Liner, oven door
10	5304416408	A B C D	Screw, 10-24 x 1.750, handle mtg
12	318053130	A B C D	Seal, oven door
17	316402403	A B C D	Spacer, door glass, (2)
23	318024722	A B C D	Hinge, upper door, (2)
29	318014402	A B C D	Spacer, door
39	316203001	A - - -	Handle, door, white
39	316270200	- B C -	Handle, door, black
39	316203003	- - - D	Handle, door, bisque
40	318242700	A B C D	Bracket, glass holder, (2)
56	5304436875	A B C D	Screw, 8-18 X 1/2, black
64	318165800	A B C D	Spacer, (2)
*	316221001	A B C D	Label, anti-tip
*	5304415832	A B C D	Screw, 8-18 x 0.406

WIRING DIAGRAM

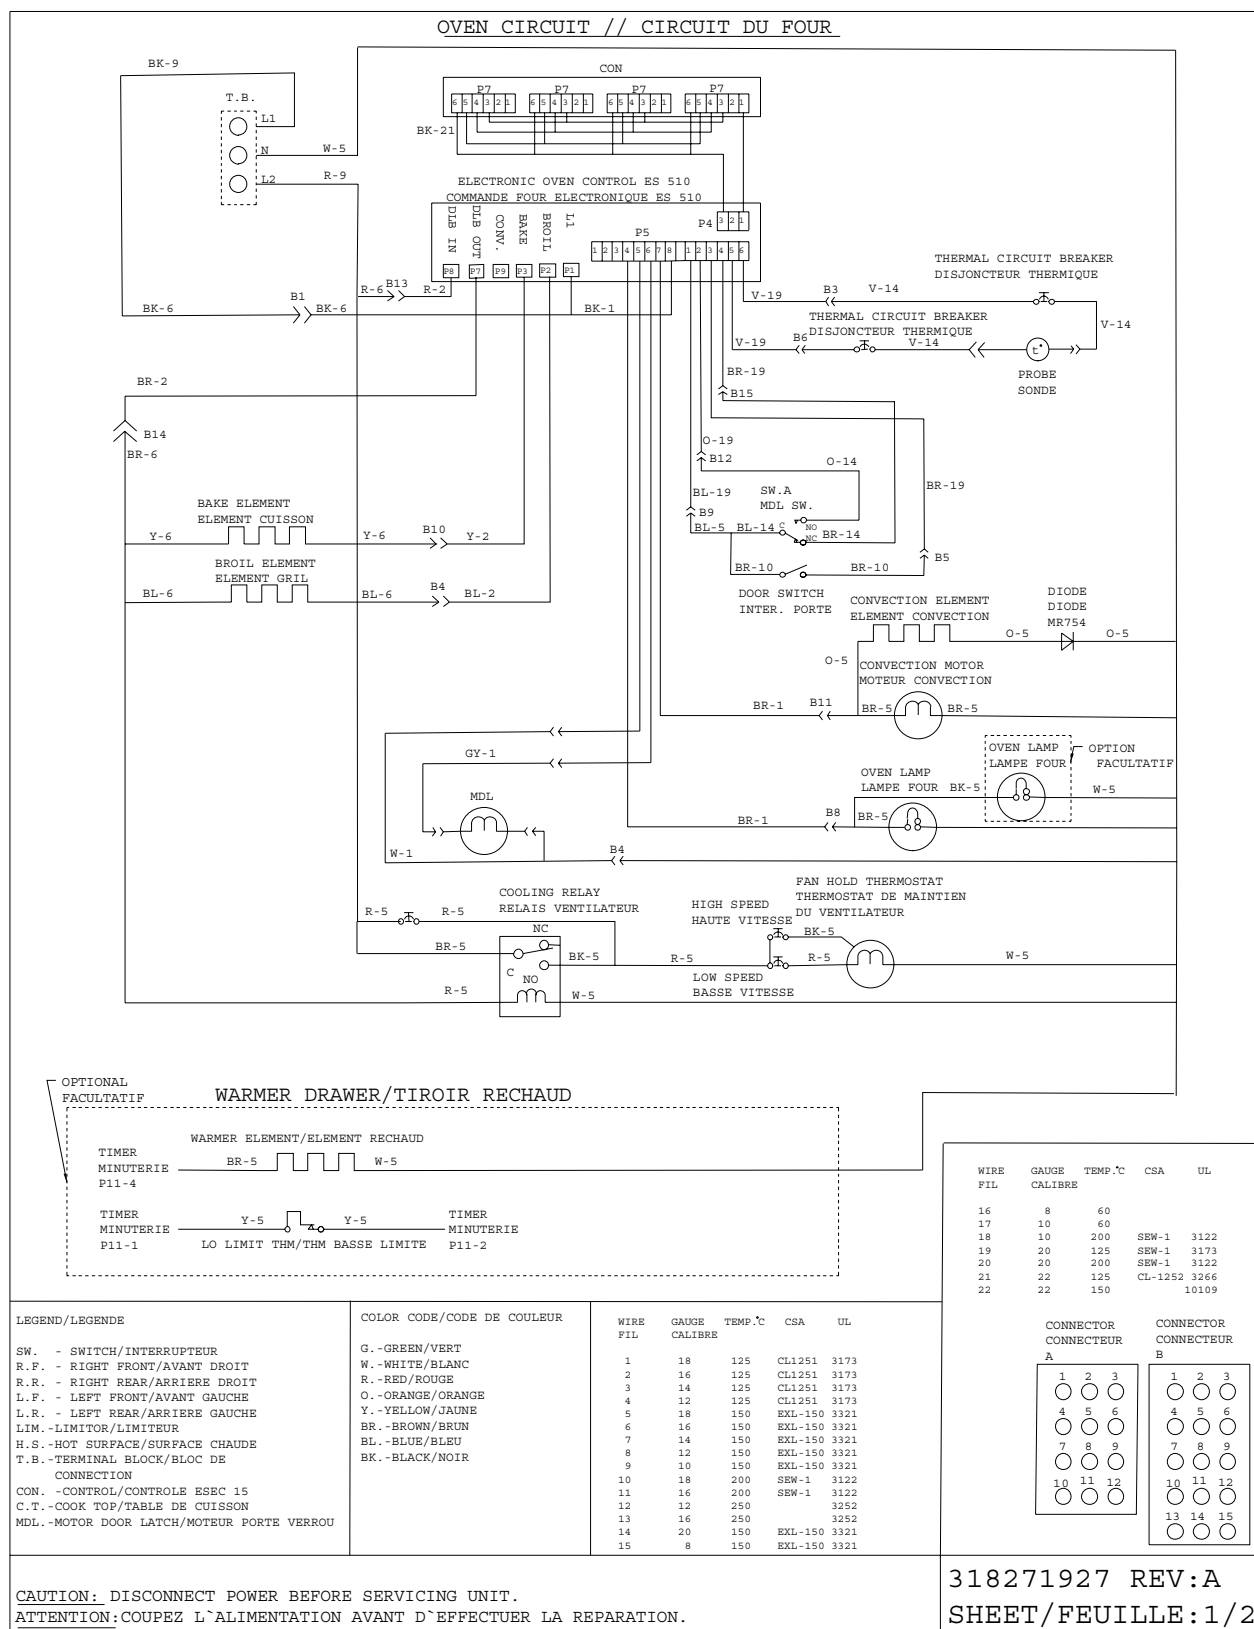

WIRING DIAGRAM

