
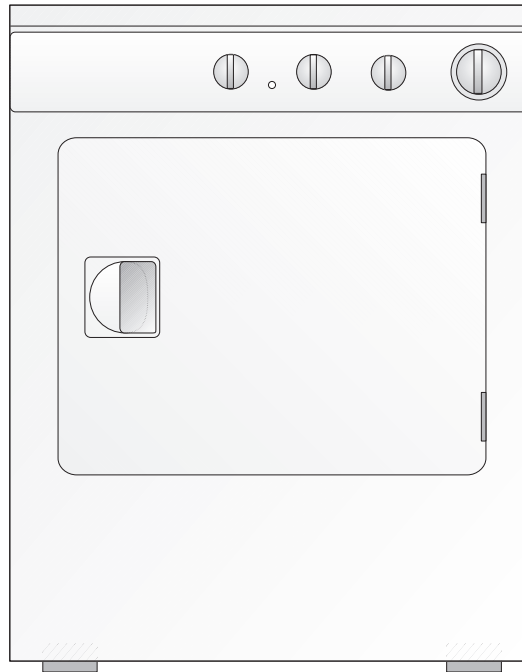


FACTORY PARTS CATALOG

DRYER

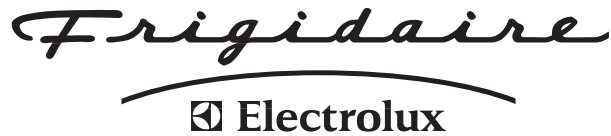

PRODUCT NO.	BASE MODEL NO.	SERIES	COLOR	VOLTS
GLEQ642AS2	GLEQ642A	Frig Gallery	white	240
MARKET				
North America				

WIRING DIAGRAM - # 134064800
OWNER'S GUIDE - # 131883500
INSTALLATION INSTRUCTIONS - # 134198100




ELECTROLUX HOME PRODUCTS, INC.
P.O. BOX 212378, Augusta, GA 30917

Publication No.
5995381331
021112
-EN/SERVICE /ECL
361

ELECTRIC
DRYER

Model No.
GLEQ642A

©2002 Electrolux Home Products, Inc.
All rights reserved

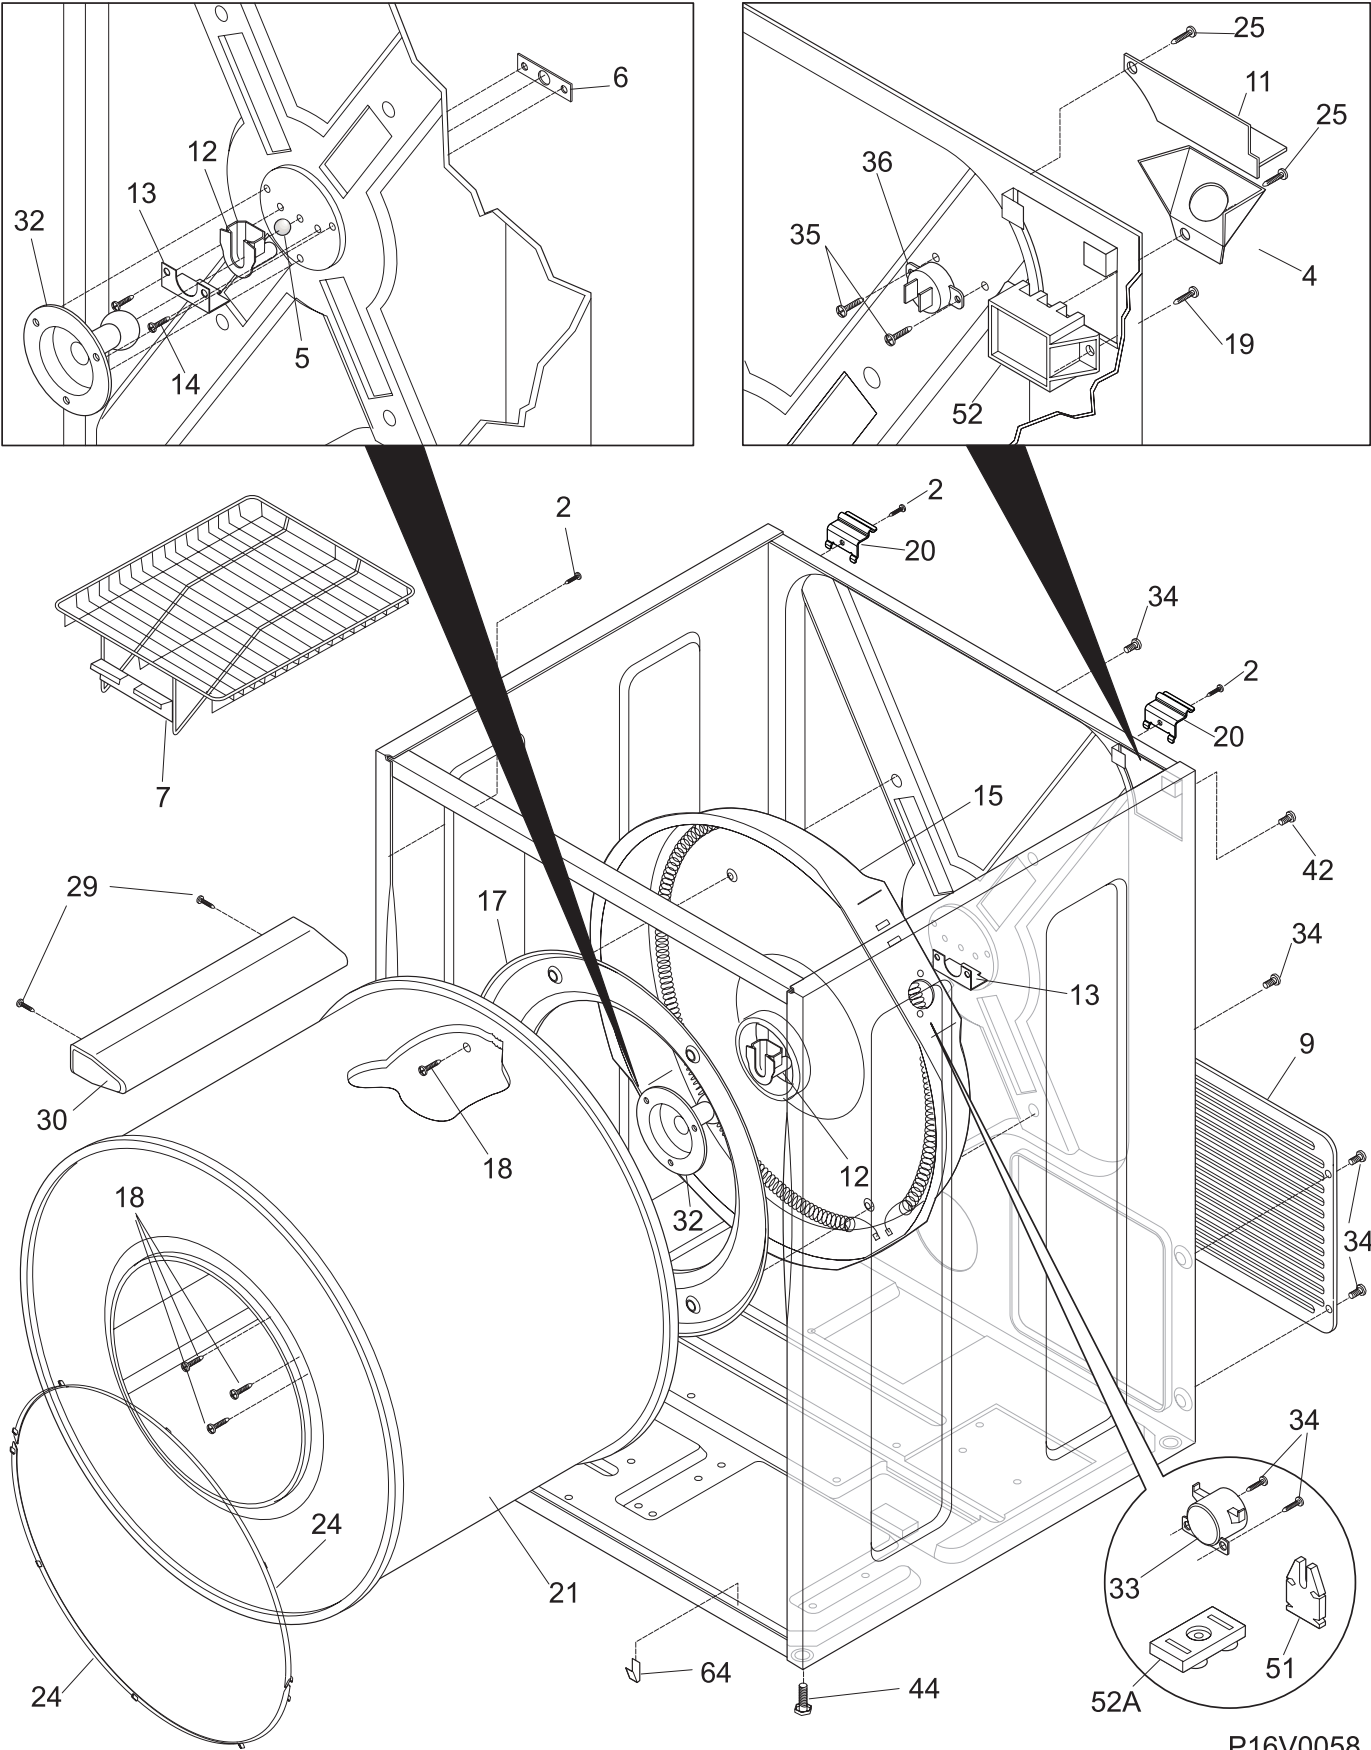


P16V0058

CABINET/DRUM

POS. NO	PART NO	DESCRIPTION
2	131168200	Screw,pan head ,8-18B x 0.31
4	131785200	Bracket,elec power cord ,knock out
5	5303281019	Ball
6	5303281020	Clip,ball ,steel ,flat nut
7	134121200	Rack,drying
9	131793201	Panel,access ,rear
11	5303211428	Cover,terminal block
12	131825900	Bearing,drum support
13	131724300	Bracket,bearing support
14	131205400	Screw,bracket mtg. ,10-16B x 1.375 ,cr/sq drive
15 #	131553900	Heater Assy,w/housing/felt
17	3204254	Baffle,heater shield
18	131477000	Screw,shaft/baffle mt ,10-16AB x 0.375 ,special
19	131205300	Screw,10-16 x 0.750
20	131469100	Bracket,hinge ,rear ,top panel mtg.
21	134122532	Drum,dryer ,galvanized stl. ,service kit
24	131963900	Glide,drum
25	5303015671	Screw,hex washer head ,8-18 x 0.375 ,cup point
29	131382300	Screw,quadrex head ,10-14 x 1.00 ,vane mtg.,special
30	5303201200	Vane,straight
32	131777700	Shaft,drum support ,ballhitch
*	5303307893	Lubricant,high temp
33 #	3204267	Thermostat,safety
34	131243700	Screw,pan head ,8-18AB x 0.375 ,cr/sq drive
35	131892100	Screw,6-20B x 0.230
36 #	134120900	Thermal Limiter
42	134154100	Screw,hex washer head ,10-32 x 0.375 ,ground
44	134158000	Screw,leveling leg
51	131472100	Insulator,heater housing
52 #	134101400	Terminal Block,main
* #	134110500	Wiring Harness,main
52A	3202786	Terminal Block,heater housing
64	131704600	Clip
*	5303937141	Stacking Kit,washer/dryer
* #	5303281153	Rear Bearing Kit,includes 5,6 ,12,13,14,18,32

FRONT PANEL/LINT FILTER

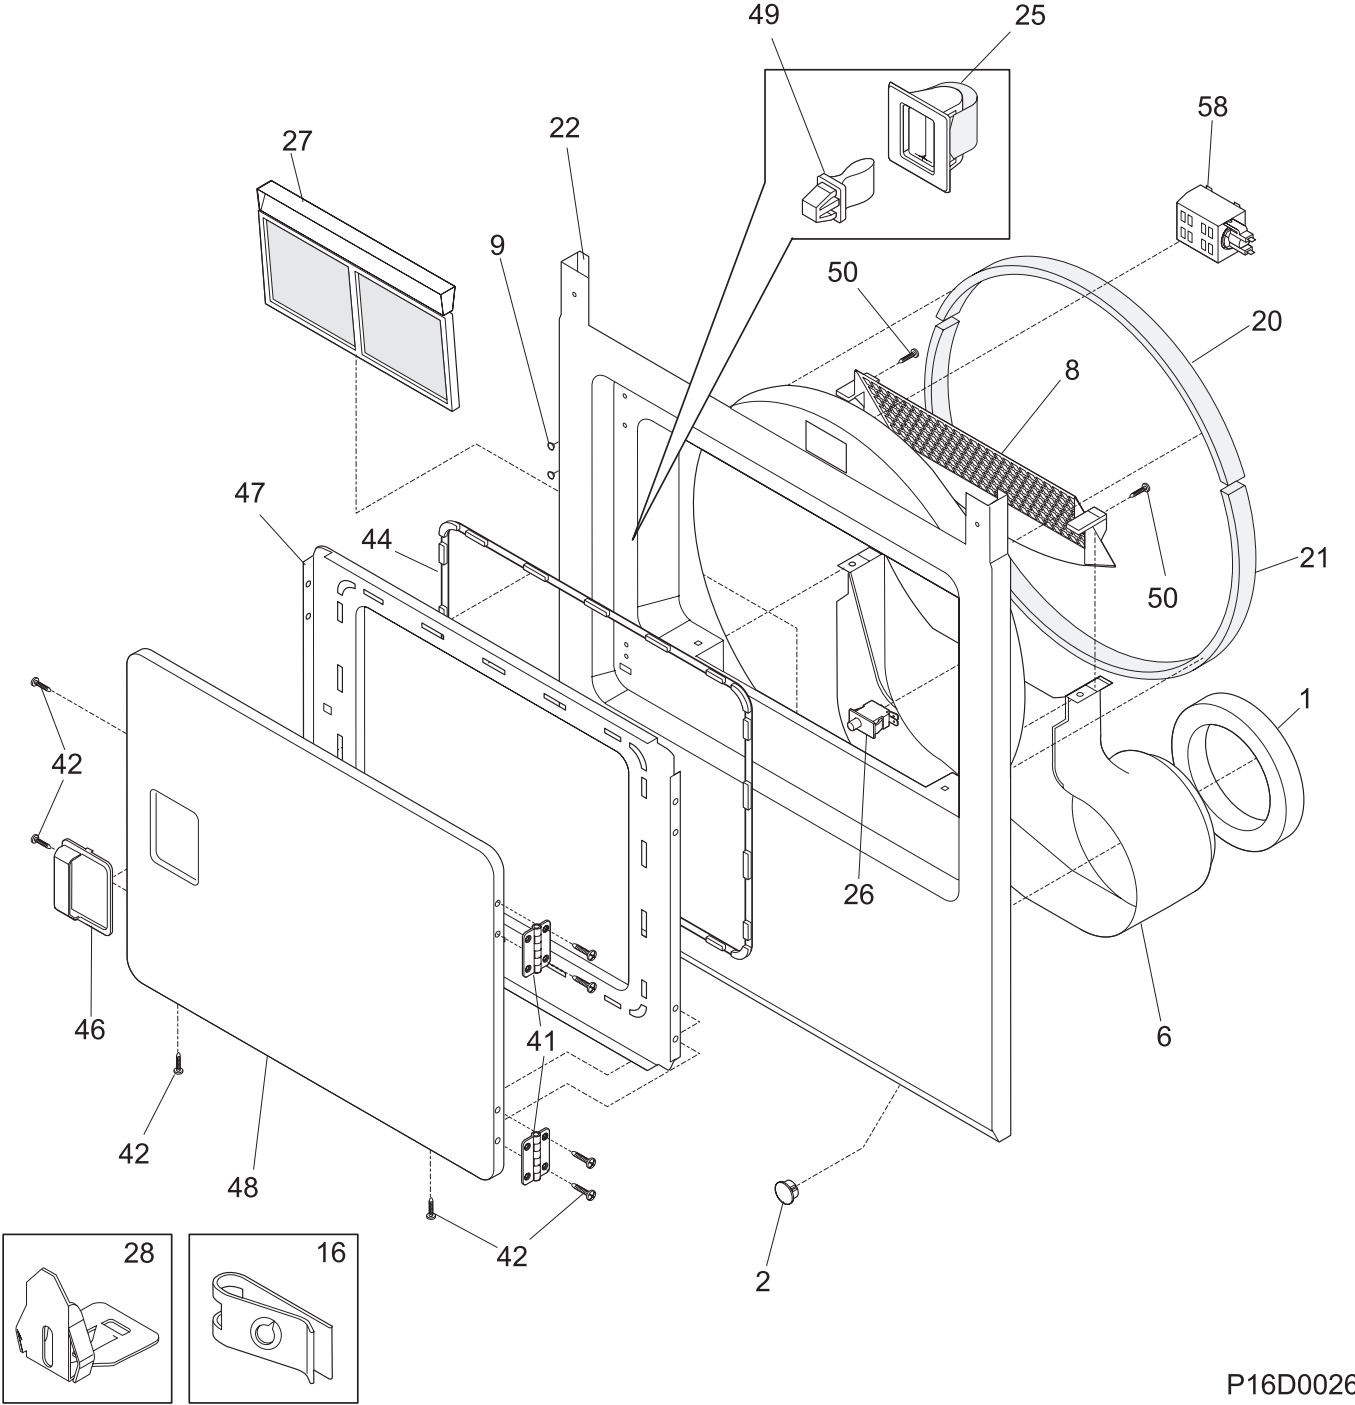


P16D0026

FRONT PANEL/LINT FILTER

POS. NO	PART NO	DESCRIPTION
1	134063300	Seal,air duct
2	131397000	Plug,dome ,white
6	131621900	Duct,air
8 #	131845801	Cover,lint housing ,w/moist sensor
8* #	131657500	• Wiring Harness,moisture sensor
9	131633200	Plug,white
16	131063700	Clip,wiring
20	134036400	Seal,felt ,upper
*	5308027429	Adhesive,high temp
21	134134700	Seal,felt ,lower
22	131845902	Panel,stacking ,white ,front ,with lamp hole
25	131658800	Door Catch
26 #	131843101	Switch,door ,with drum light
27	131450300	Trap,lint blade assy
28	5303281074	Clip,guide ,(3)
41	131627500	Hinge,door
42	131209600	Screw,flat head ,8-18AB x 0.44 ,cr/sq drive
44	131129900	Gasket,door seal
46	131644700	Handle,door ,white
47	131844104	Panel,inner door ,white
48	131789303	Panel,outer door ,white
49	5303211430	Door Strike
50	131303300	Screw,pan head lock ,10-16AB x 0.500
58 #	131843500	Lamp Assy,drum light
58*#	131862800	• Lamp
*	131474700	Insulation

CONTROLS/TOP PANEL

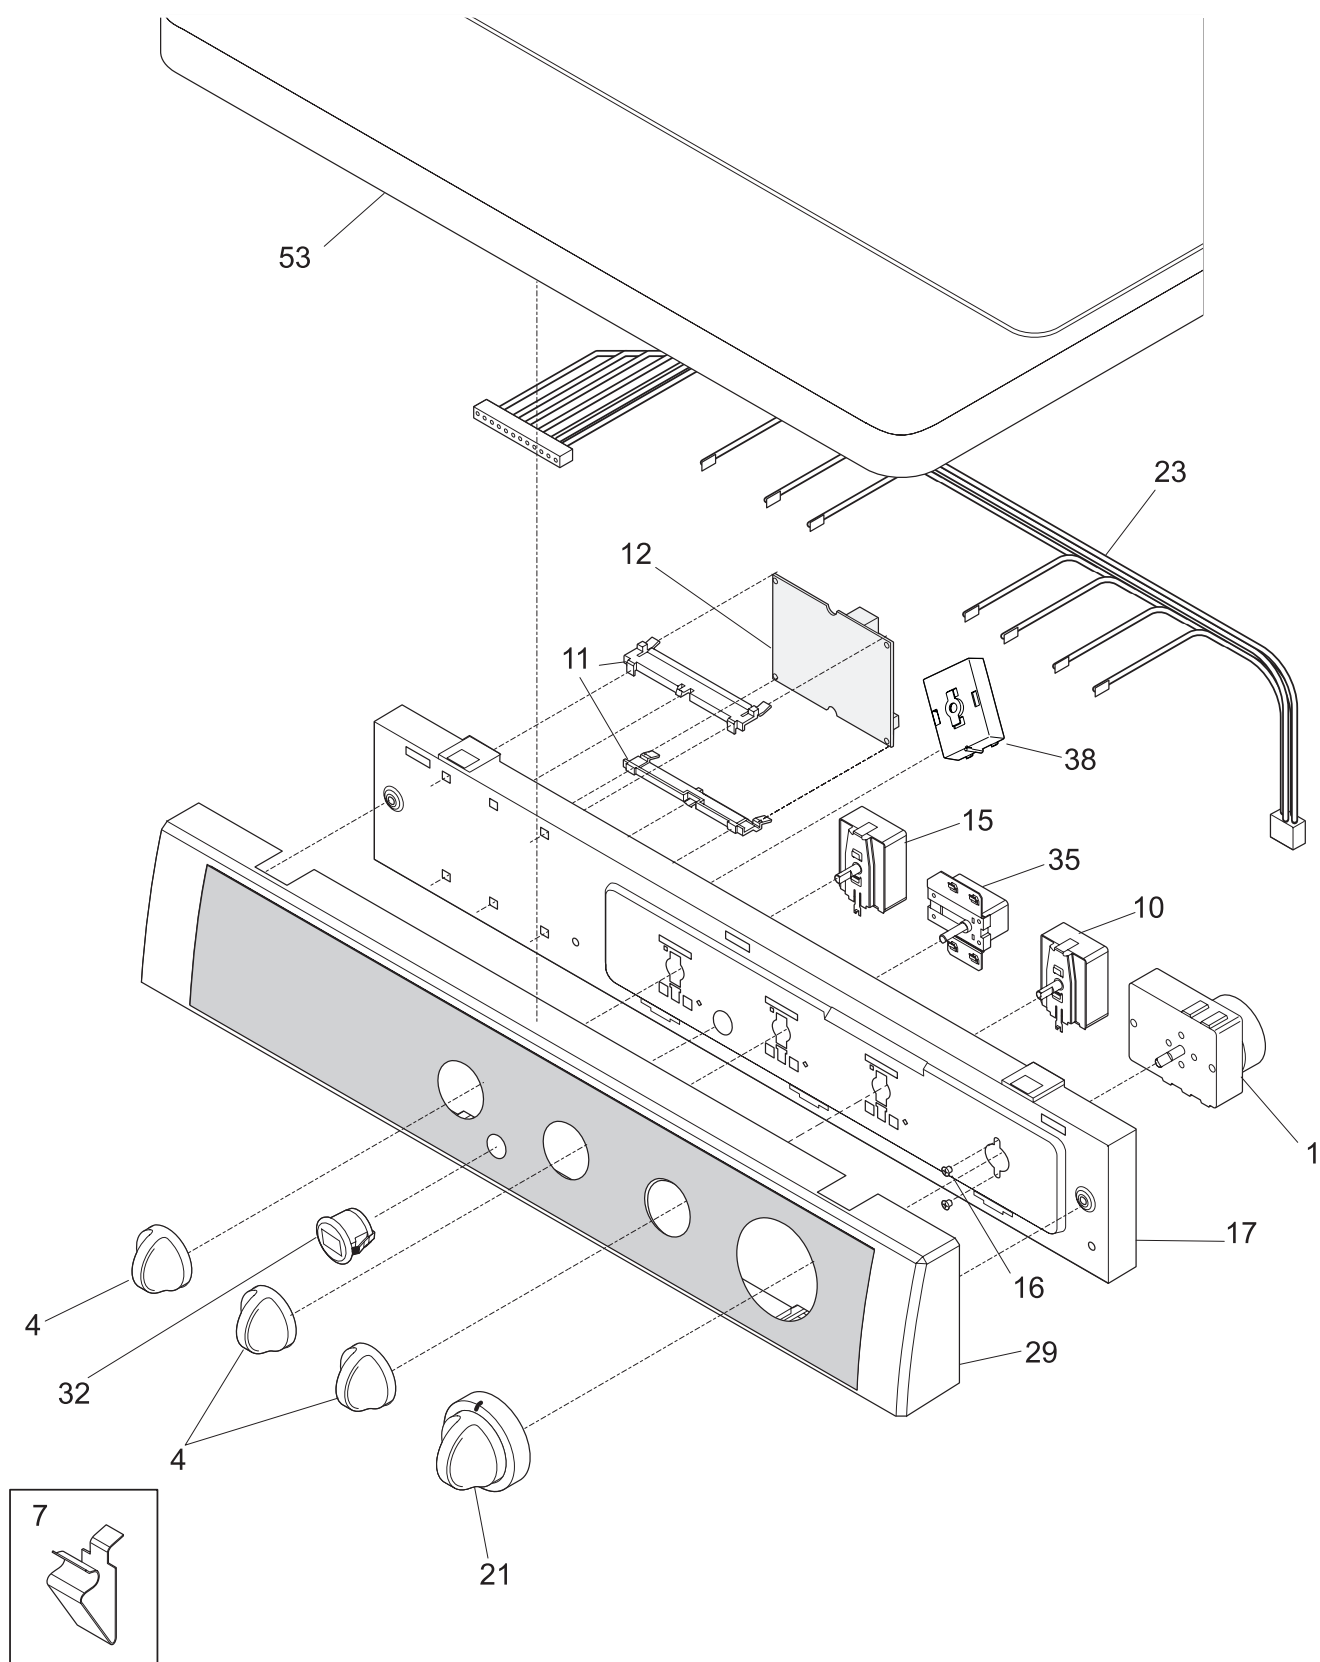


P16C0158

CONTROLS/TOP PANEL

POS. NO	PART NO	DESCRIPTION
1 #	131930600	Timer
4	134042800	Knob,rotary ,white
7	3205821	Clip,top-to-front
10 #	131447800	Switch,start ,turn type
11	131587400	Bracket,pc board mtg. ,(2)
12 #	131620200	Control Board,moisture sensor
15 #	131641900	Switch,temperature ,4 posn rotary
16	134034300	Screw,pan hd phillips ,8-18B x 0.250
17	134064501	Bracket,control mtg.
21	134042600	Knob,timer ,white/gray
23 #	134064600	Wiring Harness,controls
* #	134110500	Wiring Harness,main
29	131666943	Console,frame ,white ,w/trim & tape
32 #	134040800	Switch,on/off ,round
35 #	131243200	Switch,xrinse/temp/bzr ,2 position ,(2)
38 #	131959200	Beeper,continuous ,low tone
53	134086812	Panel,dryer top ,white ,stackable

MOTOR

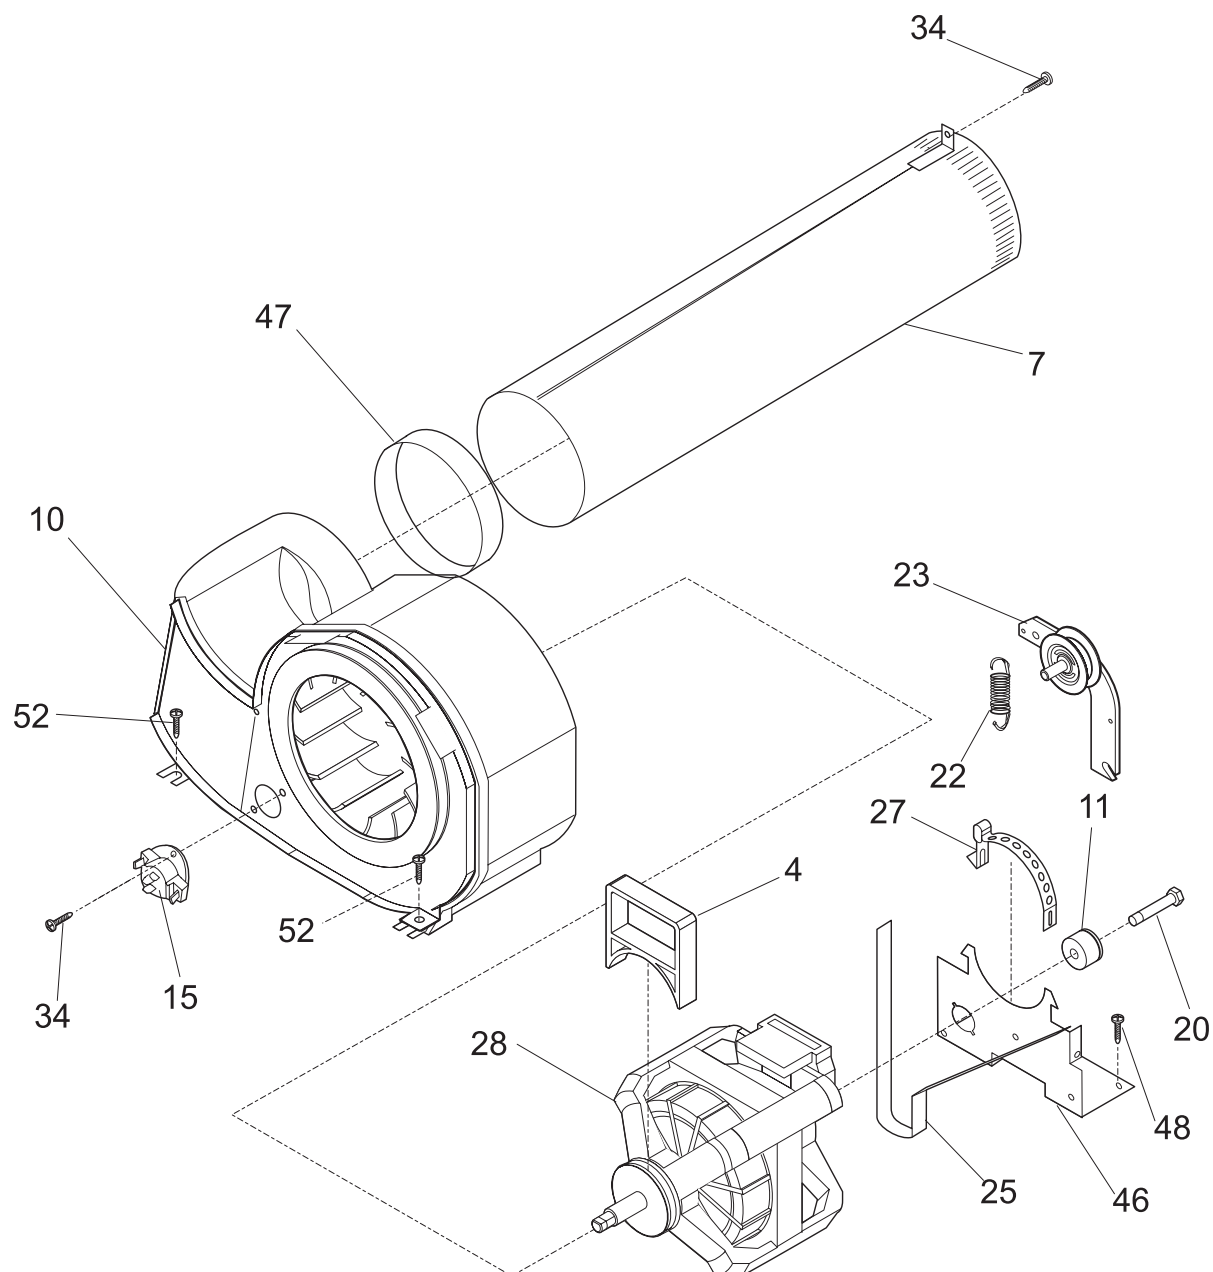


P16M0024

MOTOR

POS. NO	PART NO	DESCRIPTION
4	131435200	Lock,blower housing
7	131451600	Tube,exhaust ,rear ,w/mtg bracket
7*	131456800	Tube,exhaust ,side/bottom ,Optional Kit
10 #	131775600	Housing,blower assy ,cover & wheel
11	131749800	Spacer,idler
15 #	134048800	Thermostat,control
20	131017900	Screw,hex head ,1/4-20T x 1.25 ,spacer mtg.,thread cutting
22	131601000	Spring,idler arm
23 #	131863000	Idler Arm
25 #	134163400	Belt
27	131419800	Clamp,motor mtg.
28 #	131560100	Motor,main drive ,w/pulley
34	131243700	Screw,pan head ,8-18AB x 0.375 ,cr/sq drive
46	131601100	Bracket,motor mtg.
47	131633300	Seal,exhaust tube
48	131168200	Screw,pan head ,8-18B x 0.31
52	131303100	Screw,hex washer head ,10-16AB x 0.625

WIRING DIAGRAM

CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING
MISE EN GARDE: METTRE HORS TENSION AVANT D'EFFECTUER TOUTE MESURE D'ENTRETIEN.
PRECAUCION: DESCONECTAR LA CORRIENTE ELECTRICA ANTES DE DAR SERVICIO A LA SECADORA.

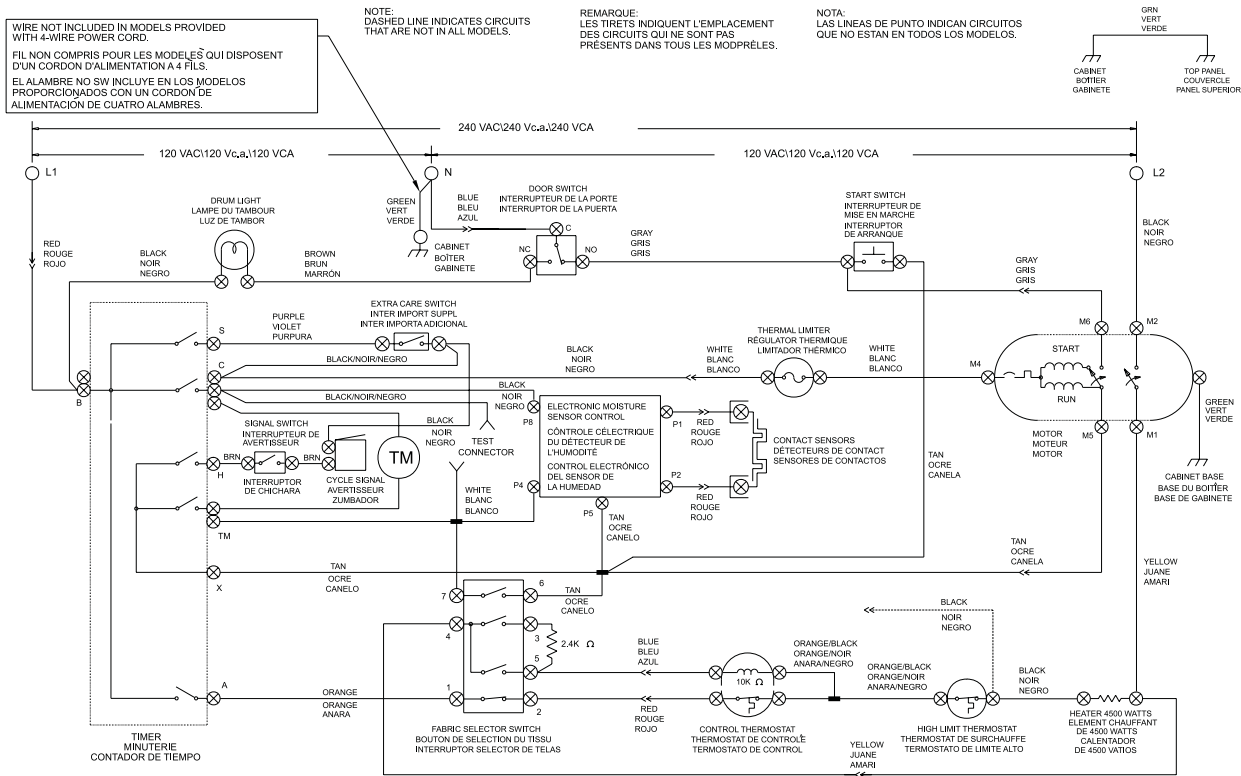


WIRING CODES	CODES DE CÂBLAGE	CODIGOS DE ALAMBRADOS
QUICK DISCONNECT TERMINAL	BORNE A DORNE (BRANCHEMENT RAPIDE)	TERMINAL DE DESCONEXION RAPIDA
CONNECTION	CONNEXION	CONEXION
NO CONNECTION	AUCUNE CONNEXION	SIN CONEXION
MOTOR SWITCH	INTERRUPTEUR DU MOTEUR	INTERRUPTEUR DEL MOTOR
SPLICE	EPISSURE	EMPALME
MOTOR PROTECTOR	PROTECTEUR DU MOTEUR	PROTECTOR DEL MOTOR
CHASSIS (CABINET) GROUND	MISE A LA TERRE DU BOMISE TIER	PUESTA A TIERRA DEL CHASSIS (GABINETE)
SCREW TERMINAL	BORNE A VIS	BORNE DE TORNILLO
HARNESS CONNECTOR TERMINAL	BORNE A CONNECTEUR DE HARNAIS	TERMINAL CONECTOR DE CONEXIONADO
INSULATED TERMINAL	BORNE ISOLEE	TERMINAL AISLADO

FABRIC SELECTOR SWITCH BOUTON DE SELECTION DU TISSU INTERRUPTEUR SELECTOR DE TELAS			CIRCUIT CIRCUIT CIRCUITO			
FUNCTION	FONCTION	FUNCIÓN	1-2	4-3	4-5	6-7
REGULAR	RÉGULIER	REGULAR	X	X		
MEDIUM	MOYEN	MEDIO	X	X		
LOW	FAIBLE	BAJO	X	X	X	
AIR FLUFF	DUVETAGE	ESPONNADO CON AIRE				X

NOTES:
1. ALL WIRING MUST CONFORM TO LOCAL ELECTRICAL CODES.
2. CONNECT DRYER TO A 30 AMP INDIVIDUAL BRANCH CIRCUIT.
3. TIMER SHOWN IN OFF POSITION, DOOR SWITCH CLOSED, MOTOR AT REST, THERMOSTAT CLOSED AND FABRIC SELECTOR SWITCH AT REGULAR.

REMARQUES:
1. TOUT LE CÂBLAGE DOIT RESPECTER LES CODES DE L'ELECTRICITE LOCAUX.
2. BRANCHER LA SECHUSE A UNE DERIVATION DISTINCTE DE 30 AMPERES.
3. MINUTERIE ILLUSTREE EN POSITION FERME, MINUTERIE ILLUSTRE, INTERRUPTEUR DE LA PORTE FERME, MOTEUR ARRETE, THERMOSTAT FERMARETE ET BOUTON DE SELECTION DU TISSU SUR REGULER.

NOTAS:
1. TODAS LAS INSTALACIONES ALAMBRICAS DEBEN CUMPLIR CON LOS CODIGOS ELECTRICOS LOCALES.
2. CONECTAR LA SECADORA A UN CIRCUITO DE RAMAL INDIVIDUAL DE 30 AMPERIOS.
3. EL CRONIZADOR SE MUESTRA EN POSICION APAGADO, EL INTERRUPTOR DE LA PUERTA CERRADO, EL MOTOR EN REPOSO, EL THERMOSTATO CERRADO Y EL INTERRUPTOR SELECTOR DE TELAS EN REGULAR.

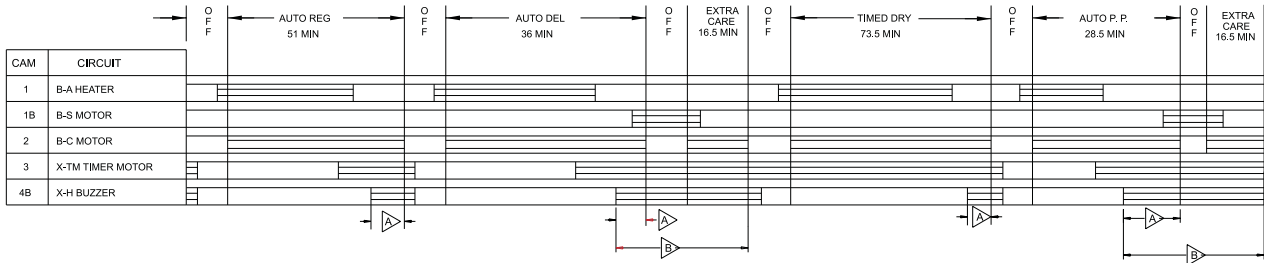

BAR CHART ABOVE REPRESENTS ONE COMPLETE REVOLUTION OF TIMER SHAFT.

SHADED PORTION OF BAR CHART INDICATES THE PROPORTIONAL TIMES THAT INTERNAL TIMER CONTACTS ARE CLOSED.

A PULSAR CAM, LOCATED NEXT TO THE BUZZER CAM AND ROTATING AT 12 REVOLUTIONS PER HOUR, ALLOWS CIRCUITS "X-H" TO CLOSE FOR 5 SECONDS (±3 SECONDS).

1 OR 2 TIMES IN THIS AREA
 5 TO 7 TIMES IN THIS AREA

LE DIAGRAMME SUR LA GAUCHE REPRESENTE UNE ROTATION COMPLETE DE L'ARBRE DE LA MINUTERIE.

LA PARTIE OMBREEE DU DIAGRAMME INDIQUE LE TEMPS RELATIF PENDANT LEQUEL LES CONTACTS INTERNES DE LA MINUTERIE SONT FERMES.

UNE CAME D'IMPULSION SITUÉE À CÔTÉ DE LA CAME DE L'AVERTISSEUR ET TOURNANT À RAISON DE 12 TOURS À L'HEURE PERMET AU CIRCUIT <<X-H>> DE SE FERMER PENDANT 5 SECONDES (±3 SECONDES).

1 OU 2 FOIS DANS CETTE SECTION
 DE 5 À 7 FOIS DANS CETTE SECTION

EL GRAFICO DE BARRAS DE LA IZQUIERDA REPRESENTA UNA REVOLUCION COMPLETA DEL EJE DEL CRONIZADOR.

LA PORCION SOMBREADA DEL GRAFICO DE BARRAS INDICA LOS TIEMPOS PROPORCIONALES QUE LOS CONTACTOS INTERNOS DEL CRONIZADOR ESTAN CERRADOS.

UNA LEVA GENERADORA DE IMPULSIONES, UBICADA JUNTO A LA LEVA DEL ZUMBADOR Y GIRANDO A 12 REVOLUCIONES POR HORA, PERMITE QUE EL CIRCUITO "X-H" SE CIERRE DURANTE 5 SEGUNDOS (±3 SEGUNDOS).

1 Ó 2 VECES EN ESTA AREA
 5 A 7 VECES EN ESTA AREA

WIRING DIAGRAM
SCHÉMA DE CÂBLAGE
DIAGRAMA DE CONEXIONES
134064800