

Viking Range, LLC
111 Front Street
Greenwood, Mississippi 38930 USA
(662) 455-1200

For product information,
call 1-888-(845-4641)
or visit the Viking Web site at vikingrange.com in the U.S. or brigade.ca in Canada.



Installation Guide

NKVGR Natural Conversion Kit
for 700 Series Ranges/Rangetops

Warnings..... 3

Kit Contents..... 3

Regulator Conversion..... 4


Infrared Broiler Conversion..... 5


Surface Burner Conversion..... 6

Griddle Conversion 8

Oven Bake Burner Conversion 9

Rating Label locations 10


**WARNING**


**FIRE/EXPLOSION HAZARD**
If the information in this guide is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.


WHAT TO DO IF YOU SMELL GAS:


- DO NOT** try to light any appliance.
- DO NOT** touch any electrical switch.
- DO NOT** use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

**CAUTION**

Be sure the electric power is turned off at the breaker box while the unit is being converted.

**CAUTION**

Before placing the appliance into operation, always check for gas leaks with a soapy water solution or other acceptable method. **DO NOT** use an open flame to check for leaks.


Natural Orifice Conversion Kit Contents

Description	Part Number	Size	Quantity
Front Surface Burners	In bag 050300-000	#44 (2.18 mm)	4
Rear Center/Right Rear Surface Burners	In bag 050300-000	#51 (1.70 mm)	3
Left Rear Surface Burner	In bag 050300-000	.048" (1.22mm)	1
Main Oven Burner	050279-000	#39	1
Left Oven (48" only) / Griddle Burner	050288-000	#50	2
Infrared Broiler Burner	050287-000	#48	1
Front Surface Burner Venturi	050576-000		4
Conversion label	PF030377		1
NKVGR Conversion Instructions	F21389		1


NOTE: Depending on the model being converted, some of the orifices may not be used.

Regulator Conversion


- Remove hex nut from top of regulator.
 - Unsnap plastic plunger from hex nut.
 - Reverse plunger and reinstall onto hex nut by pressing firmly.
- NOTE:** Plunger is marked "NAT" or "LP".
Converted fuel type will be shown on the lower portion of plunger.
- Reinstall hex nut onto regulator in configuration desired.

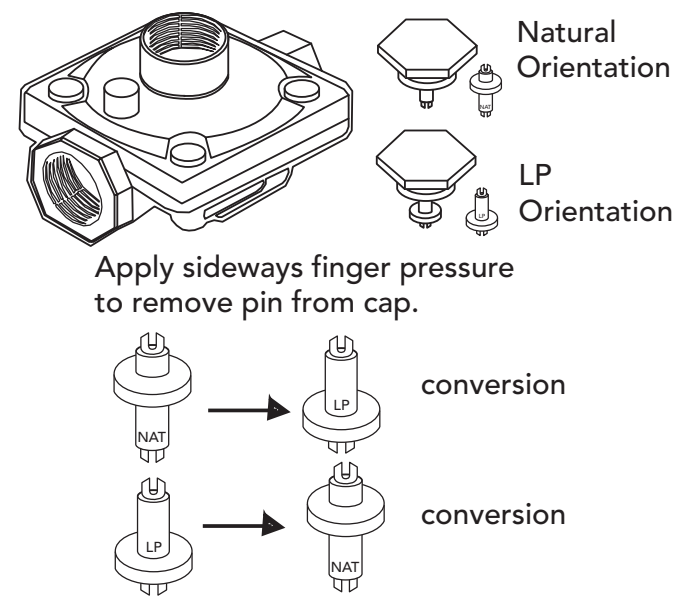

NOTE: VGR748 models have two regulators. Make sure both regulators are converted. To access second regulator, the island trim and small panel on the back must be removed

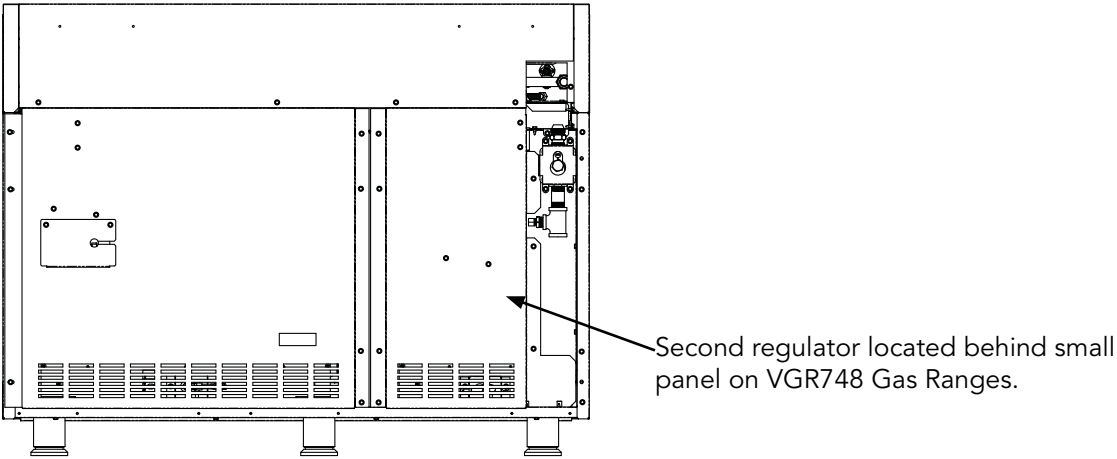


Infrared Broiler Conversion

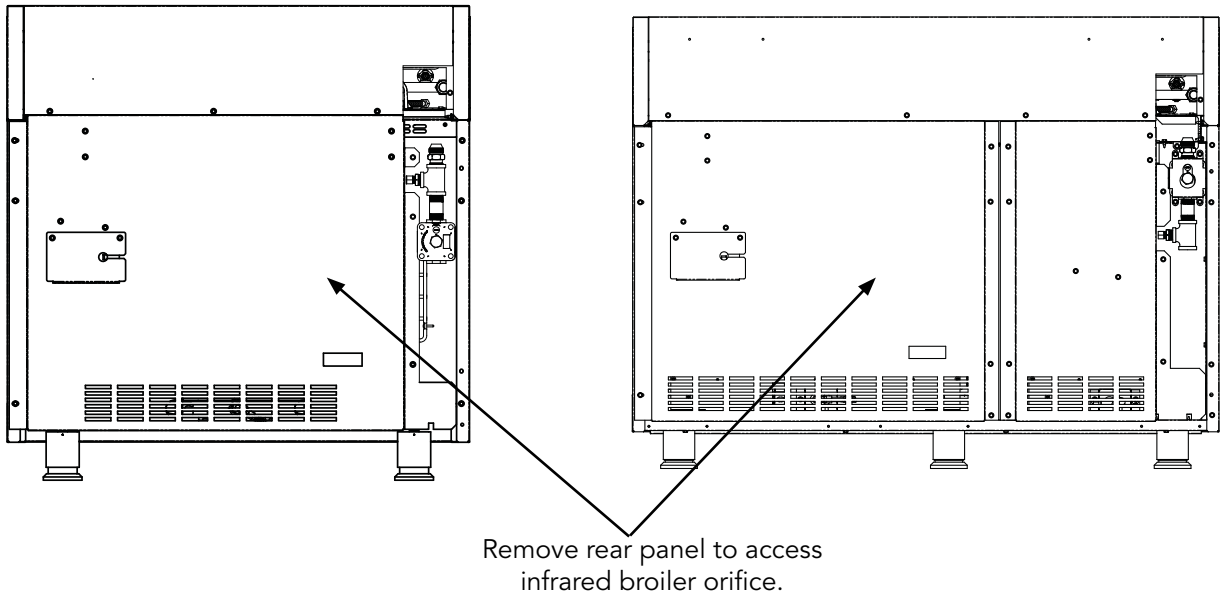

IMPORTANT: The infrared broiler orifice must be changed from rear of range before unit is installed. The island trim and rear panel must be removed to access infrared broiler.

- Locate bag labeled 050287-000
- Remove nut securing 90 degree fitting and broiler tubing to rear of range.
- Remove orifice from 90° fitting and replace with orifice #48 from the bag labeled 050287-000.

Reverse procedure to reassemble.

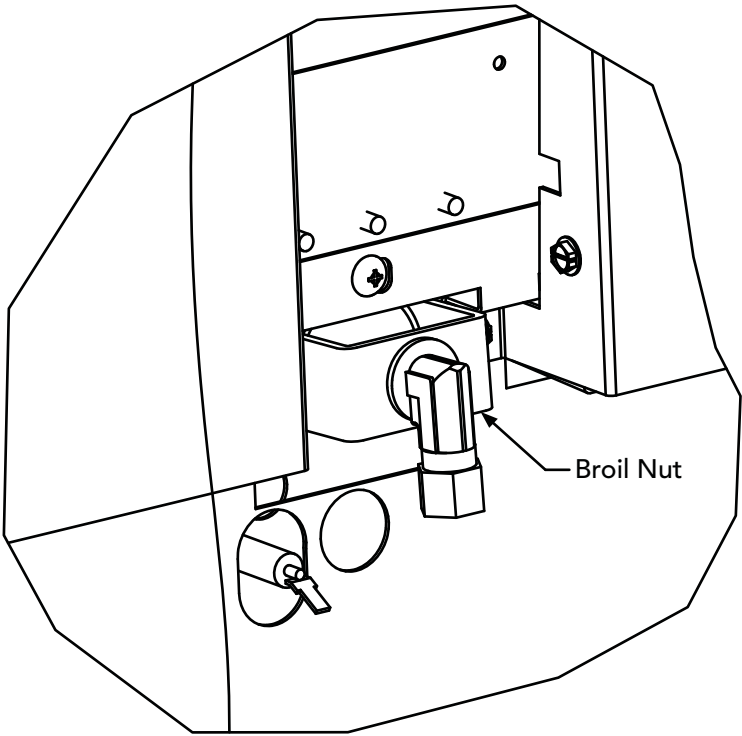

Surface Burner Conversion

Preparing for Top Surface Conversion

Remove all grates, grate supports, surface burner caps, and griddle
NOTE: Some models may not be equipped with all parts mentioned above.


IMPORTANT: For models equipped with griddles, notice position of griddle temperature probe for proper reinstallation. Failure to properly reinstall could result in damage to griddle temperature probe.

Front Surface Burner Conversion

- Locate bag labeled 050300-000
- Remove screws (Item #1) with a T-20 Torx bit.
- Remove venturi flange (Item #2).
- Use a metric 10mm nut driver to remove orifice (Item #3).
- Replace orifice with #44 from 050300-000 bag. The orifice will have a violet color code ink and 086 stamped on the orifice.

Tech tip: Tape can be applied to the inside of the socked to assist in the removal of the surface burner orifices. This can prevent the orifices from falling into the range during removal.

- After replacing the orifice, replace Item#2 venturi flange with Natural venturi flange labeled 050576-000. Note orientation of venturi flange (refer to Top view of Venturi flange).
- Reinstall screws and reverse procedure to reassemble.

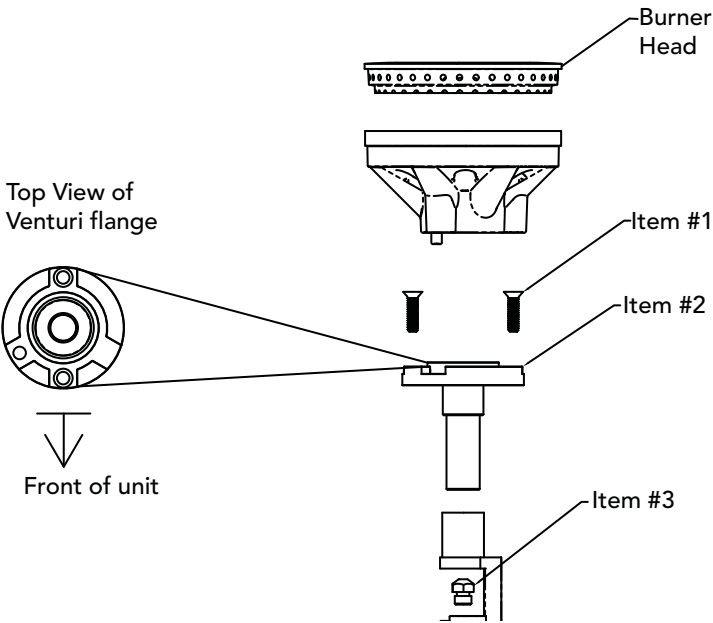


NOTE: For proper placement of the burner head, rotate until burner head seats into groove.

Rear Surface Burner Conversion

- Locate bag labeled 050300-000
- Remove screws (Item #1) with a T-20 Torx bit.
- Remove venturi flange (Item #2).
- Use a metric 10mm nut driver to remove orifice (Item #3).
- Replace left rear orifice with .048" from 050300-000 bag. The orifice will have a dark green color code ink and 048 stamped on the orifice.
- Replace all other rear orifices with #51 from 050300-000 bag. The orifice will have a yellow color code ink and 067 stamped on the orifice.

Tech tip: Tape can be applied to the inside of the socked to assist in the removal of the surface burner orifices. This can prevent the orifices from falling into the range during removal.

- After replacing the orifice, reinstall the current Item#2 venturi flange (it will not be replaced). Note orientation of venturi flange (refer to Top view of Venturi flange).
- Reinstall screws and reverse procedure to reassemble.

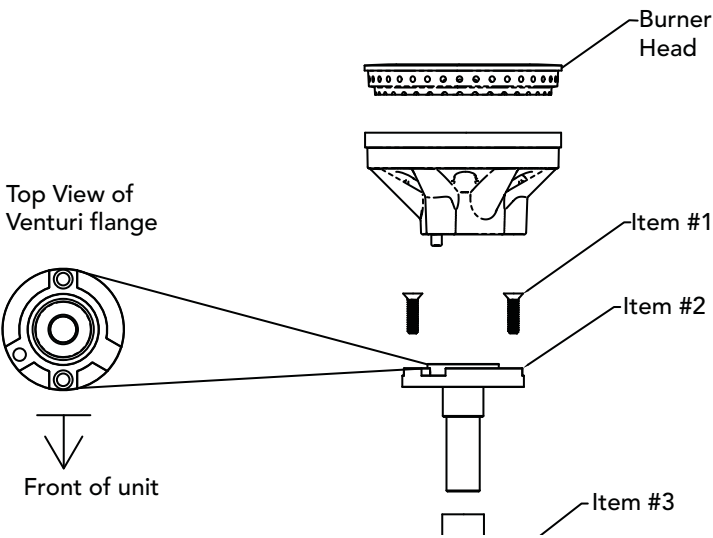


NOTE: For proper placement of the burner head, rotate until burner head seats into groove.


Surface Burner Conversion

- Burner A #44 (2.18 mm)
- Burner B #51 (1.70 mm)
- Burner C .048" (1.22 mm)

36" Surface Burner Orifice Locations

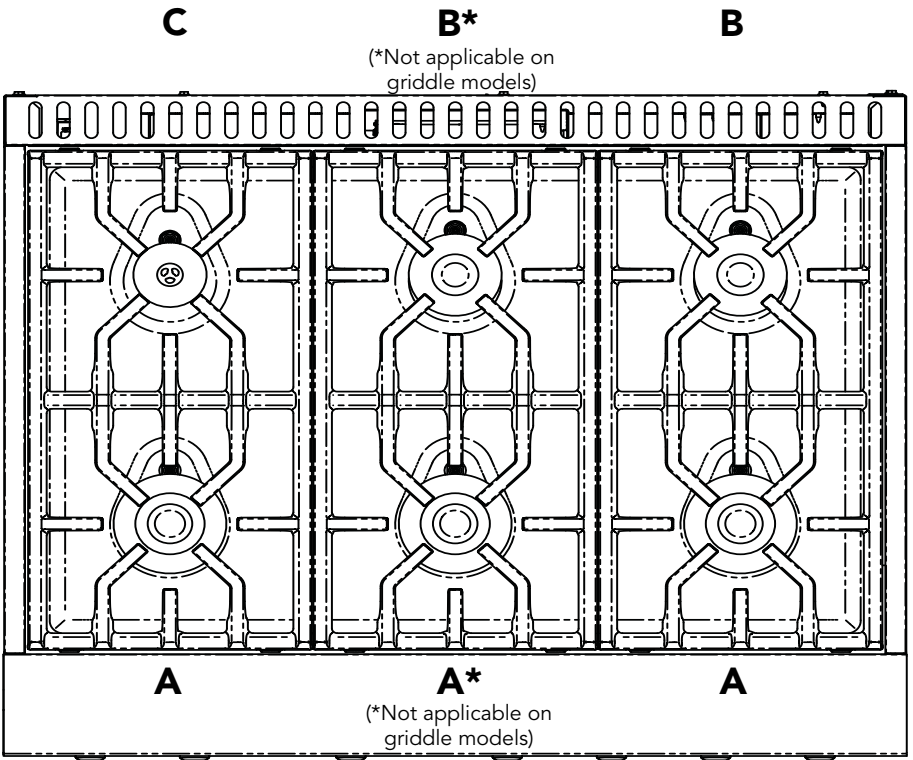


48" Surface Burner Orifice Locations

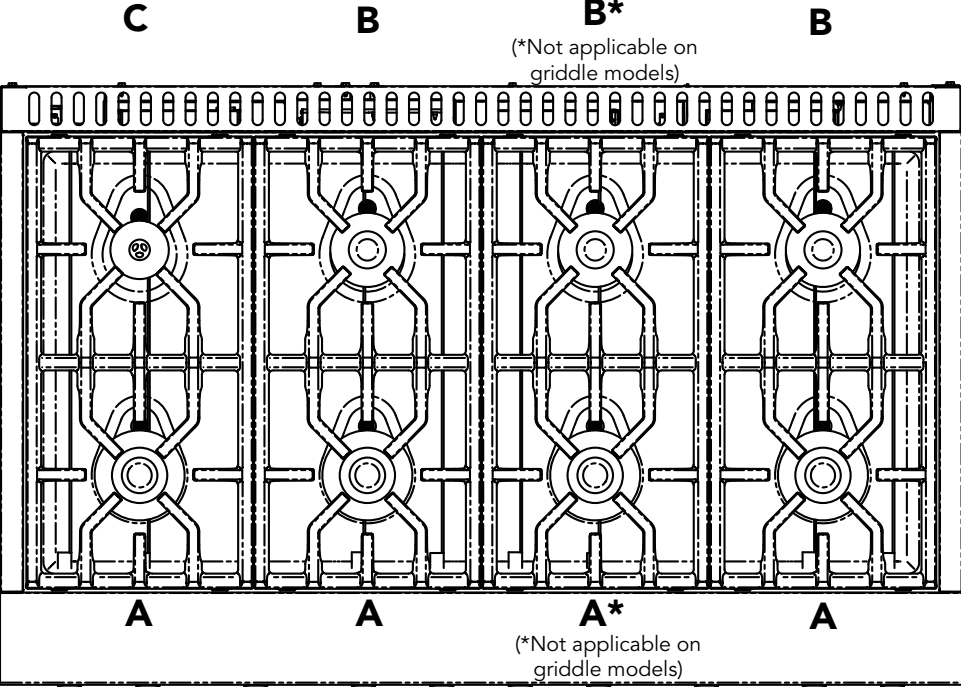

- Burner A #44 (2.18 mm)
- Burner B #51 (1.70 mm)
- Burner C .048 (.1.22 mm)

Griddle Conversion (for models equipped with a griddle)

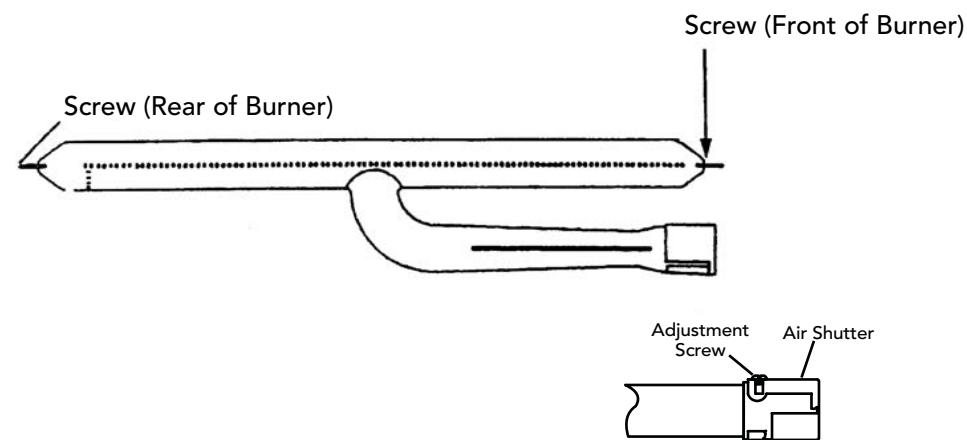


- Locate bag labeled 050288-000.
- Remove griddle.
- Remove screws securing griddle burner to burner box.
- Loosen air shutter screw and adjust opening on burner to 7/16" and tighten air shutter screw.-
- Use a 1/2" deep socket wrench to remove orifice by turning counterclockwise.
- Install orifice (#50) from bag labeled 050288-000.

IMPORTANT: The orifice tip must be located 3/16" inside the burner for proper gas mixture and combustion. The depth of the orifice can be adjusted by turning the orifice counterclockwise (more depth) or clockwise (less depth).

Reverse procedures as needed to reassemble.

Oven Bake Burner Conversion

36" W. Oven and 48" W. Right Hand Oven Bake Burner

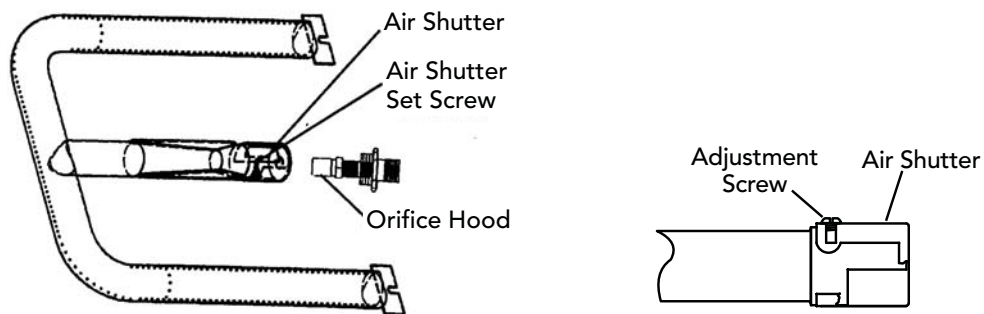


- Remove oven racks.
- Remove oven bottom.
- Remove screws securing bake burner to oven burner box.
- Loosen air shutter screw and adjust opening on burner to 3/8" (.95 cm) and tighten air shutter screw.
- Remove orifice by turning counter-clockwise and replace with orifice (#39) from bag labeled 050279-000.

IMPORTANT: The orifice tip must be located 3/16" inside the burner for proper gas mixture and combustion. The depth of the orifice can be adjusted by turning the orifice counterclockwise (more depth) or clockwise (less depth).

Reverse procedures as needed to reassemble.

48" W. Left Hand Oven Bake Burner

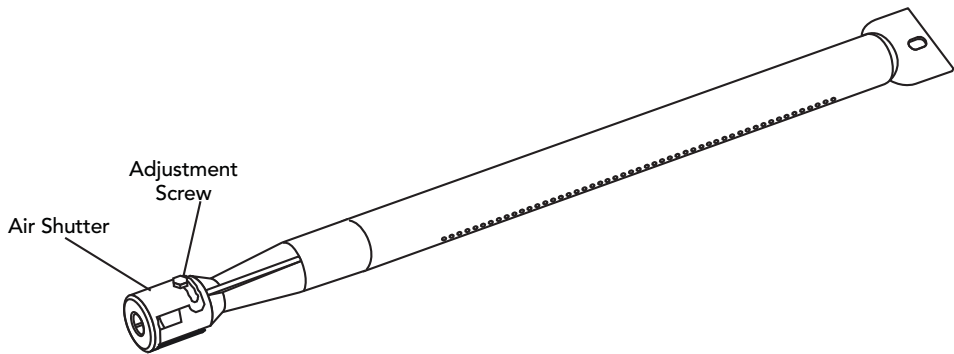

- Remove oven racks.
- Remove oven bottom.
- Remove screws securing bake burner to oven burner box.
- Loosen air shutter screw and adjust opening on burner to 3/8" (.95 cm) and tighten air shutter screw.
- Remove orifice by turning counter-clockwise and replace with orifice (#50) from bag labeled 050288-000.

IMPORTANT: The orifice tip must be located 3/16" inside the burner for proper gas mixture and combustion. The depth of the orifice can be adjusted by turning the orifice counterclockwise (more depth) or clockwise (less depth).

Reverse procedures as needed to reassemble.

Rating Label Location

When the Natural conversion is complete, complete the enclosed conversion label and place it next to the rating label.

This appliance was converted on _____ day-month-year to

☐ Nat. or ☐ LP gas

by: _____

(name and address of organization making the conversion), which
accepts the responsibility that this conversion has been properly
made .

PF000377

The rating label is located under the control panel.

