



Read and Save These Instructions

All Hoods Must Be Installed By A Qualified Installer

INSTALLATION INSTRUCTIONS WALL MOUNT LINER INSERT

Read All Instructions Thoroughly Before Beginning Installation

**WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK,
OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:**

- A. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. Switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally during installation.**
- B. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.**
- C. Ducted fans must always be vented to the outdoors.**
- D. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and local code authorities.**

**WARNING - TO REDUCE THE RISK OF FIRE, USE ONLY METAL
DUCTWORK**



Ducting Do's and Don'ts

NEVER restrict the duct size. The single blower unit (B100) requires 6" round duct or equivalent (28 square inches), and the dual blower unit (B200) requires 8" round duct or equivalent (50 square inches). When combining ducts together, the square inch area must reflect the total square inch area of the ducts being combined. Using Vent-A-Hood transitions (back page) will ensure proper efficiency.


Blower	Duct Size	Sq. Inch Area	Vent-A-Hood Transition
Single (B100)	6" round or equivalent	28"	N/A
Dual (B200)	8" round or equivalent	50"	N/A
Single and Dual (B100 & B200)	10" round or equivalent	79"	VP562 (Optional)
Two Dual (Two B200s)	12" round or equivalent	113"	VP563 (Optional)

Do not use flexible or corrugated duct. This type of duct will restrict airflow and reduce performance. Only use smooth, galvanized, metal duct. Observe local codes regarding special duct requirements and placement of duct against combustibles. Make the duct run as short and as straight as possible with as few turns as possible. Avoid sharp-angled turns. Instead, use smooth, gradual turns such as adjustable elbows or 45 degree angled turns. For duct runs over 20 feet, increase the duct diameter by one inch for every ten feet of duct. A 90 degree elbow is equal to 5 feet of duct. Using Vent-A-Hood roof jacks or wall louvers (back page) will ensure proper efficiency. Airflow must not be restricted at the end of the duct run. Do not use screen wire or spring-loaded doors on wall louvers or roof jacks. Do not terminate venting into an attic or chimney. Where possible, seal joints with duct tape. The hood must be ducted to the outdoors without restrictions.


YES



Smooth Duct

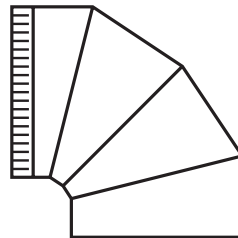


Smooth Gradual Turn

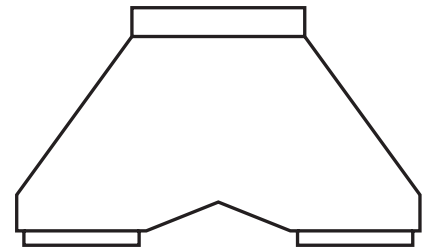


Proper Combining
of Two Ducts


NO

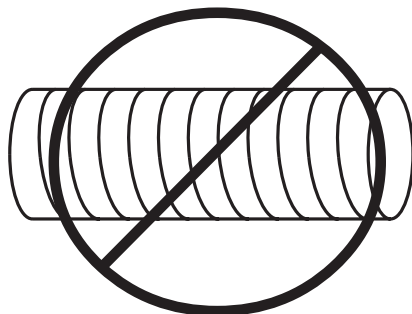

Flexible Duct

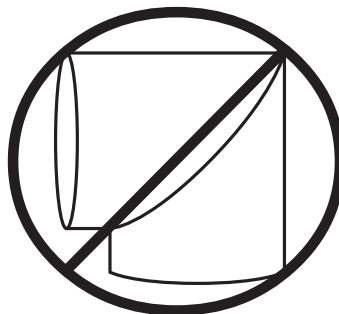

Sharp Angled Turns

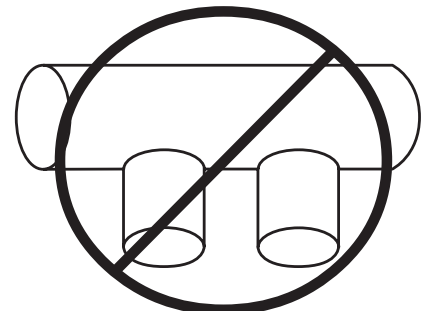


Improper Combining
of Two Ducts



Installation Details

- 1) Read all instructions thoroughly before beginning installation. Note: These instructions apply to standard liners only. Custom liners may require additional specification consideration.
- 2) When installing a BHSLD wall mount liner (19 1/4" deep), it is recommended that the bottom edge of the liner be located no more than 24" - 27" from the cooking surface. For BHPSLD and BHPSLB wall mount liners (22 1/2" deep), it is recommended that the bottom edge of the liner be located no more than 27" - 30" from the cooking surface. For custom liners, the recommended height off the cooking surface is dependent on the depth of the liner. In general, the deeper the custom liner, the higher off the cooking surface it can be, up to a maximum recommended height of 30". Exceeding recommended mounting height may compromise performance.

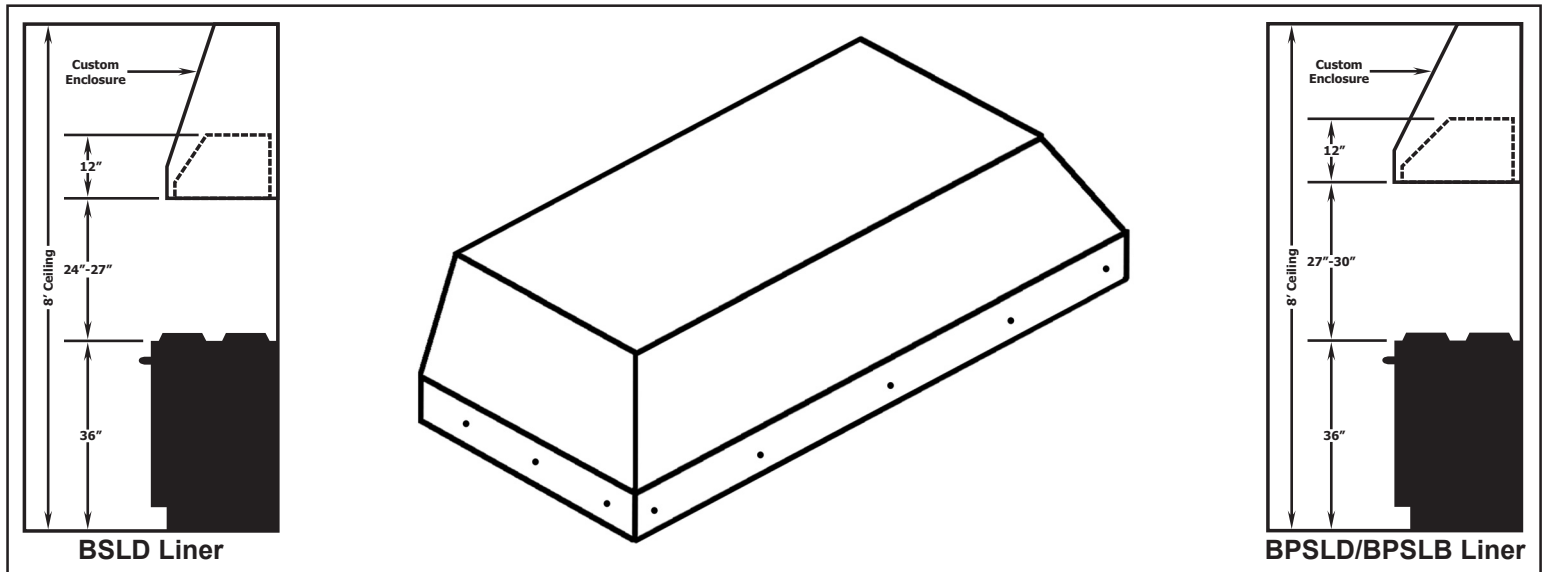

- 3) Install the duct(s) from the outside of the home down to the location of the exhaust outlet(s) on the top of the liner allowing room for the transition (if applicable). If back venting, the elbow(s) should be installed so that the non-crimped end(s) are on the inside the collar(s) of the exhaust outlet(s). If a transition is used, install duct down to the location of the transition outlet plus 1". This will allow the transition to engage 1" inside of duct. Consult the connection diagrams (next page) for further details on exhaust outlet placement.

Use duct tape to seal all joints. A complete listing of available Vent-A-Hood ducting materials is included on the back page of this instruction sheet.

Transition heights are as follows:

Single Blower (B100):

6" round duct will connect directly to the top of the liner.

Dual Blower (B200):

8" round duct will connect directly to the top of the liner.

Single and Dual Blower (B100 & B200):

6" round duct will connect directly to the top of the hood; 8" round will connect directly to the top of the hood. Optional 10" round combination transition (VP562, sold separately) is 17 1/2" tall.


Two Dual Blowers (Two B200s):

Two 8" rounds connect directly to the top of the hood. Optional 12" round combination transition (VP563, sold separately) is 16 1/2" tall.




Installation Details Continued

Connection Diagram 28 3/8" - 40 3/8" Widths

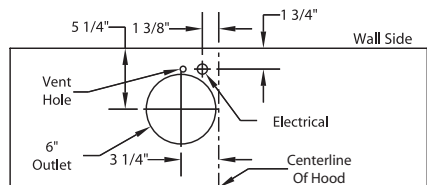


**300 CFM B100 Single Blower
(Top View)**

Connection Diagram 28 3/8" - 52 3/8" Widths

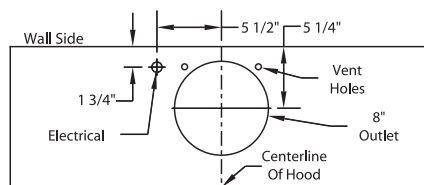


**600 CFM B200 Dual Blower
(Top View)**

Connection Diagram 46 3/8" - 58 3/8" Widths

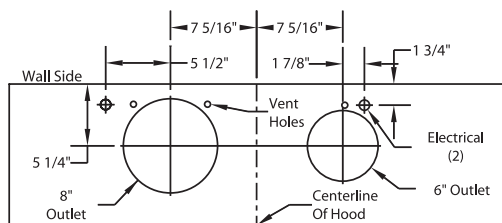


**900 CFM B200 Dual & B100 Single Blower
(Top View)**

Connection Diagram 46 3/8" - 64 3/8" Widths

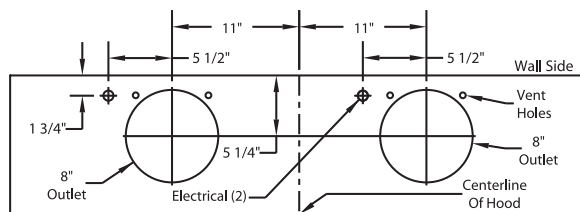


**1200 CFM Double B200 Dual Blowers
(Top View)**

- 5) Remove the hood from its packaging and place the back of the hood on the floor or countertop in front of the wall where it will hang.
- 6) Remove the blower shield(s) (A) by loosening the two brass screws on the bottom of the shield(s). Gently close the back draft damper(s) from the top side of the hood. To remove the blower housing(s), unsnap the suitcase latches (B) (one on each side of the housing). The housing(s) should be pulled forward and gently "tipped" to clear the blower wheel(s) and then out of the hood.

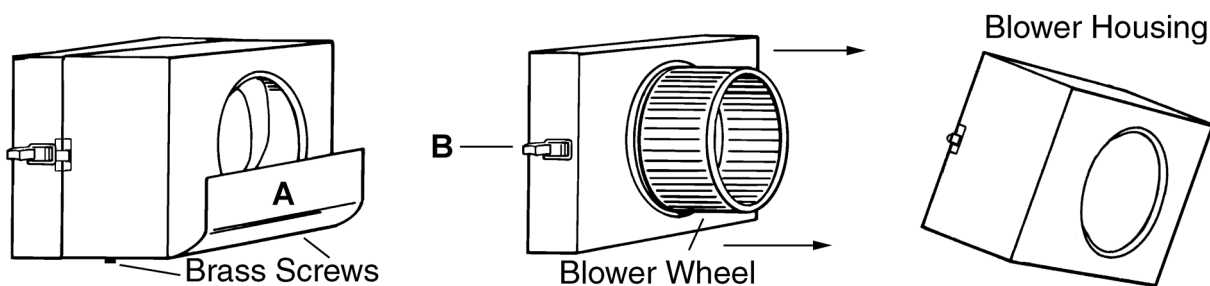

- 7) Remove the three screws retaining the blower motor(s). Unplug and remove the motor(s), taking care not to damage the blower wheel(s). It is not necessary to remove the blower wheel from the motor.

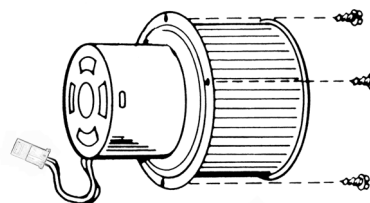

Warning: Make sure power is off and locked at the service disconnecting means on the service panel during installation.



Installation Details Continued

- 7) Install an appropriate 1/2" UL listed electrical wire clamp through each motor box electrical opening on top of the liner. Install electrical wiring from the service panel to the liner location for each motor box. Consult the connection diagrams (on previous page) for further details on electrical placement.

Model	Volts	Amps*	RPM	CFM SP@0.0"	Equivalent CFM#	CFM SP@0.1"	CFM SP@0.2"	CFM SP@0.3"	Minimum Round Duct Size	Square Inches
B100 Single	115	1.7	1550	300	450	286	270	240	6" (or equivalent)	28
B200 Dual	115	3.4	1550	600	900	572	540	480	8" (or equivalent)	50

* Note: Add 2.5 amps for each warming light and 0.5 amp for each halogen light.

Because the Magic Lung™ uses centrifugal filtration rather than conventional baffle or mesh filters, the Magic Lung™ blower can handle cooking equipment with higher cubic feet per minute (CFM) requirements and can deliver equivalent CFM much more efficiently than other than other filtration systems. When comparing the Magic Lung™ with other blower units made by other manufacturers, use the "Equivalent CFM".

- 8) Extend wires to the liner and insert them into the electrical wire clamp on each motor box. Tighten the wire clamp(s). From inside the liner, using UL listed wire nuts, attach the "neutral" wire(s) to the white lead(s), the "hot" wire(s) to the black lead(s), and the ground wire(s) to the green lead(s) inside the motor box(es).

Warning: Do not operate hood without proper ground connection.


- 9) While aligning the duct and guiding the wires, lift the liner up into the enclosure flushing the bottom edges of the liner and the enclosure. Duct should connect together as the liner is raised into place. Note: The duct work must fit inside the exhaust collar.

- 10) Install a wood screw with a countersunk washer and a flat washer into each back and side mounting hole along the bottom edge of the liner. Only install wood screws into the front mounting holes along the bottom edge of the liner. Note: The hardware used in this step can be found in the liner trim kit that was previously removed from the packaging in Step 4.

- 11) Install the trim piece for the back side of the liner (provided in the liner trim kit) by hooking one side under the bottom edges of the back countersunk washers. Snap the trim piece over the top of the countersunk washers by applying pressure upward and toward the liner wall. Repeat this process for the side trim pieces (provided in the liner trim kit). Note: It may be necessary to lightly tap the trim piece with a rubber mallet.

VentA Hood


Liner Trim Kit

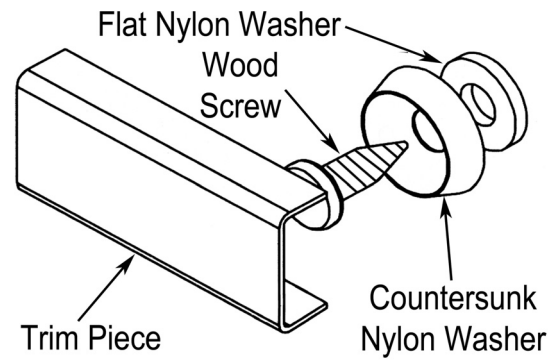

- 12) Plug the motor(s) into the liner and reinstall the blower motor retaining screws that were previously removed in Step 6.
- 13) Replace the blower housing(s) and the blower shield(s). Make sure that the damper(s) open and close smoothly.
- 14) Refer to the Owner Maintenance Guide Operating Instructions for proper hood operation. Test all blower and light functions to ensure they are operating properly.


VENTING *Vent-A-Hood*® ACCESSORIES

WALL LOUVER




MODEL	DIM
VP526	6" RD
VP527	7" RD
VP528	8" RD
VP538	6"x8 1/2"

WALL LOUVER




MODEL	DIM
VP554	10" RD

WALL LOUVER




MODEL	DIM
VP555	12" RD

WALL LOUVER




MODEL	DIM
VP560	3 1/4"x10"

LOW PROFILE ROOF JACK (MAXIMUM 4/12 PITCH)




MODEL	DIM
VP539	6"
VP540	7"
VP541	8"

LOW PROFILE ROOF JACK (MAXIMUM 4/12 PITCH)




MODEL	DIM
VP552	10"
VP553	12"

ADJUSTABLE ELBOW




MODEL	DIM
VP513	6"
VP514	7"
VP515	8"

BACK/SIDE VENT ELBOW

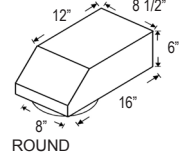


MODEL	DIM
VP561	8" - 6" x 8 1/2"

BACK VENT ELBOW

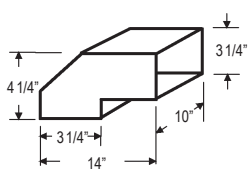


MODEL	DIM
VP559	3 1/4"x10"

MULTI-BLOWER TRANSITION

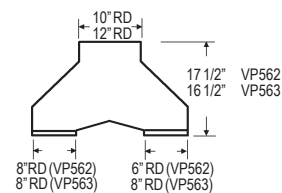


MODEL	DIM
VP562	10"
VP563	12"

"Y" TRANSITION




MODEL	DIM
VP517	8" x 8" - 12"
VP518	6" x 8" - 12"
VP551	6" x 8" - 10"

10 TO 7" TRANSITION

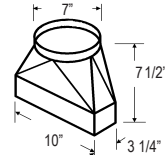


MODEL	DIM
VP521	3 1/4" x 10" - 7"

OFFSET KIT-ROUND

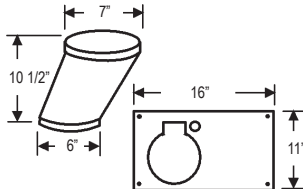


MODEL	DIM
VP529	6" TO 7"

OFFSET KIT-RECTANGLE

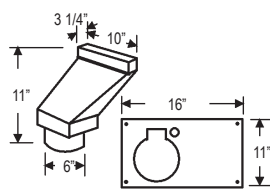


MODEL	DIM
VP550	6"-3 1/4"x10"

STANDARD ISLAND TRANSITION

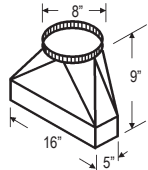


MODEL	DIM
VP565	

CLUSTER BLOWER TRANSITION

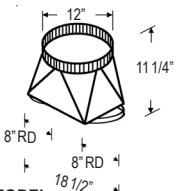


MODEL	DIM
VP564	

OFFSET L & R TRANSITION FOR ISLAND BLOWERS

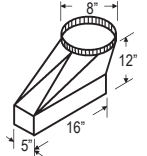


MODEL	DIM
VP542	TOP LEFT ISLAND
VP543	TOP RIGHT ISLAND

SIDE VENT TRANSITION L & R FOR ISLAND HOODS

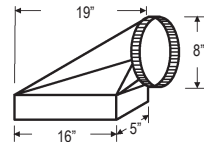


MODEL	DIM
VP544	LEFT SIDE
VP545	RIGHT SIDE

ROUND COLLAR

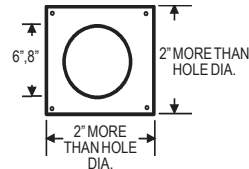


MODEL	DIM
VP533	6"
VP535	8"

COLLAR, SQUARE

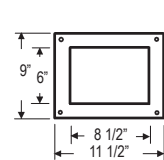


MODEL	DIM
VP537	6 x 8 1/2"

ROUND DUCT




MODEL	DIM
VP500	6"
VP501	7"
VP502	8"

3 1/4" RECTANGLE DUCT



MODEL	DIM
VP504	3 1/4" x 10"
VP505	3 1/4" x 12"
VP506	3 1/4" x 16"

6" RECTANGLE DUCT

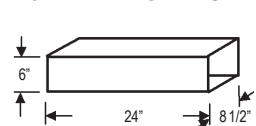

MODEL	DIM
VP507	6" x 8 1/2"